



**TELEDYNE LECROY**  
Everywhereyoulook™

# PeRT<sup>3</sup> Phoenix System

## User Manual



921515 rev A

August 2013



# TELEDYNE LECROY

Everywhere you look™

© 2012 Teledyne LeCroy, Inc. All rights reserved.

Unauthorized duplication of Teledyne LeCroy documentation materials other than for internal sales and distribution purposes is strictly prohibited. However, clients are encouraged to distribute and duplicate Teledyne LeCroy documentation for their own internal educational purposes.

PeRT3 and Teledyne LeCroy are registered trademarks of Teledyne LeCroy, Inc. Windows is a registered trademark of Microsoft Corporation. Other product or brand names are trademarks or requested trademarks of their respective holders. Information in this publication supersedes all earlier versions. Specifications are subject to change without notice.

### Warranty

THE WARRANTY BELOW REPLACES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. TELEDYNE LECROY SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT OR OTHERWISE. THE CUSTOMER IS RESPONSIBLE FOR THE TRANSPORTATION AND INSURANCE CHARGES FOR THE RETURN OF PRODUCTS TO THE SERVICE FACILITY. TELEDYNE LECROY WILL RETURN ALL PRODUCTS UNDER WARRANTY WITH TRANSPORT PREPAID.

The PeRT3 is warranted for normal use and operation, within specifications, for a period of three years from shipment. Teledyne LeCroy will either repair or, at our option, replace any product returned to one of our authorized service centers within this period. However, in order to do this we must first examine the product and find that it is defective due to workmanship or materials and not due to misuse, neglect, accident, or abnormal conditions or operation.

Teledyne LeCroy shall not be responsible for any defect, damage, or failure caused by any of the following: a) attempted repairs or installations by personnel other than Teledyne LeCroy representatives or b) improper connection to incompatible equipment, or c) for any damage or malfunction caused by the use of non-Teledyne LeCroy supplies. Furthermore, Teledyne LeCroy shall not be obligated to service a product that has been modified or integrated where the modification or integration increases the task duration or difficulty of servicing the instrument. Spare and replacement parts, and repairs, all have a 90-day warranty.

The instrument's firmware has been thoroughly tested and is presumed to be functional. Nevertheless, it is supplied without warranty of any kind covering detailed performance. Products not made by Teledyne LeCroy are covered solely by the warranty of the original equipment manufacturer.

921515 revA  
August 2013

# Contents

---

<b>Chapter 1: Safety Instructions .....</b>	<b>7</b>
Symbols.....	7
Precautions .....	7
Operating Environment.....	8
Cooling .....	8
Cleaning.....	8
Calibration .....	9
Power .....	9
Power Consumption.....	9
8-BIT MODELS: .....	9
12-BIT MODELS: .....	9
Power and Ground Connections.....	9
Standby Power .....	10
<b>Chapter 2: Overview.....</b>	<b>11</b>
System Configurations .....	12
Software Test Suites .....	12
Upgrades and Maintenance .....	13
Connection to Device Under Test .....	13
<b>Chapter 3: Quick Start Guide .....</b>	<b>15</b>
Introduction.....	15
Requirements for the Host Machine .....	16
Front Panel Connections .....	16
Back Panel Connections.....	17
Initial System Setup .....	17
Connecting to the PeRT3 Phoenix.....	19
Overview of Connection .....	19
Steps to Connect .....	20

Main Tab .....	21
PeRT3 Selection Panel .....	22
Connecting the Device Under Test .....	23
Selecting and Running a Test .....	24
Modifying a Test .....	26
Testing a DUT .....	26
Run Test Scripts .....	31
Run Test Patterns .....	32
<b>Chapter 4: Basic Principles of Operation .....</b>	<b>33</b>
Introduction of Stress into Waveform .....	34
De-Emphasis and Pre-shoot.....	34
Random Jitter .....	35
Periodic Jitter .....	36
Differential Mode Noise .....	36
Common Mode Noise .....	37
<b>Chapter 5: Software Overview .....</b>	<b>39</b>
Starting the PeRT3 Program.....	39
Main Application Window .....	40
Main Library Window.....	41
File Menu .....	42
New .....	43
Import... ..	43
Export... ..	44
Print .....	45
Exit.....	45
<b>Chapter 6: Manual Testing .....</b>	<b>47</b>
System Control Ribbon - Main Tab.....	47
Master Controls .....	47
PeRT3 Selection .....	48
Configuration .....	49
Protocol: .....	49
Speed: .....	49
SSC: .....	50
Clock Out: .....	50
DUT Initialization .....	50
DUT Status .....	52
System Control Ribbon -- Channel Tabs.....	52
Master Controls .....	53

<b>Signal Generation and Introduction of Distortion .....</b>	<b>53</b>
Overview of Signal Impairment Controls .....	53
Signal .....	57
De-Emphasis .....	57
Random Jitter .....	58
High Frequency Sinusoidal Jitter .....	59
Low Frequency Sinusoidal Jitter .....	59
Pattern/Termination .....	60
Eye Preview .....	62
<b>System Control Ribbon -- Analysis Tab .....</b>	<b>62</b>
<b>System Control Ribbon -- Pattern Tab.....</b>	<b>63</b>
<b>System Control Ribbon -- Options Tab .....</b>	<b>63</b>
Default Settings .....	63
Pattern Checking .....	63
External Options.....	64
Rx DFE.....	65
External Jitter.....	66
Clock Out.....	66
Diagnostics .....	66
View .....	67
 <b>Chapter 7: Main Library Window .....</b>	 <b>69</b>
Main Library Toolbar Buttons .....	70
The Filter Function .....	71
 <b>Chapter 8: Creating a New Test Script.....</b>	 <b>73</b>
Editing an Existing Script:.....	74
<b>Starting a New Test Script .....</b>	<b>75</b>
<b>Test Script Data Block.....</b>	<b>76</b>
Basic Data .....	77
Test Description .....	77
Device Description .....	77
<b>Building a Test Script Block-by-Block.....</b>	<b>78</b>
<b>Reset/ Initialize Block.....</b>	<b>78</b>
Setup.....	78
Initialization.....	79
Automation.....	79
<b>Receiver Test Case Block.....</b>	<b>80</b>
<b>Adding, Inserting and Deleting Test Cases.....</b>	<b>80</b>

<b>Chapter 9: Creating Test Patterns .....</b>	<b>83</b>
<b>Creating a New Test Pattern .....</b>	<b>83</b>
Pattern Editor Tab Controls.....	85
Master Controls .....	85
Display Mode .....	85
Standard Edit .....	87
Pattern Edit .....	87
Import/Export .....	88
View Info .....	88
Notifications .....	88
Adding Frames to Patterns.....	89
Adding Data to Patterns.....	91
Modifying Data Within a Pattern .....	92
<b>Chapter 10: Analysis and Reports.....</b>	<b>93</b>
<b>System Control Ribbon -- Analysis Tab .....</b>	<b>93</b>
Master Controls .....	94
Graph Type.....	94
Graph Axes .....	94
Data Ch1-4.....	95
Signal Parameters .....	95
Tools .....	96
<b>Analysis Graph Types .....</b>	<b>96</b>
Log View.....	97
Spreadsheet View .....	98
Errors vs. Time .....	99
Single Parameter .....	100
Multi Single Parameter .....	101
Scatter Chart .....	101
Adding a Spec Line in a Chart .....	102
<b>Chapter 11: Control of Screen Appearance.....</b>	<b>103</b>
<b>Customizing the Quick Access Toolbar .....</b>	<b>103</b>
Quick Access Toolbar Buttons .....	104
<b>The System Control Ribbon .....</b>	<b>107</b>
<b>Customizing the Main Library and Output Windows .....</b>	<b>108</b>
<b>Selecting the Style Color Theme.....</b>	<b>110</b>

**Appendix A: Certifications ..... 111**

**EMC Compliance ..... 111**

    EC DECLARATION OF CONFORMITY - EMC .....111

        Electromagnetic Emissions: ..... 111

        Electromagnetic Immunity: ..... 111

        European Contact: ..... 112

    AUSTRALIA & NEW ZEALAND DECLARATION OF CONFORMITY - EMC .....112

        Australia / New Zealand Contacts: ..... 112

**Safety Compliance..... 112**

    EC DECLARATION OF CONFORMITY - LOW VOLTAGE .....112

    U.S. NATIONALLY RECOGNIZED AGENCY CERTIFICATION .....113

    CANADIAN CERTIFICATION.....113

**Environmental Compliance ..... 113**

    END-OF-LIFE HANDLING ..... 113

    RESTRICTION OF HAZARDOUS SUBSTANCES (ROHS) ..... 114

    ISO Certification .....114

**Appendix B: Contact Teledyne LeCroy..... 115**

**How to Contact Teledyne LeCroy ..... 115**

**Index:..... 117**





# Chapter 1



 


## Safety Instructions

---

This section contains instructions that must be observed to keep the instrument operating in a correct and safe condition. You are required to follow generally accepted safety procedures in addition to the precautions specified in this section. The overall safety of any system incorporating this instrument is the responsibility of the assembler of the system.

### Symbols

These symbols appear on the instrument's front or rear panels and in its documentation to alert you to important safety considerations.

	<b>CAUTION</b> of potential damage to instrument, or <b>WARNING</b> of potential for bodily injury. Attend to the accompanying information to protect against personal injury or damage. Do not proceed until conditions are fully understood and met.
	High voltage. Risk of electro-shock.
	Measurement ground connection.
	Safety (protective) ground connection.
	Alternating Current.

### Precautions

**Use proper power cord.** Use only the power cord shipped with this instrument and certified for the country of use.

**Maintain ground.** This product is grounded through the power cord grounding conductor. To avoid electric shock, connect only to a grounded mating outlet.

**Connect and disconnect properly.** Do not connect/disconnect probes or test leads while they are connected to a voltage source.

**Observe all terminal ratings.** Do not apply a voltage to any input that exceeds the maximum rating of that input. Refer to the front of the instrument for maximum input ratings.

**Use only within operational environment listed.** Do not use in wet or explosive atmospheres.

**Use indoors only.**

**Keep product surfaces clean and dry.**

**Do not block the cooling vents.** Leave a minimum six-inch (15 cm) gap between the instrument and the nearest object. Keep the underside clear of papers and other objects.

**Do not remove the covers or inside parts.** Refer all maintenance to qualified service personnel.

**Do not operate with suspected failures.** Do not use the product if any part is damaged. Cease operation immediately and sequester the instrument from inadvertent use.

## Operating Environment

**Temperature:** 5 to 40 °C.

**Humidity:** Maximum relative humidity 80% for temperatures up to 31° C decreasing linearly to 50% relative humidity at 40° C (or at the upper operational temperature limit).

**Altitude:** Up to 10,000 ft (3,048 m) at or below 25° C.

## Cooling

The instrument relies on forced air cooling with internal fans and vents. Take care to avoid restricting the airflow to any part. Around the sides and rear, leave a minimum of 15cm (6 inches) between the instrument and the nearest object. At the bottom, the feet (up or down) provide adequate clearance.



**CAUTION.** Do not block cooling vents. Always keep the area beneath the instrument clear of paper and other items.

The instrument also has internal fan control circuitry that regulates the fan speed based on the ambient temperature. This is performed automatically after start-up.

## Cleaning

Clean only the exterior of the instrument using a damp, soft cloth. Do not use harsh chemicals or abrasive elements. Under no circumstances submerge the instrument or allow moisture to penetrate it. Avoid electric shock by unplugging the power cord from the AC outlet before cleaning.



**CAUTION.** Do not attempt to clean internal parts. Refer to qualified service personnel.

## Calibration

The instrument is calibrated at the factory prior to being shipped. The recommended calibration interval is one year. Calibration should be performed by qualified personnel only.

The instrument software includes automatic and manual calibration functions.



**CAUTION.** It is required that all inputs be removed from the instrument prior to performing a manual calibration.

Schedule an annual factory calibration as part of your regular maintenance. Extended warranty, calibration, and upgrade plans are available for purchase. Contact your Teledyne LeCroy sales representative or [customersupport@teledynelecroy.com](mailto:customersupport@teledynelecroy.com) to purchase a service plan.

## Power

### Power Consumption

Power Consumption (Nominal): 325 Watts (325 VA)

### Power and Ground Connections


The instrument is provided with a 10A/250V 18AWG rated grounded cord set containing a molded three-terminal polarized plug and a standard IEC320 (Type C13) connector for making line voltage and safety ground connections.

The AC inlet ground is connected directly to the frame of the instrument. For adequate protection against electric shock, connect to a mating outlet with a safety ground contact.



**WARNING.** Interrupting the protective conductor inside or outside the instrument, or disconnecting the safety ground terminal, creates a hazardous situation. Intentional interruption is prohibited.

## Standby Power

The  Power (Standby) button controls the operational state of the instrument. Press the button to switch the instrument On or into Standby mode (Off).

Always use the Power button to execute a proper shut down process and preserve settings before powering down.

Powering off does not disconnect the instrument from the AC power supply. The only way to fully power down the instrument is to shut down then unplug the AC power cord from the outlet. We recommend unplugging the instrument if it will be unused for a long period of time.

# Chapter 2

## Overview

The Teledyne LeCroy PeRT<sup>3</sup> Phoenix Test System is a new tool for testing of transceivers and other serial data communication devices and systems. Verifying device performance to current serial data standards normally requires multiple tools and multiple test setups, in order to test the devices over the entire range of requirements, from signal quality and BER testing through to protocol level error rate verification. With the Teledyne LeCroy PeRT<sup>3</sup> Phoenix, this entire process can be accomplished quickly and easily, using a single tool and a single experimental setup, on multiple lanes of a serial communication link.

The PeRT<sup>3</sup> Phoenix System is the first “protocol enabled” transceiver tester, allowing the system to run not only electrical testing and error ratio testing, but also to control the device under test during test operation. This allows further testing under live traffic conditions since the PeRT<sup>3</sup> Phoenix can communicate directly with the device, generating actual traffic to exercise the device, which then can be used to measure protocol-level error ratios.

PeRT<sup>3</sup> stands for Protocol enabled Receiver and Transmitter Tolerance Tester.

The PeRT<sup>3</sup> Phoenix combines the electrical test properties of jitter testers, the bit error ratio testing of BERTs, and the high level protocol packet error ratio testing of protocol exercisers. All of this is accomplished with a single system and single setup.

The PeRT<sup>3</sup> Phoenix System has an integrated design, combining digital electronics and signal processing with an analog front end. The PeRT<sup>3</sup> Phoenix digital subsystem provides programmability, protocol awareness, and digital test pattern generation.

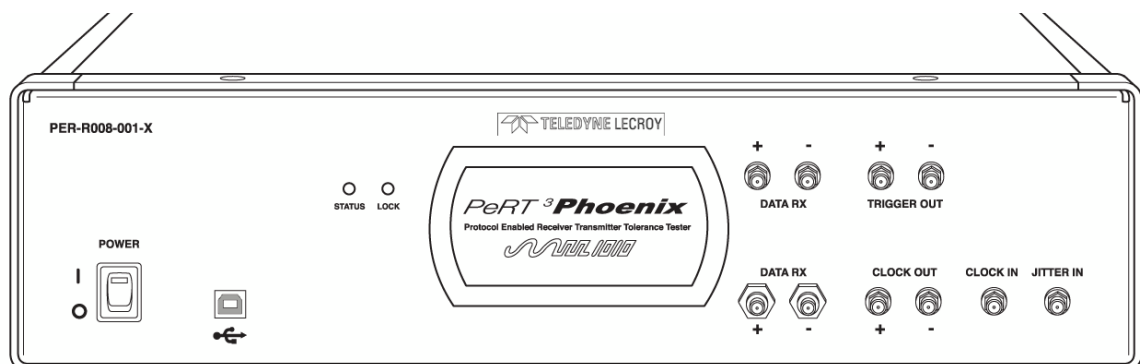


Figure 2.1: Phoenix Front Panel

The analog front end provides advanced high quality signal generation with precise timing control, and the ability to produce a controlled signal waveform with user-controlled jitter levels, amplitude modulation and other electrical stress generation. The analog front end superimposes these signal impairments on the outgoing signal to exercise and test the receiver channel of the device under test.

The PeRT<sup>3</sup> Phoenix System provides the ability to control and modulate the outgoing test signal. Test capabilities include modulation of clock noise and jitter, signal shaping (such as amplitude control, rise/fall generation), pre- and de-emphasis, and also the ability to monitor the signal quality of the traffic returned from the test device.

The “protocol-enabled” capabilities of the PeRT<sup>3</sup> Phoenix also allow the system to manage protocol-specific issues that confuse less sophisticated test systems. An example is the resynchronization of clocks in SATA systems through the use of the ALIGN primitives. The PeRT<sup>3</sup> Phoenix can monitor and record protocol-level errors such as CRC errors, and protocol-specific errors such as R\_ERR in SATA.

The PeRT<sup>3</sup> Phoenix is able to: (1) generate patterns which produce standardized tests such as PRBS; (2) generate protocol-level commands, which can be used both to control the device under test (e.g., to put the device into a loop-back self-test mode, or request information from the device on errors detected by the device); and (3) provide testing under live traffic conditions while the PeRT<sup>3</sup> Phoenix exercises the device under test.

The unique combination of abilities provided by the PeRT<sup>3</sup> Phoenix allows the user, with a single system and setup, to run through an entire range of tests to verify the total performance of the device under test. The result is an economical, efficient and easy-to-use system for any developer working on serial data communication designs or devices.

## System Configurations

The PeRT<sup>3</sup> Phoenix System is available in the following hardware configurations:

- ☐ PeRT<sup>3</sup> Phoenix System -- 1 channel

## Software Test Suites

The software test suites are configured by protocol support desired, with the following options available:

- ☐ Phoenix Receiver Tolerance Test Suite, which is a general purpose suite without specific protocol support
- ☐ Phoenix SAS Receiver Tolerance Test Suite, which supports SAS protocol
- ☐ Phoenix SATA Receiver Tolerance Test Suite, which supports SATA
- ☐ Phoenix PCI Express Receiver Tolerance Test Suite, which supports PCI Express
- ☐ Phoenix USB 3.0 Receiver Tolerance Test Suite, which supports USB 3.0

## Upgrades and Maintenance

Maintenance agreements are available to provide extended support.

**Note:** PeRT<sup>3</sup> Phoenix systems require calibration on an annual basis to maintain performance within factory specifications. The Teledyne LeCroy maintenance agreements normally include annual calibration of the system.

---

## Connection to Device Under Test

The PeRT<sup>3</sup> Phoenix provides coaxial SMA connectors to maintain signal integrity between the device under test (DUT) and the test system. A separate SMA connector is provided for each conductor in the differential pair (i.e., two connectors per line, four connectors per bi-directional channel). The nature of the connection to the DUT will vary depending on the specifics of the DUT, but close attention must be paid to maintaining signal integrity in design and implementation of the connections.





# Chapter 3

## Quick Start Guide

---

### Introduction

The Teledyne LeCroy PeRT<sup>3</sup> Phoenix Test System is a new tool for testing of transceivers and other serial data communication devices and systems. Verifying device performance to current serial data standards normally requires multiple tools and multiple test setups, in order to test the devices over the entire range of requirements, from signal quality and BER testing through to protocol level error rate verification. With the Teledyne LeCroy PeRT<sup>3</sup> Phoenix, this entire process can be accomplished quickly and easily, using a single tool and a single experimental setup, on multiple lanes of a serial communication link.

The PeRT<sup>3</sup> Phoenix System is a “protocol enabled” transceiver tester, allowing the system to run not only electrical testing and error ratio testing, but also to control the device under test during test operation. This allows further testing under live traffic conditions since the PeRT<sup>3</sup> Phoenix can communicate directly with the device, generating actual traffic to exercise the device, which then can be used to measure protocol-level error ratios.

PeRT<sup>3</sup> stands for Protocol Enabled Receiver and Transmitter Tolerance Tester.

The PeRT<sup>3</sup> Phoenix combines the electrical test properties of jitter testers, the bit error ratio testing of PeRTs, and the high level protocol packet error ratio testing of protocol exercisers. All of this is accomplished with a single system and single setup.

#### Unpacking the System

The PeRT<sup>3</sup> Phoenix is shipped with the following components:

- ☐ PeRT<sup>3</sup> Phoenix Hardware Platform
- ☐ PeRT<sup>3</sup> System Software CD
- ☐ AC Power Cord
- ☐ USB Cable to connect host machine to PeRT<sup>3</sup> Phoenix

Unpack the system and verify that all system components are present. If any components are missing, contact Teledyne LeCroy Service at 1-800-909-7112 (or 408-653-1260).

## Requirements for the Host Machine

A host machine system must be supplied to work with the Phoenix system with the following minimum requirements:

- ❑ Intel Pentium 4, AMD Athlon/AMD Duron, or newer compatible processor with a clock speed of at least 2 GHz.
- ❑ Microsoft Windows Vista or later OS.
- ❑ Minimum of 1 GB of RAM.
- ❑ Minimum of 25 MB of free hard disk space. Additional space is required for operation of applications and storing recorded results.
- ❑ Display resolution of at least 1280 x 800 with 24-bit color depth is highly recommended. Application can be run on 800 x 600 monitor, but user experience is much better with the higher screen resolution.
- ❑ USB 2.0 port.

## Front Panel Connections

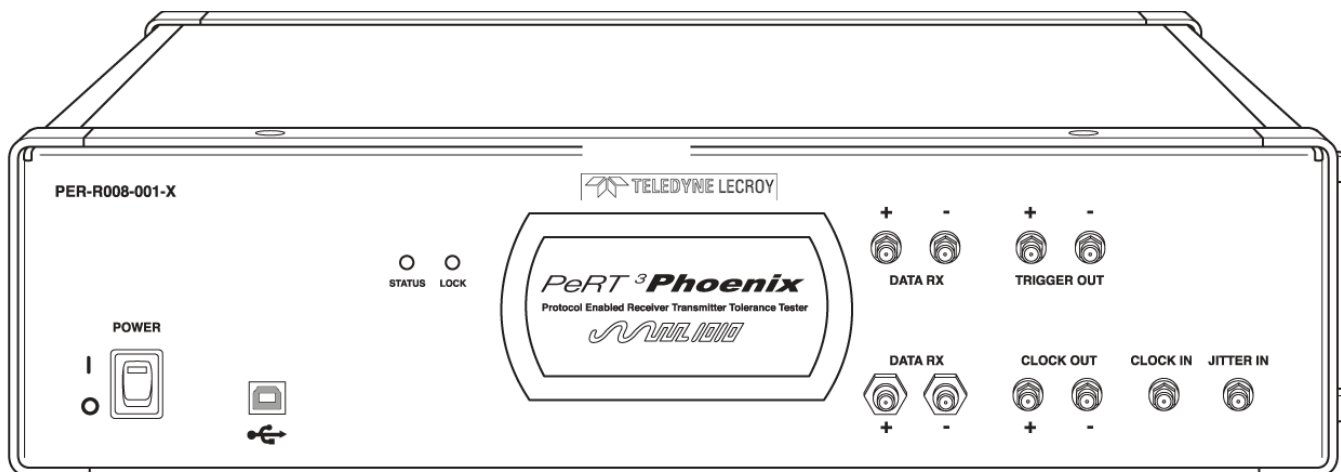


Figure 3.1: Phoenix Front Panel

The front panel of the PeRT<sup>3</sup> Phoenix chassis has four pairs of SMA connectors, one pair K-type connector, power switch, LEDs and the USB Port for host machine connectivity. Details of the front panel are explained in [“Connecting the Device Under Test” on page 23](#).

## Back Panel Connections

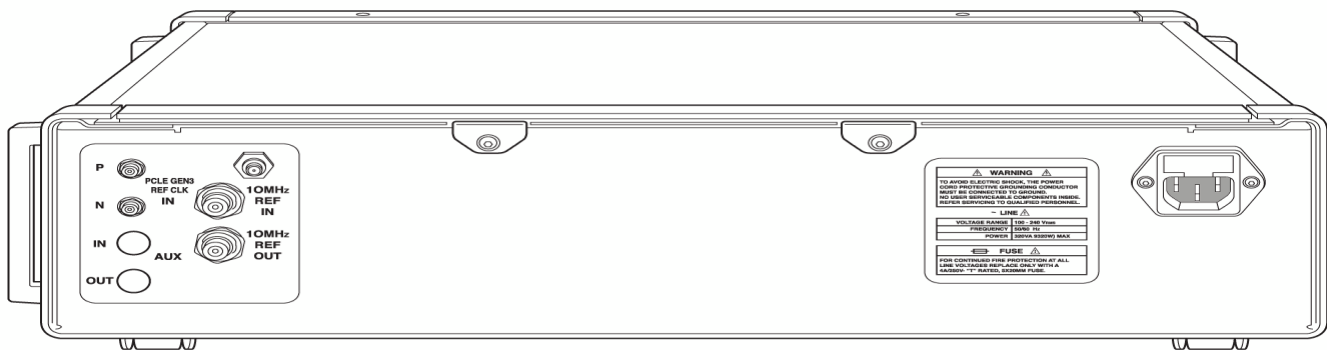


Figure 3.2: Phoenix Back Panel

The back panel of the PeRT<sup>3</sup> Phoenix chassis has connectors for AC Power, Reference Clock IN, Reference Clock OUT and PCIe 100MHz reference clock for Gen3.

## Initial System Setup

1. Remove the PeRT<sup>3</sup> Phoenix chassis and place it on a level, clean surface. Make sure the power switch on the front of the unit is in the OFF position, plug in the AC power cord to the rear of the unit and then to a source of AC power (100-240 VAC, 47-63 Hz, 480W max).

---

**WARNING:** Do not open the PeRT<sup>3</sup> Phoenix enclosure. There are no user serviceable parts inside. Refer servicing to Teledyne LeCroy. See “How to Contact Teledyne LeCroy” in the *PeRT<sup>3</sup> Phoenix System User Manual*.

---

2. Load the PeRT<sup>3</sup> System Software onto your host machine (the machine that will be used to control the PeRT<sup>3</sup>). Install the software by placing the PeRT<sup>3</sup> System Software CD into your host machine, and double click on **Setup.exe**.

---

**Note:** If you are installing a newer version of the PeRT<sup>3</sup> Software the application will prompt you to uninstall the application. Go to the Control Panel and select Add or Remove Programs to uninstall the older version.

---

3. If you do not already have .NET 3.5 installed on your host machine, you will be prompted to install it. Follow the on-screen instructions to download the .NET 3.5 installation from Microsoft and install it.

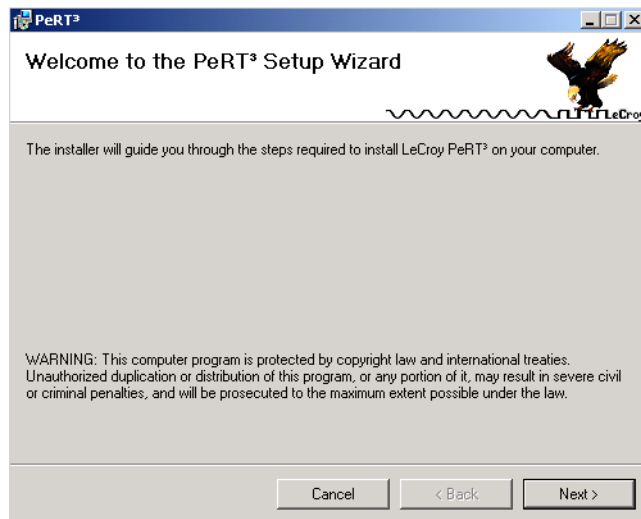
---

**Note:** If .NET 3.5 is already installed, the installer will skip this step and automatically start installing the PeRT<sup>3</sup> software. If this happens, skip Step 4 below and continue with Step 5.

---

4. After .NET 3.5 is installed, double click on **Setup.exe** to install the PeRT<sup>3</sup> software.

5. The **Welcome to the PeRT<sup>3</sup> Setup Wizard** displays. Click **Next** to continue the installation.



6. Follow the on-screen installation instructions to complete installing the software. As part of the software installation process, the USB drivers for the hardware will be copied to the standard driver directory on your host machine.
7. When the software installation is complete, a message displays **PeRT has been successfully installed**. Close the dialog box and connect the USB cable from the host machine to the PeRT<sup>3</sup> Phoenix chassis.
8. Turn on the PeRT<sup>3</sup> system.

---

**Note:** Do NOT let the operating system connect to the Internet to search for drivers.

---

---

**Note:** Allow the operating system to automatically install the drivers.

---

---

**Note:** If for some reason the operating system does not automatically find the drivers, you can manually browse to C:\Program Files\LeCroy\PeRT3\drivers (or other directory if you did not select the default directory on installation) and have the operating system install the drivers from there.

---

9. Restart the host machine system.

# Connecting to the PeRT<sup>3</sup> Phoenix

## Overview of Connection

The PeRT<sup>3</sup> Phoenix System allows the user to be directly connected to the PeRT<sup>3</sup> system in use, or connect remotely via a network. This latter method is very useful when the system is located in a lab or other remote location, and the user wishes to conduct testing from their office (or home).

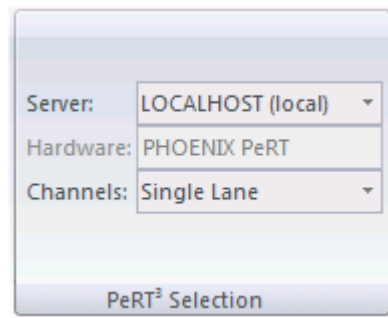
To support this flexibility, the software application includes both a client, which contains the user interface displayed to the user, and a server, which communicates directly with the PeRT<sup>3</sup> hardware. The server must exist on the host machine directly connected to the hardware, the client may exist on any host machine that has a network connection to the server. By default, the PeRT<sup>3</sup> installer installs both client and server programs.

When the client is launched, it will first search for a PeRT<sup>3</sup> server on the local host machine. If it finds a server, it will display "LOCALHOST(local)" in the **Server** field of the **PeRT<sup>3</sup> Selection** panel on the **Main** tab. It then attempts to connect to the local hardware attached to the host machine.

---

**Note:** If a PeRT<sup>3</sup> server is known to be present on the local host machine but the software does not find it, try restarting the server. To do this, follow the pathway **Start> Control Panel> Administrative Tools>Services** and select the item **LeCroy PeRT<sup>3</sup> Server**. Then click on Restart.

---



If no local server is found, the system searches for available servers on the network, and suggests connecting to the first server it finds. The user may accept that suggestion or reject it and choose another server from the drop-down list. Once a server has been selected, the name and address of that server appears in the **Hardware** field of the **PeRT<sup>3</sup> Selection** panel, and the software connects to that server and populates the script/pattern/results lists in the **Main Library** window from that server's database, then verifies the hardware. If the hardware exists, the Hardware field of the **PeRT<sup>3</sup> Selection** panel are filled in and, if necessary, the hardware is re-synchronized (this may take a minute or two and is indicated by a message in the output window accompanied by a progress bar on the main ribbon and the "flying Eagle" cursor).


## Steps to Connect

On your host machine, launch the PeRT<sup>3</sup> software through one of the following methods:

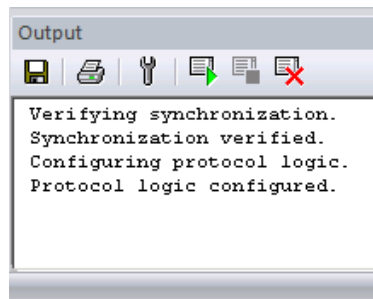
- ❑ From the **START** Menu, select **All Programs**, then select **LeCroy**, then select **PeRT<sup>3</sup>**, then select **LeCroy PeRT<sup>3</sup>**.

- ❑ Double-click on the **LeCroy PeRT<sup>3</sup>** icon  on your host machine desktop.


The PeRT<sup>3</sup> main application window displays. As shown below a green bar displays and

the cursor changes into a flying eagle  (not shown) while the configuration is in progress. The output window at the bottom of the screen will display 'Verifying Synchronization' as shown below.

Once synchronized the output window will display the following.




The main application window displays.

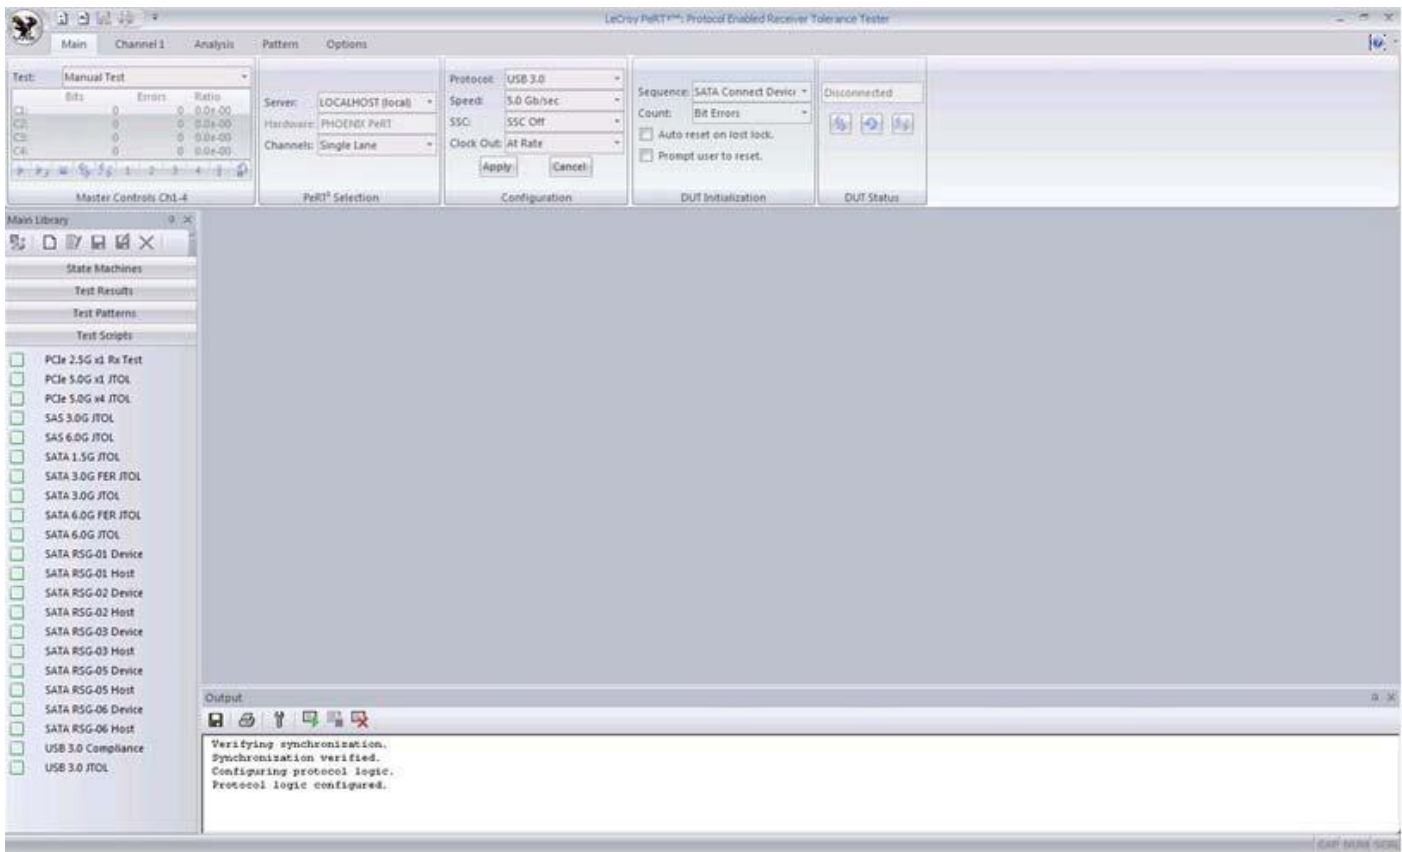

If your application window is not wide enough, the software will fit the panels to the available space and will drop the title to fields if necessary.


## Main Tab

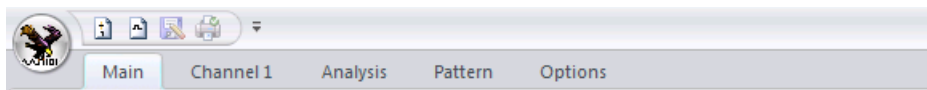If the top part of the window does not appear similar to the illustration above, make sure that the **Main** tab is selected along the top of the window. If this tab is not selected, click on the tab to select it.




## PeRT<sup>3</sup> Selection Panel

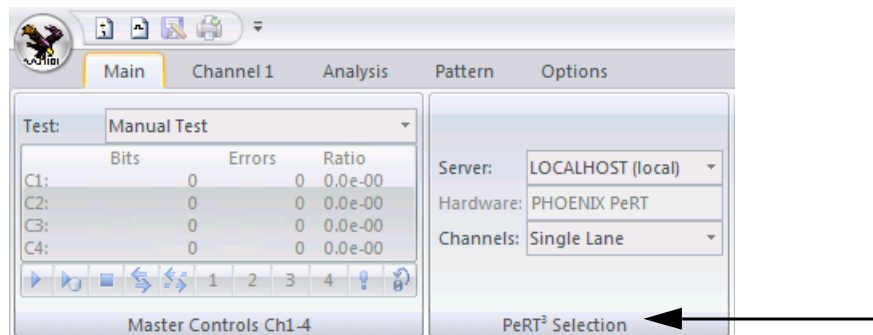With the **Main** tab selected, the **PeRT<sup>3</sup> Selection** panel will be displayed, as follows:



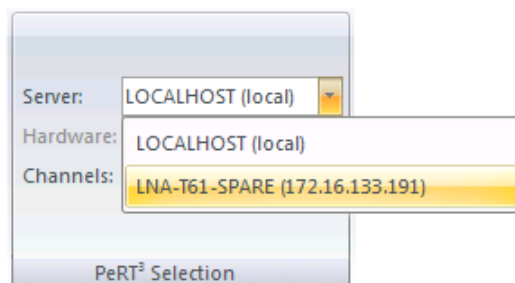In the **PeRT<sup>3</sup>** drop-down menu, select the host machine that is connected to the PeRT<sup>3</sup> Phoenix System you want to control. Typically this will be the local host machine, but this allows remote operation of a PeRT<sup>3</sup> Phoenix system as long as there is a network connection between the two host machine systems.



The **Channels** drop-down menu allows you to select the number of channels you wish to test, up to the maximum number supported by the specific PeRT<sup>3</sup> Phoenix System selected.



## Connecting the Device Under Test

The PeRT<sup>3</sup> Phoenix System is intended for testing of serial data communication links and components. Depending on the specific device under test, the connectors will vary, and the means of connecting to the SMA connectors on the PeRT<sup>3</sup> Phoenix front panel will also vary.

The PeRT<sup>3</sup> Phoenix front panel provides either K-type or SMA-type connectors for each of the conductors in either differential pair, labeled as (+) and (-), or single-ended.

There are six pairs of SMA connectors:

- DATA RX
- TRIGGER OUT
- CLOCK OUT

There is one pair of K-Type connector:

- DATA TX

There are two single-ended SMA connectors:

- CLOCK IN
- JITTER IN

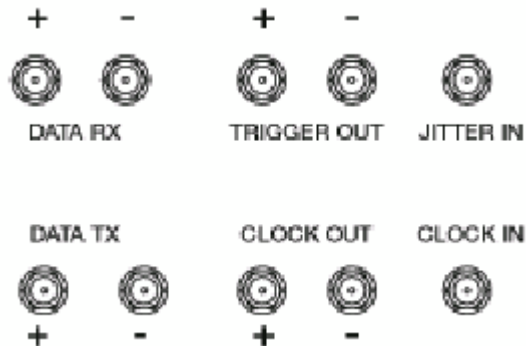


Figure 3.3: Front Panel of the PeRT<sup>3</sup> Phoenix System

The following two LEDs are on the front panel:


- ☐ Status
- ☐ Lock

A USB port for connecting to the host machine is also provided on the front panel.


The PeRT<sup>3</sup> Phoenix can be connected to the DUT using a test board or custom interface. For assistance in the requirements for these connections, please contact Teledyne LeCroy Support.

## Selecting and Running a Test

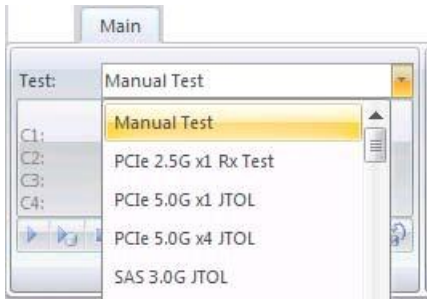

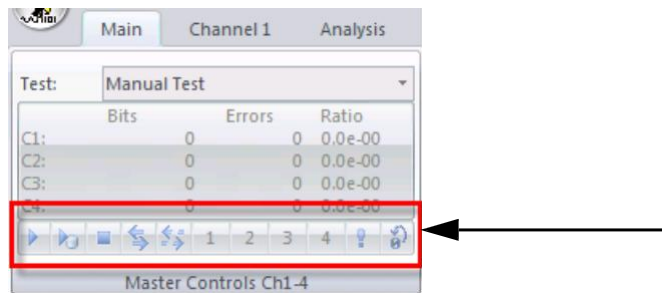
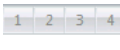




To run a predefined test, select the test from the list of tests that appears in the drop down menu in the **Master Controls** panel in the top left of the PeRT<sup>3</sup> main application window.



The **Master Controls** panel also contains a set of icons which can be used to control the selected test script.




These button are explained below (from left to right).

 <b>Start (don't record)</b> Start test without recording	 <b>Disconnect</b> Disconnect from device under test
 <b>Start (Record results)</b> Start test and record results	 <b>Indicator (s) #1, #2, #3, #4</b> Green    Pattern Lock Yellow    Signal Lock Orange    Signal Detect Red    No Signal
 <b>Stop</b> Stop current test	 <b>Inject Error</b> Inject a bit error on active channels
 <b>Connect</b> Connect to and initialize device under test	 <b>Reset Counters</b> Reset bit and error counts to zero


**Note:** The difference between Start (don't record) and Start (record results) is whether the user can change any of the jitter settings while the test is running. Start(don't record) will allow the change, but Start(record results) will not. This is useful during initial test development to quickly determine how the device under test behaves under different conditions.

Once the test is selected, the test can be started by clicking the **Start (record results)** button in the **Master Controls** panel.

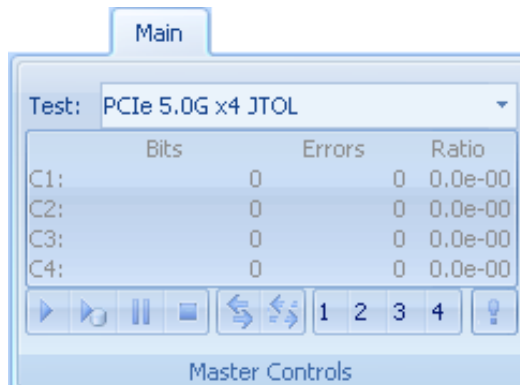Once the test is running, the **Stop** button will become active, and can be used to stop the test. The indicators to the immediate right of these buttons (marked "1", "2", "3", and "4") refer to the four channels which can be tested simultaneously. If a channel is active, the indicator corresponding to that channel will be lit. In addition, a summary of error results is provided for each channel in the status screen in the center of the **Master Controls** panel.



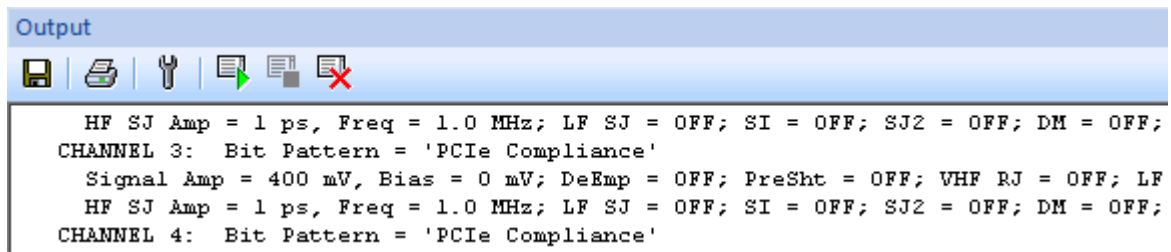In addition, as the test is running, the **Output** window at the bottom of the main application window will provide a log of test conditions and results.




If the test was started with the **Start (record results)** button, the results are automatically saved in the **Test Results** library while the test is running.

An alternate way to select and run a test is to click on the test within the **Test Scripts** tab of the **Main Library** window, then either click the **Run Test** icon at the top of the window or right-click on the test name and select **Run Test**.

## Modifying a Test

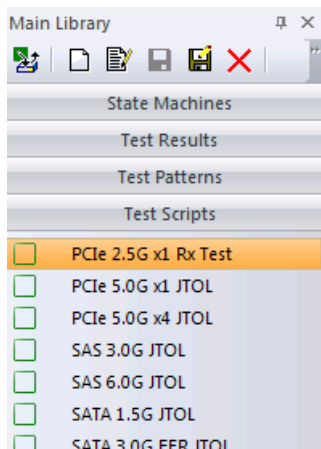On the left side of the PeRT<sup>3</sup> main application window is a window called **Main Library**. This displays the list of test scripts, test patterns and results from previous tests that are stored on the PeRT<sup>3</sup> server. Click on the **Test Scripts** horizontal tab to show a list of available test scripts.




The scroll buttons can be used to scroll through a list of available test scripts. These scripts can include tests supplied with the PeRT<sup>3</sup> Phoenix system, tests developed by the user, or tests originally supplied with the system and later modified by the user.

## Testing a DUT

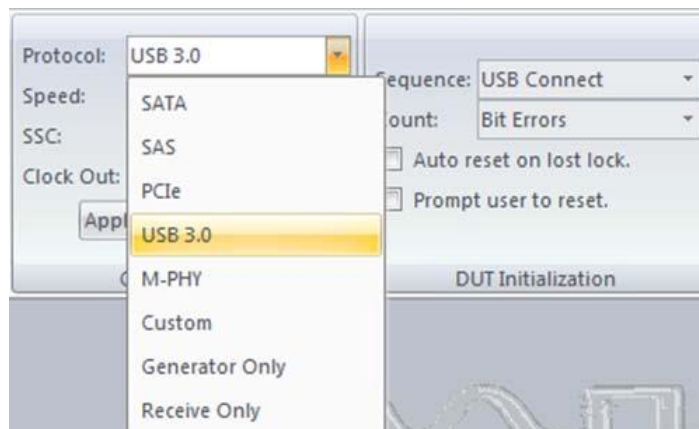The following example describes testing a USB 3.0 DUT. You have to have a license for the protocol to display. Please contact Teledyne LeCroy at Phone Support: 1-800-553-2769.


Perform the following steps:

1. Select **USB 3.0** from the Protocol drop-down menu in the Configurations panel. See the following figure.  
Other configuration fields are automatically populated when a protocol is selected.
2. Click **Apply**.




The DUT Initialization automatically configures for the USB protocol as shown below.

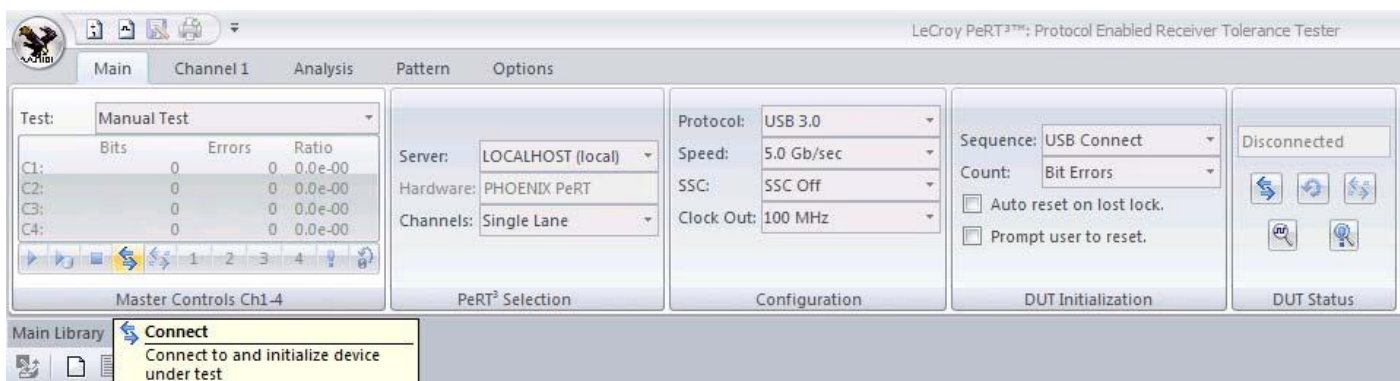
3. Click the **Connect**  icon.



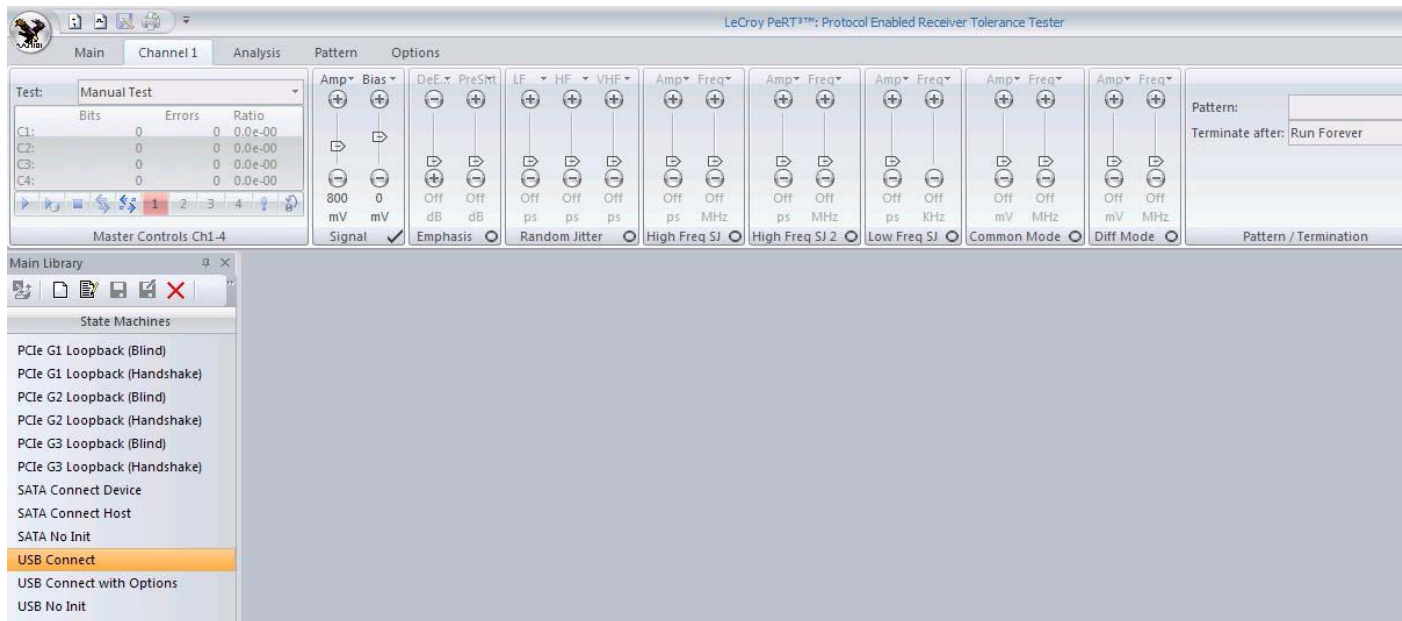
4. Select the **Channel 1** menu option and **USB Connect** from the State Machine panel as shown below.



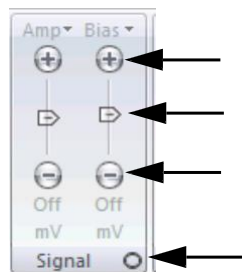
5. Increase the signal strength to 800 by clicking on the round circle in the signal panel or by using the slider or the plus + and minus - icons. You can also click on the plus + and minus - icons and key in the value.



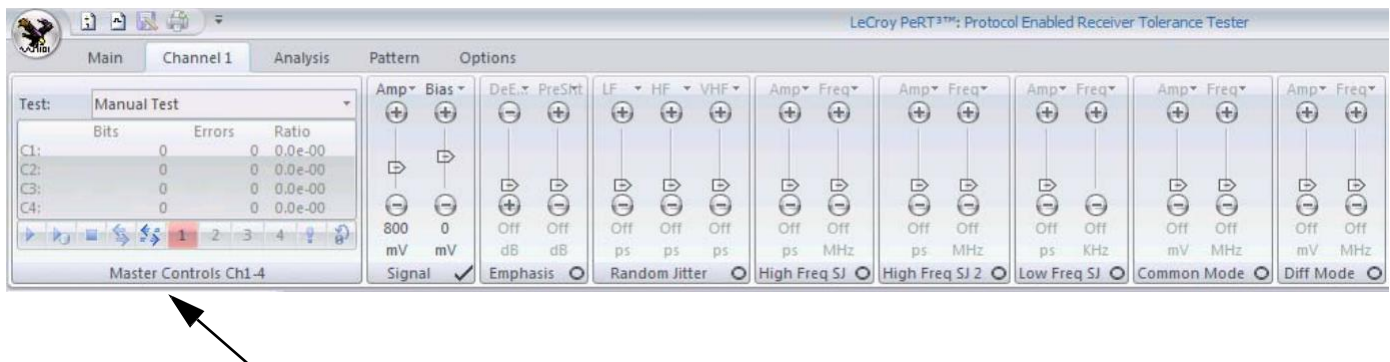6. Channel 1 will display in pink after the selection is made.



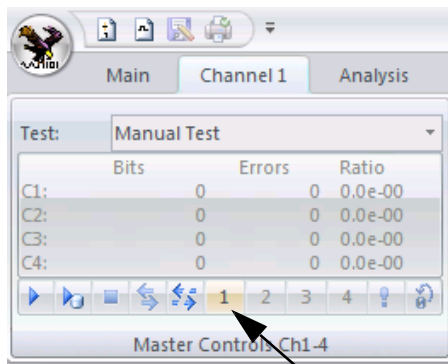
7. Connect the 5Volt USB cable into a USB connector. Channel 1 displays in yellow.



8. Click the **Main** tab and click the **Start** button as shown below.


**Start (don't record)** - This function is used mainly for debug and verify the BER status of the DUT, no data will be recorded for this run.

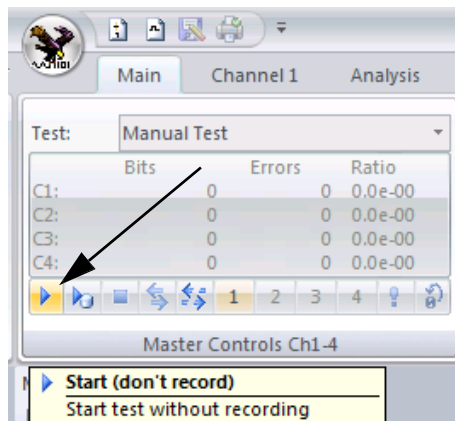**Start (record)** - This function is the same as Start (don't record) except the results will be recorded with a time stamp and a report will automatically be saved in results library.



The default Manual test starts and the Channel 1 button turns green as shown below.

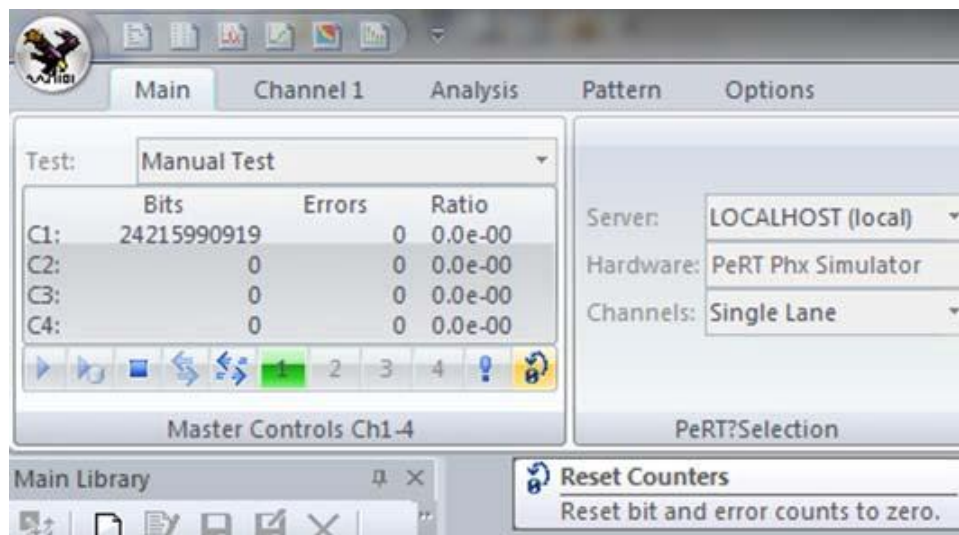**Reset counter** - this function will reset the BER counter without interrupting the test. This is useful for debugging if the DUT is being modified in real time and the user likes to update the BER results.





## Run Test Scripts

To run a test script, select the applicable test script by clicking on the **Test Scripts** in the left panel and select a script to run as shown below.

The user can scroll through the test scripts and make any modifications, or can simply run the selected script without modifications.

Note that if you want to create a copy of the test script prior to modification, single click on the script you want to copy, right-click on the script and select **Copy** from the menu that displays.

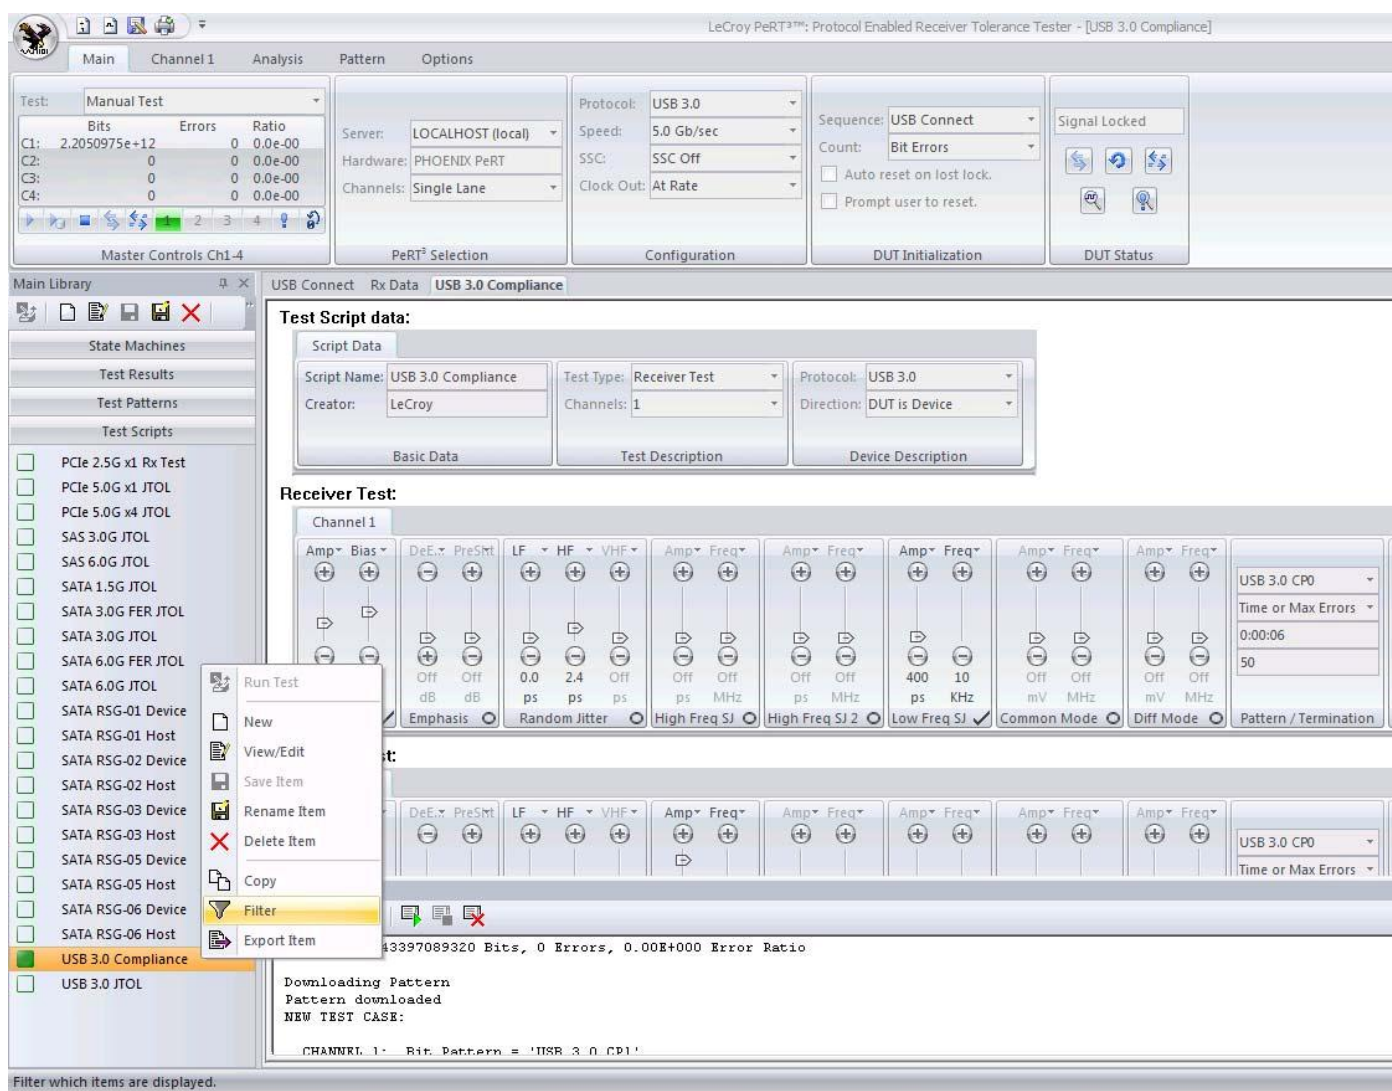


Figure 3.4: Running and Copying a Test Script

## Run Test Patterns

To run a test pattern, select the applicable test pattern by clicking on the **Test Patterns** in the left panel and select a pattern to run as shown below.

The user can scroll through the test patterns and make any modifications, or can simply run the selected pattern without modifications.

Note that if you want to create a copy of the test patterns prior to modification, single click on the pattern you want to copy, right-click on the pattern and select **Copy** from the menu that displays.

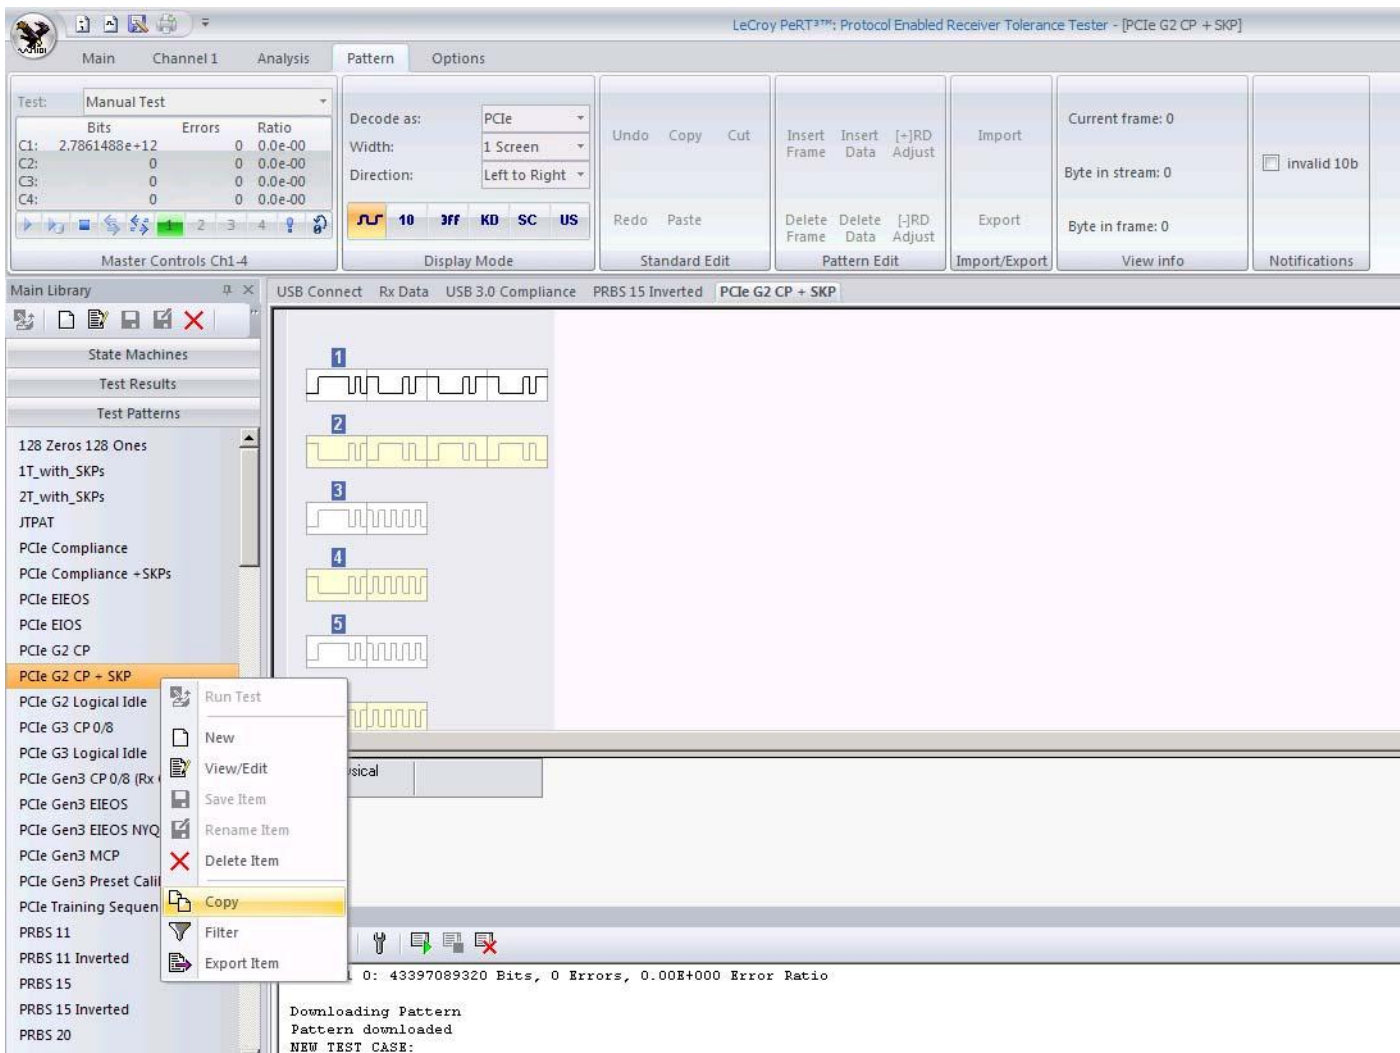


Figure 3.5: Running and Copying a Test Pattern

# Chapter 4

## Basic Principles of Operation

The PeRT<sup>3</sup> Phoenix generates a serial bit stream for testing of receivers through a two-stage process. In the first stage, the bit stream is developed in accordance with the protocol being used (if selected) and the test patterns selected. This bit stream is originally generated to be as clean and precise as possible.

In the second step, the clean bit stream generated in the first step is passed through a series of stages which introduce controlled distortions into the signal. There are many choices for type of distortion, each type has many possible levels, and multiple types of distortion can be overlapped to produce complex, but controllable, irregularities in the signal generated. The system is designed to allow the user to test signal distortions along many different axes (types and combinations of signal degradation), and allows the user to establish either a simple PASS/FAIL test at a given level of distortion, or to explore the performance envelope of a receiver by multiple tests, each of which introduces increasing levels of distortion along different axes until predefined bit error levels are exceeded.

In the process of testing a receiver, the device containing the receiver is first connected to the system, then the device may go through an initialization phase, after which the device is placed into a test mode (e.g., a simple loopback mode) which returns the signal to the PeRT<sup>3</sup> Phoenix for analysis using a clean (distortion free) return path. This allows the PeRT<sup>3</sup> Phoenix to monitor the bit error ratios encountered by the receiver with minimal interference from the return path.

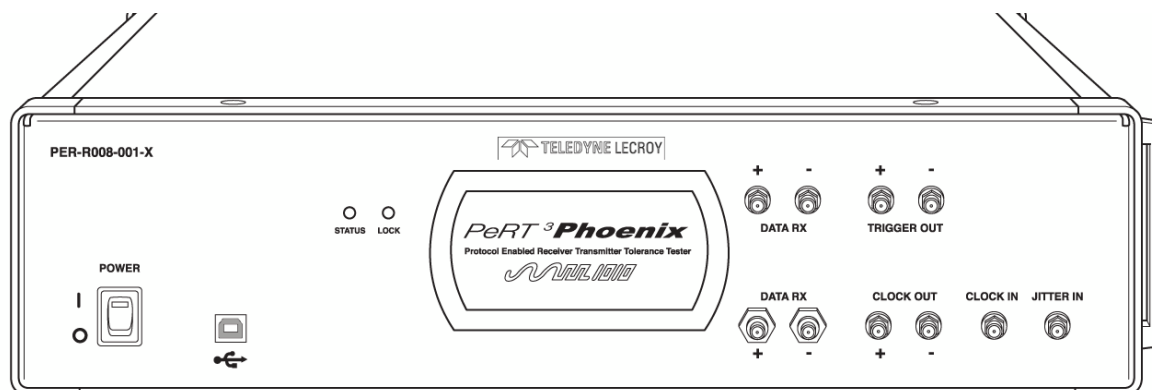


Figure 4.1: Phoenix Front Panel

The eye diagram of a typical "clean" bit stream generated by the analog front end is shown below (for 5 Gb/sec):

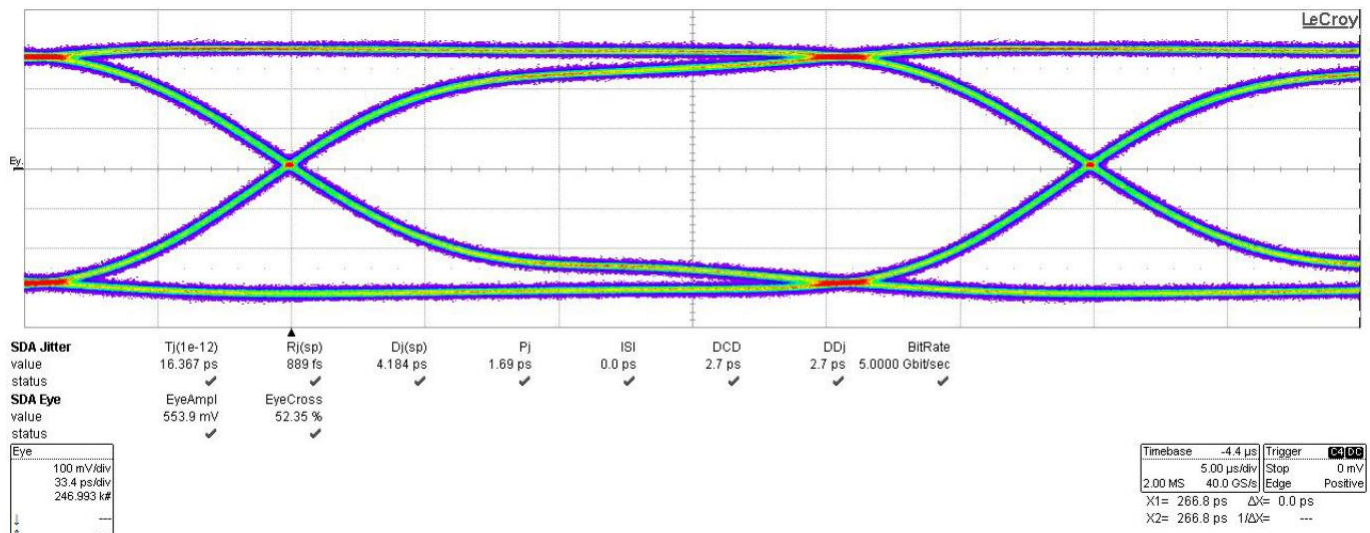


Figure 4.2: Eye Diagram

## Introduction of Stress into Waveform

The analog front end introduces stress (or distortion) into the waveform as desired by the user. The stressed waveform can be used to explore the performance envelope of the device under test, to determine the types and amounts of stress the device or design can tolerate before desired bit error rates are exceeded.

Examples of the eye diagrams that result from introduction of certain types of stress are shown below.

### De-Emphasis and Pre-shoot

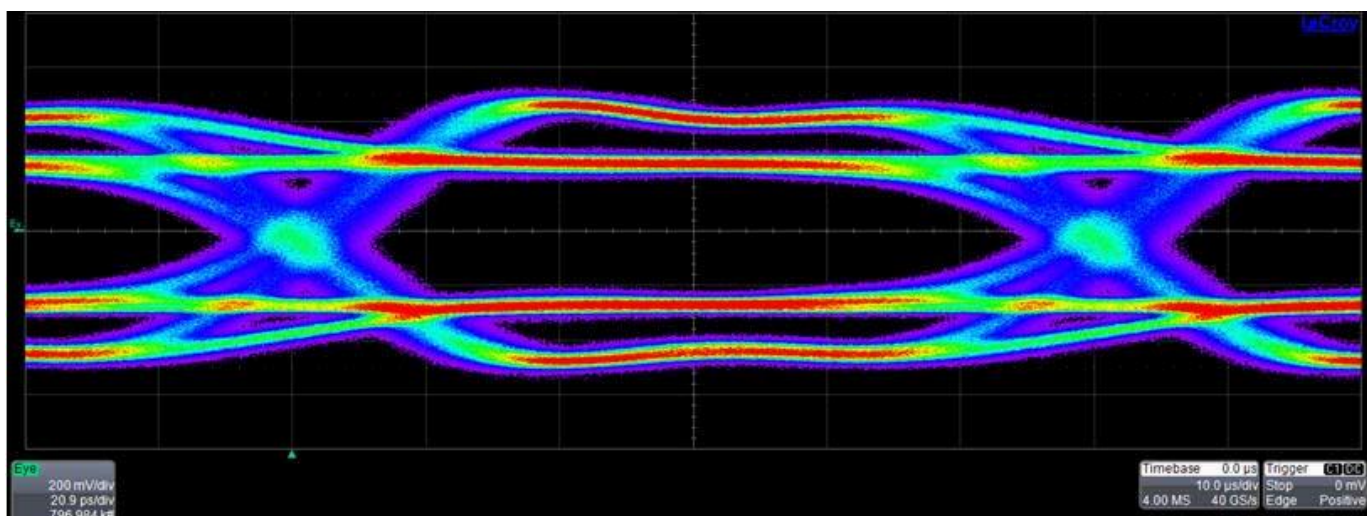


Figure 4.3: Eye Diagram with Stress Introduced



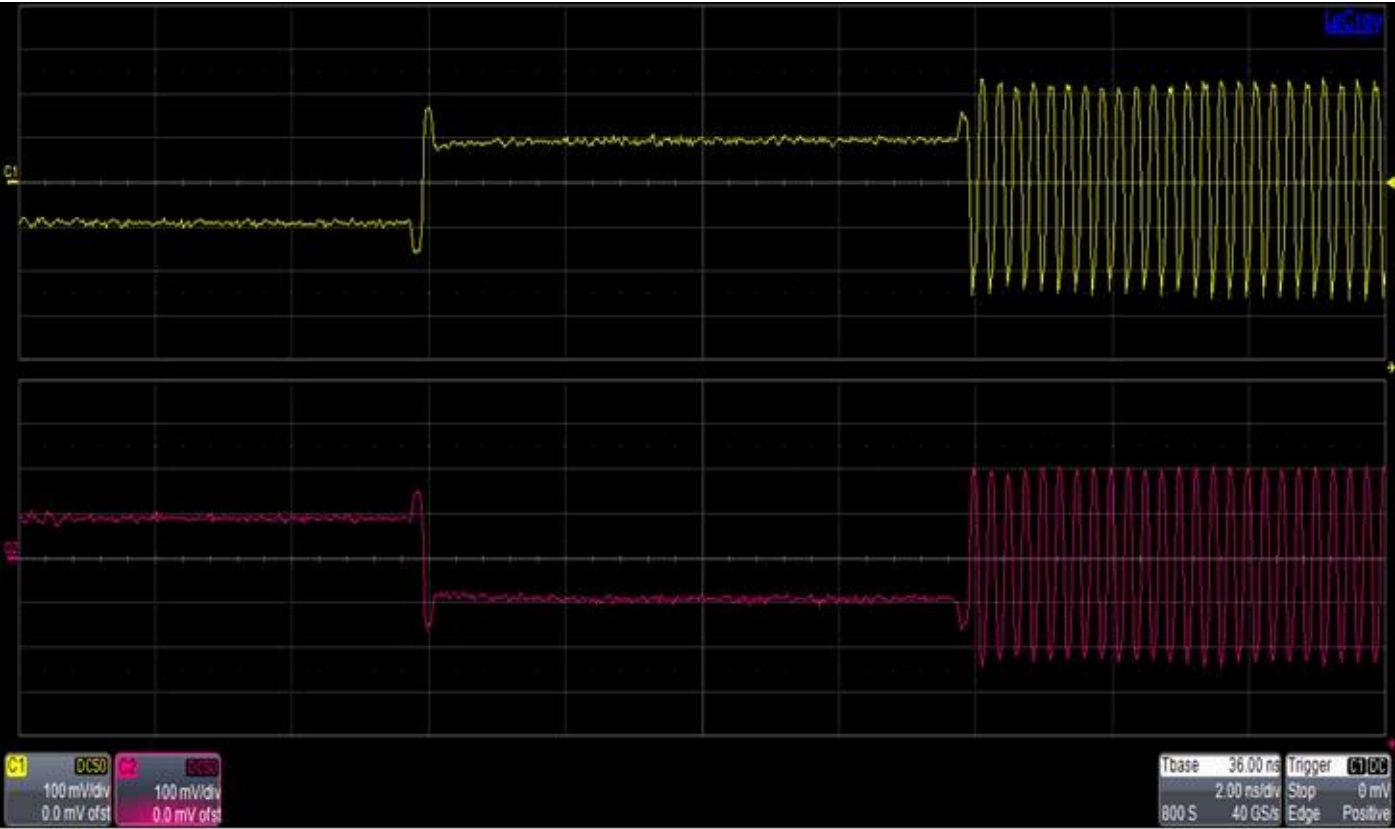


Figure 4.4: Pre-shoot

Random Jitter

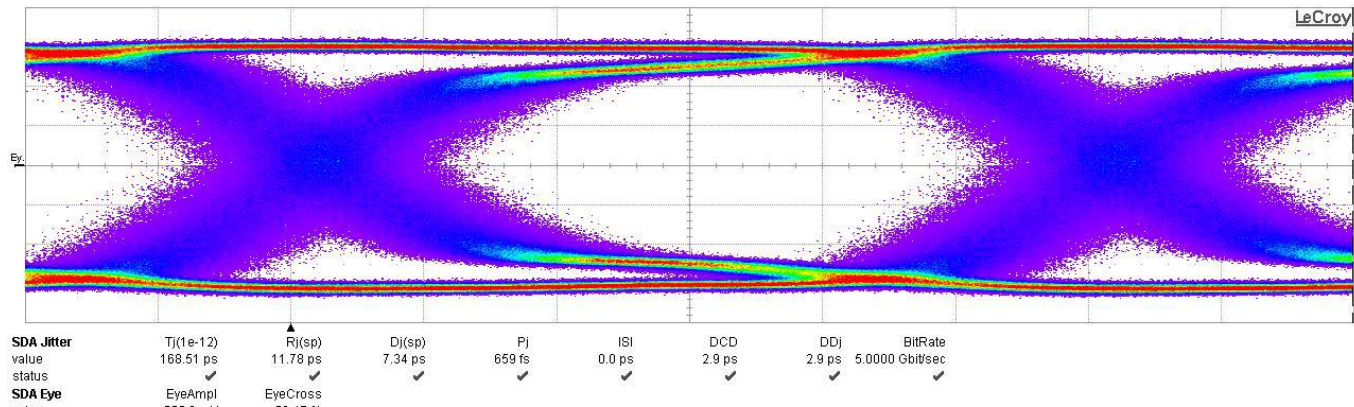


Figure 4.5: Random Jitter

Periodic Jitter

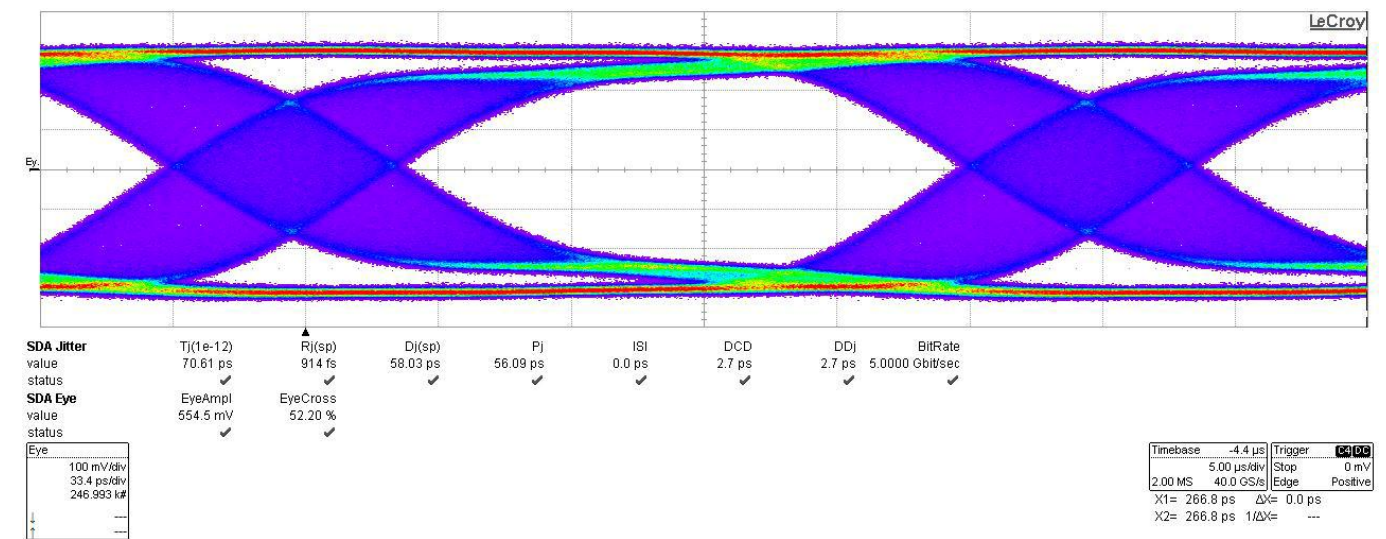


Figure 4.6: Periodic Jitter

Differential Mode Noise

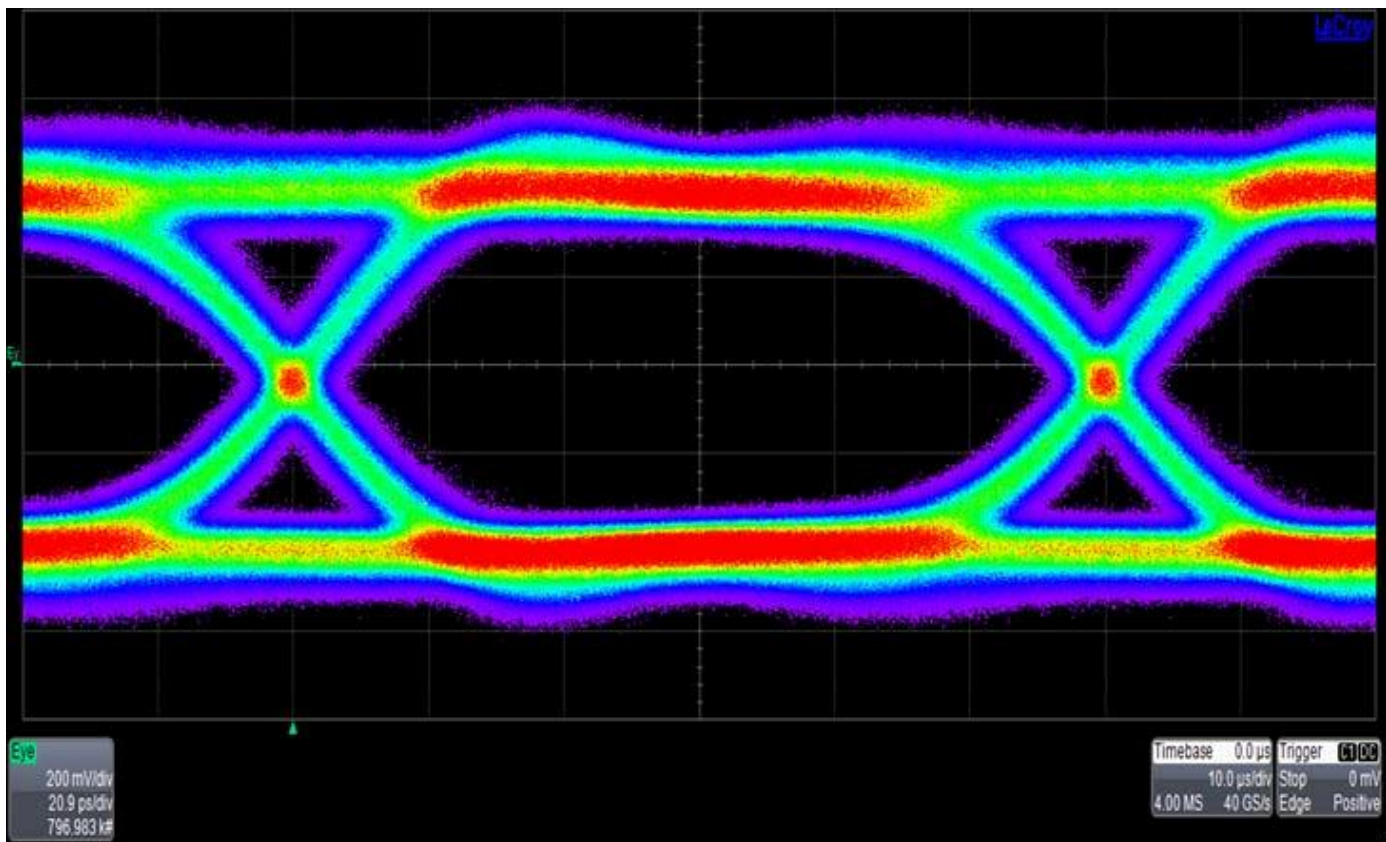


Figure 4.7: Differential Mode Noise

## Common Mode Noise

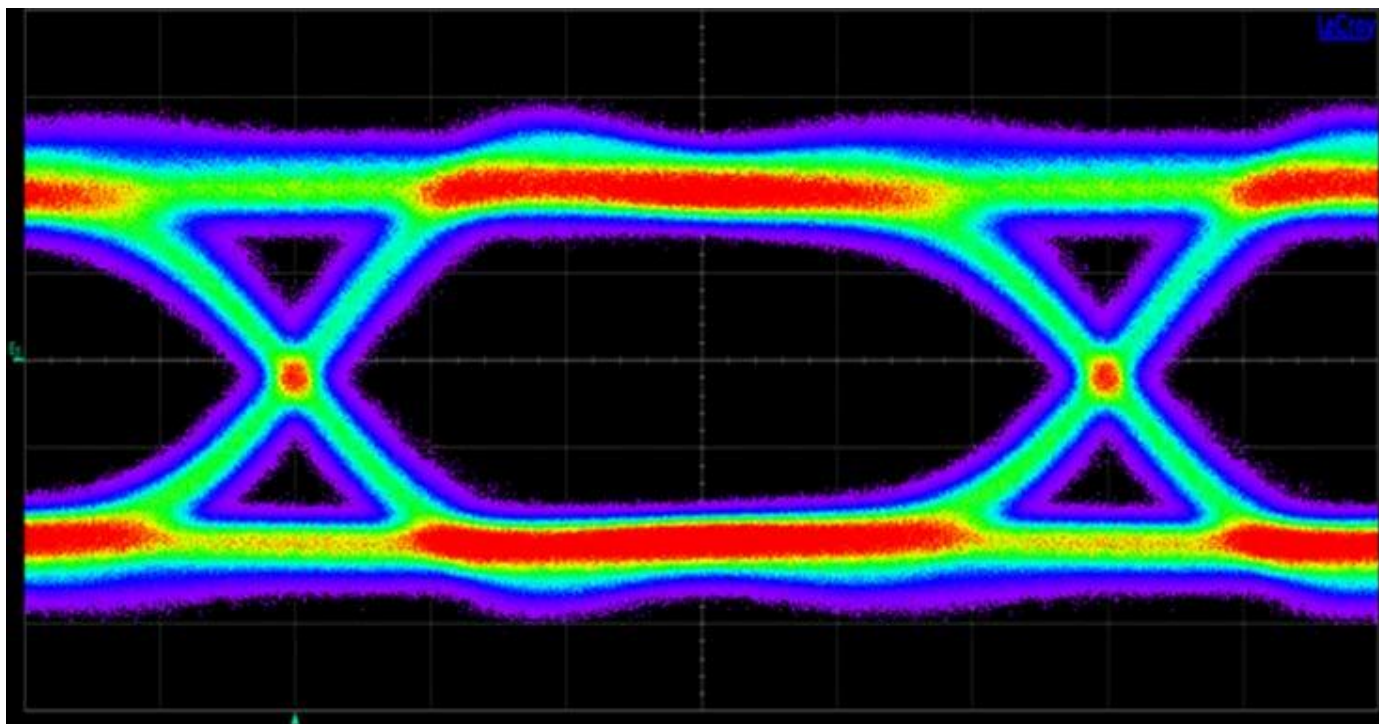


Figure 4.8: Common Mode Noise





# Chapter 5

## Software Overview

---

The PeRT<sup>3</sup> application allows the user to control the PeRT<sup>3</sup> Phoenix Test System, to develop test scripts for the system, to run saved test scripts, to run manual tests, and to review results of the current or previous tests. When reviewing the results of previous tests, the host machine running the PeRT<sup>3</sup> application does not need to be connected to the PeRT<sup>3</sup> Phoenix System hardware. This allows users to share test results with other engineers without requiring those users to have hardware connected.

### Starting the PeRT<sup>3</sup> Program

To start the PeRT<sup>3</sup> program from the Start menu:

1. Click **Start**.
2. Select **Programs**.
3. Select **LeCroy**.
4. Select **PeRT<sup>3</sup>**.
5. Click **LeCroy PeRT<sup>3</sup>**.

The main application window for the PeRT<sup>3</sup> displays a (see [Figure 5.1 on page 40.](#))

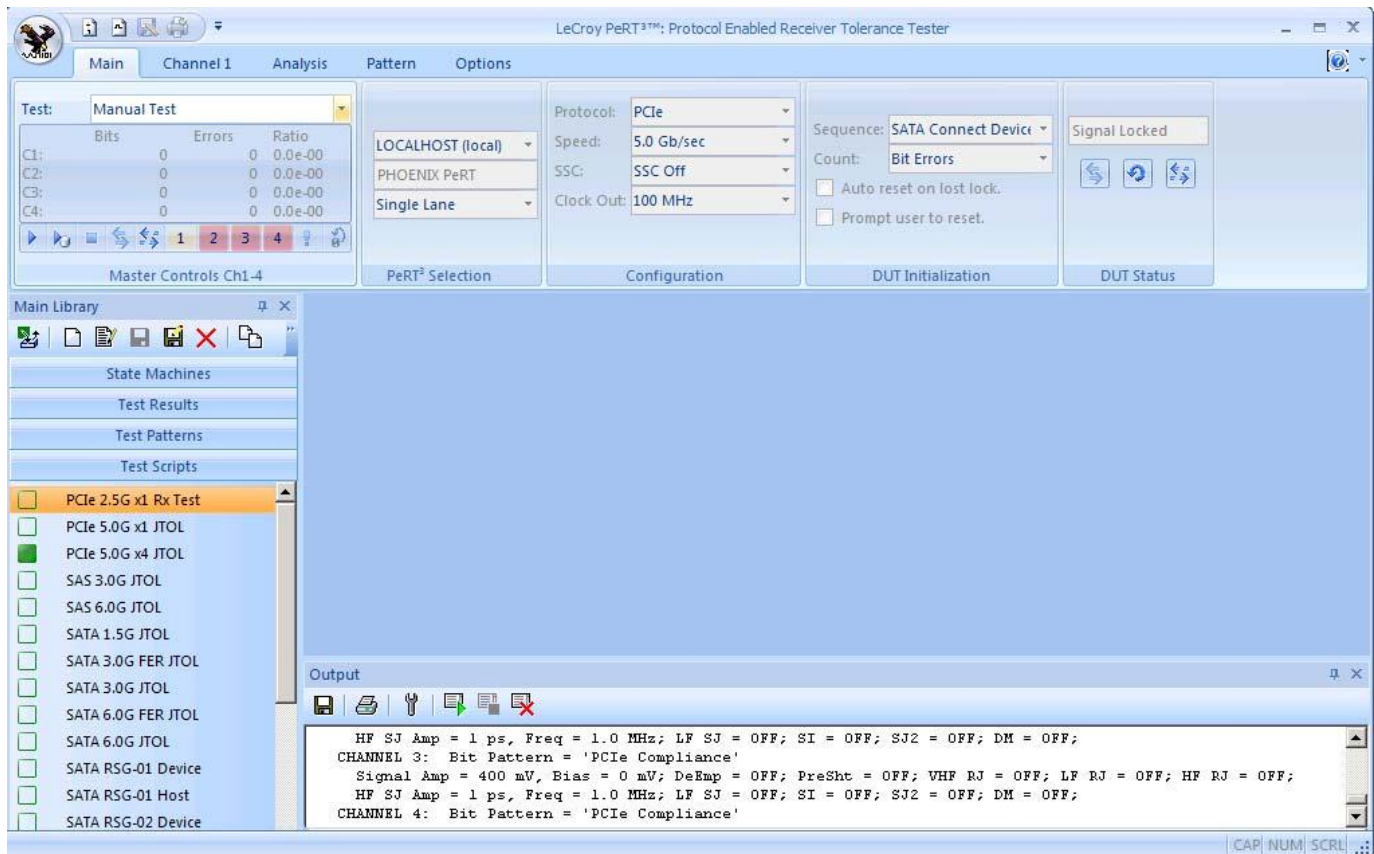


Figure 5.1: Main Application Window


## Main Application Window

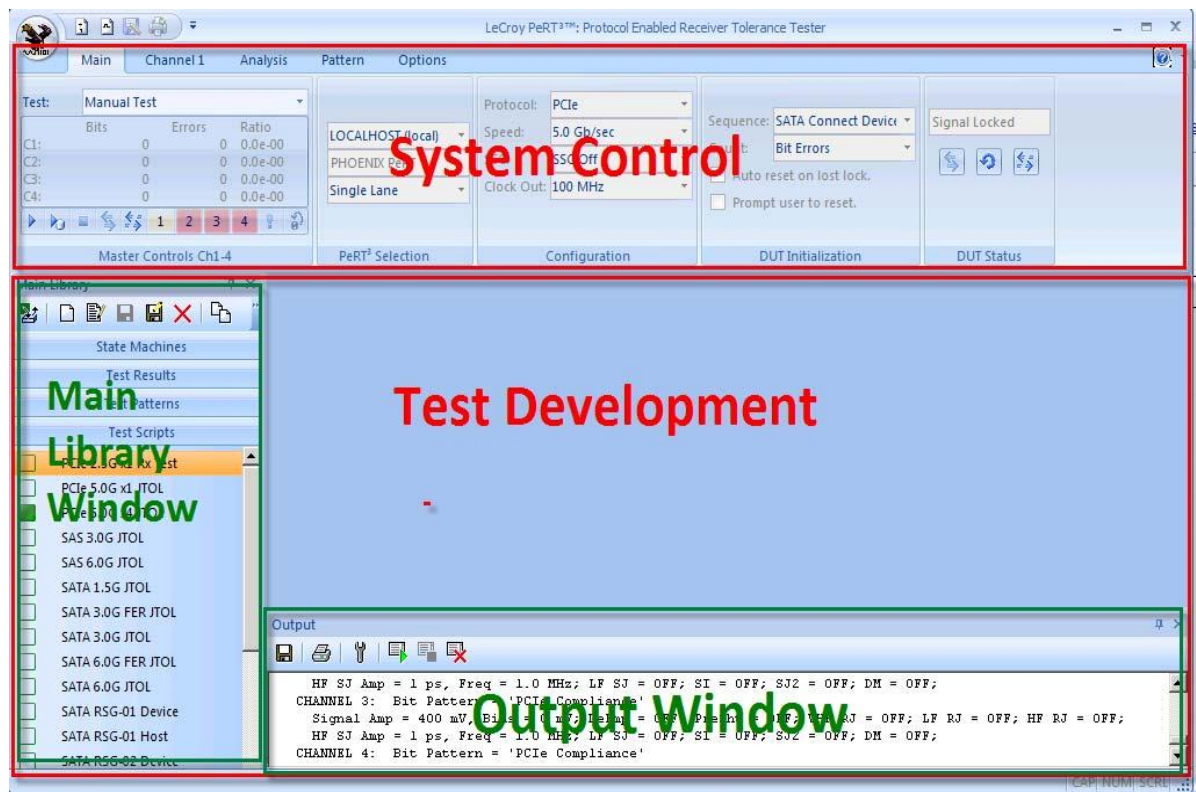The main application window has two major sections, organized horizontally from top to bottom as follows:

- ❑ The System Control Ribbon, located at the top of the window.
- ❑ The Test Development section, located in the bottom of the window.

There are two windows that by default occupy space within the Test Development section. These are the **Main Library** window and the **Output** window. By default these windows are "docked" to the left and bottom of the main application window, and any **Test Scripts**, **Test Patterns** or **Test Results** windows displayed in the Test Development portion will be sized to fit the remaining space.

Information on re-positioning these windows can be found in [“Customizing the Main Library and Output Windows” on page 108](#).



The positions and relative sizes for these sections as shown above are the default sizes and locations. The user has significant control over the locations and sizes of the various windows. Windows can be turned on and off to suit the user's needs. See [“Control of Screen Appearance” on page 103](#).

## Main Library Window

The **Main Library** window provides information on the status of a test script through the box located just left of the script name. An open box indicates that the script is stored on the server. A solid green square indicates that a copy of this script has been retrieved from the server and is currently on the client host machine as well. A solid green square with an asterisk indicates that the script has been modified but not yet saved on the server. A solid green square with an arrow indicates a test script which is currently running. The orange highlight indicates the test script(s) currently selected, or in other words the scripts to which Main Library commands located across the top of the window (**View/Edit**, **Save**, **Rename**, **Delete**, **Filter** or **Export**) will be applied (see [Figure 5.2 on page 42](#)).

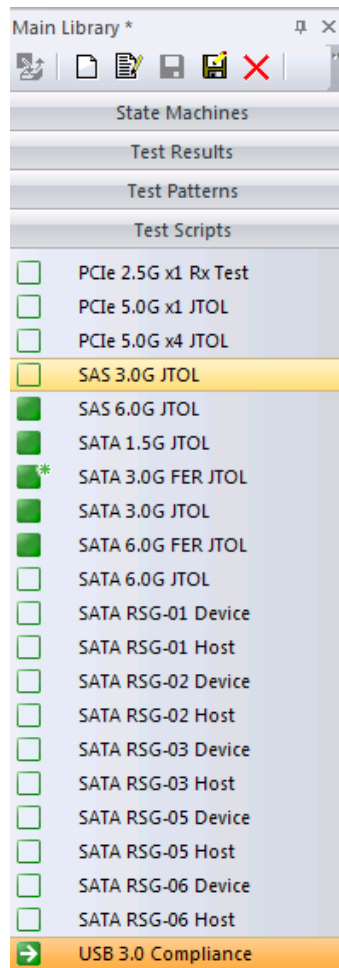


Figure 5.2: Main Library Window - Scripts

## File Menu

The **File Menu** is accessed by clicking the round button in the top left corner of the main application window. Clicking this button produces the display shown on the right, and provides access to the commands **New**, **Import**, **Export** and **Print**.

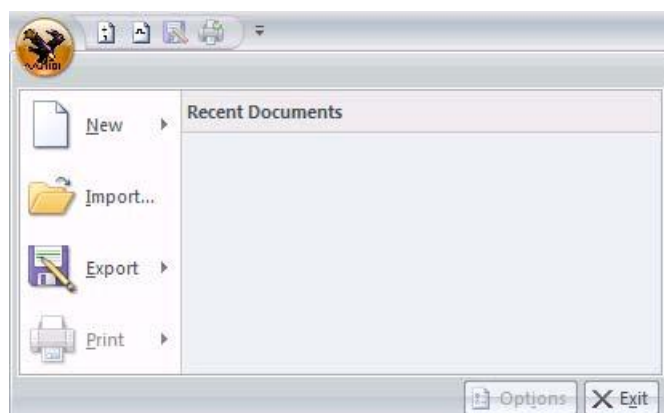


Figure 5.3: File Menu

## New

Hovering the cursor over the **New** icon display a list of commands which include the ability to create a **New Test Script** or to create a **New Test Pattern**. Clicking on these icons will create the appropriate new document in new window in the Test Development section.

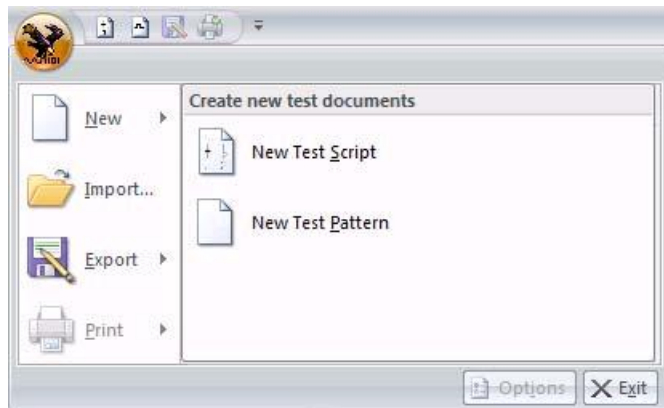


Figure 5.4: Selecting New

## Import...

Hovering the cursor over the **Import** icon will display a tool tip as shown on the right. Clicking the icon will bring up a new window which allows the user to select the file to be imported (see below).

All files to be imported must be XML files, and can include scripts, patterns, test reports that have been exported from other PeRT<sup>3</sup> systems. Imported files can also include license updates, updated binaries, software updates, etc.

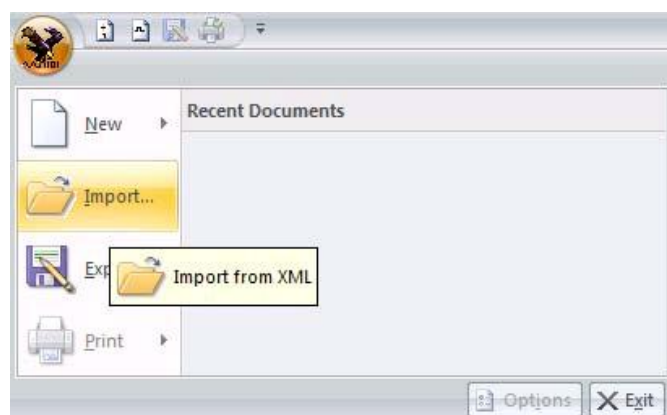


Figure 5.5: Selecting Import

In addition, by modifying the **Files of Type** selection in the bottom field of the window, the user may select calibration files or new firmware files (also formatted as XML files, and designated with the file extensions .CalXML and .eeXML respectively).

Files that are imported are placed into the appropriate library or location on the local server, or, if appropriate, downloaded to the hardware.

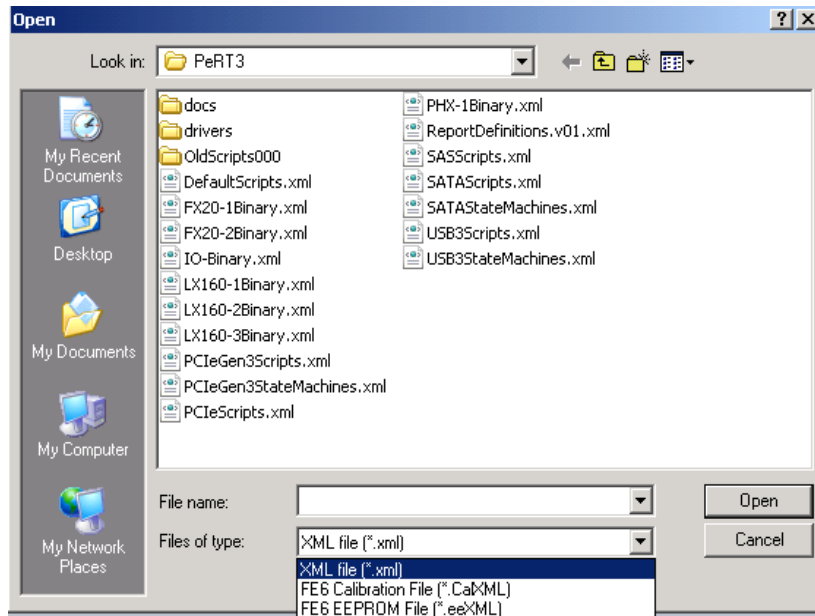


Figure 5.6: Selecting Files

## Export...


The **Export** command is used to export files to be transferred to other PeRT<sup>3</sup> systems. This can include test scripts, patterns and test results. By hovering the cursor over the **Export** icon the following options appear. The user can select to **Export current document** (script, pattern or test result), **Export current database** or **Export result database**. Most files are exported as XML files. When viewing a test result as a graph or spreadsheet, **Export current document** provides additional export formats, including exporting graphs as .jog files or data as .csv files.



Figure 5.7: Selecting Export

## Print

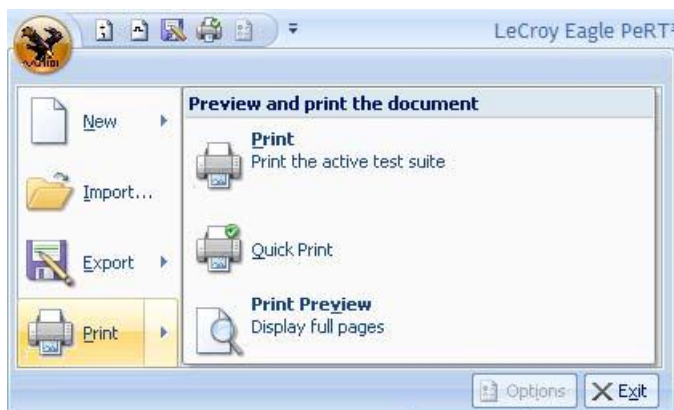The **Print** command can be used to print graphs, test results, scripts, and patterns. Hovering the cursor over the **Print** icon brings up the display shown on the right, allowing the user to **Print** the current document (which brings up a printer dialog to allow the user to select the printer and adjust any settings), **Quick Print** (which sends the file to the default printer using the current settings), or **Print Preview** (to display the document as it is expected to appear when printed).



## Exit

Clicking the **Exit** button in the lower right corner will close the PeRT<sup>3</sup> application. This is equivalent to clicking the red X in the top right corner of the main application window.





# Chapter 6

## Manual Testing

---

The PeRT<sup>3</sup> Phoenix supports the ability to conduct quick manual tests in addition to running pre-programmed test scripts supplied with the system or developed by the user.

Manual testing is controlled by the System Control Ribbon located at the top of the PeRT<sup>3</sup> main application window. Manual testing is a good introduction to how to develop test scripts, since the steps followed are largely the same.

To set up a test, work from left to right across the panels in the **Main** tab, starting with the **PeRT<sup>3</sup>** panel to select the system to be used, then the **Configuration** panel to select the protocol and data rate, followed by the **DUT Initialization** panel to specify the DUT setup and initialization sequences, and finally to the **DUT Status** panel to connect to the DUT.

### System Control Ribbon - Main Tab

If the **Main** tab along the top of the System Control Ribbon is clicked, the ribbon will show a series of five panels, as follows:

#### Master Controls

The Master Controls panel allows the user to specify the test to be run. If a manual test is desired, select **Manual Test** in the drop-down menu (this is the first item on the list). This allows the user to **Start (don't record)**, **Start (record results)**, **Stop** the test, to **Connect** or **Disconnect** from the DUT, and indicates which channels are being tested through the "1", "2", "3" and "4" which function as on-screen LEDs to show which channels are active. Also, the panel shows the status of bit errors encountered on each of the channels while the test is running and allows the user to deliberately inject a bit error (into all active channels) by clicking the button on the lower right. The user can also reset the counters (see [Figure 6.1 on page 48](#)).

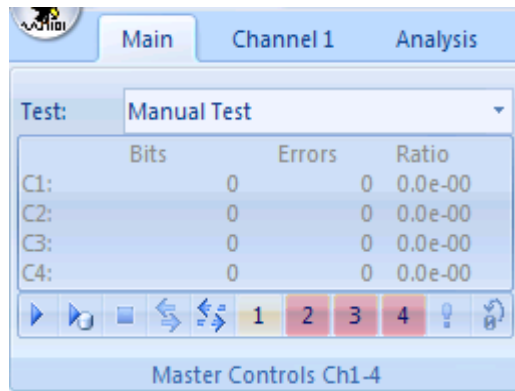
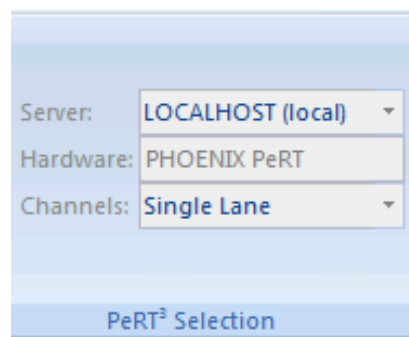


Figure 6.1: Master Controls Panel

**Note:** The difference between **Start (don't record)** and **Start (record results)** is that while running (but not recording results) the system allows the user to change any of the signal or jitter settings while a test is running. This is useful during initial test development to quickly determine how the device under test behaves under different conditions. If results are being recorded, the user may not change test settings without first stopping the test.

## PeRT<sup>3</sup> Selection

The PeRT<sup>3</sup> Selection panel allows the user to specify which PeRT<sup>3</sup> system is to be controlled by this application by selecting either the local host machine or a remote host machine. When the host machine is selected from the drop-down menu, information about the hardware associated with that system is shown in the fields below the system name. In addition, this allows the user to specify the number of channels to be tested (up to the maximum number supported by the hardware configuration).

Figure 6.2: PeRT<sup>3</sup> Selection Panel

## Configuration

The Configuration panel allows the user to specify the protocol to be used during testing, the data rate to be used for the test, whether spread spectrum clocking (SSC) is to be used, and the signal to be applied to the "Clock Out" port located on the front panel.

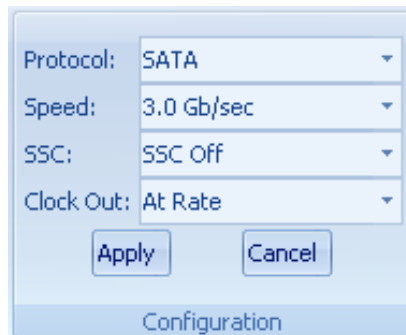


Figure 6.3: Configuration Panel

Allowed values for these fields are:

### Protocol:

**SATA, SAS, PCI Express, USB 3.0, Custom, Generator Only or Receiver Only.** Choose **SATA, SAS, PCI Express or USB 3.0** to test devices which use those protocols. **Custom** may be used for custom protocols that include such things as user-defined DUT initialization sequences and user-defined patterns specific to the user's protocol, or for cables, backplanes and other passive components. The **Generator Only** option is provided to support situations where the user wishes to use the PeRT<sup>3</sup> system as a signal generator but is not returning any signal to the system. In this case, the system will generate a test signal without "connecting" to any device and will not monitor the return channel. The Receiver Only option is provided to support situations where the user wishes to verify that the DUT transmit to the PeRT<sup>3</sup> path is clean and bits are received without errors.

---

**Note:** Changing the protocol selection may require loading new firmware. If so, this may take a few minutes.

---

### Speed:

The PeRT<sup>3</sup> Phoenix supports multiple data rates and typical data rates for selected protocols are displayed in the pull down menu in addition to **Other, External Clock and 8Ghz from PCIe Gen3 ref clock**. For example, if the PCIe protocol is selected, the typical speeds available are 2.5Gb/sec, 5Gb/Sec and 8Gb/sec. If **Other** is selected, the user can define the exact bit rate. Please refer to the specification page of the PeRT<sup>3</sup> datasheet for data rate range and resolution. In **External Clock** mode, the Phoenix generator clock is locked to the clock frequency of **Clock In. 8Ghz from PCIe Gen3 ref clock** is specifically designed to lock to the PCIe Gen3 host system reference clock through the PCIe gen3 compliance PLL settings.

**SSC:**

Controls whether spread spectrum clocking (SSC) is used for clocking the outgoing serial stream.

**Clock Out:**

This controls the Clock Out connection on the front panel of the PeRT<sup>3</sup> Phoenix. The user can select **At Rate**, **100 MHz**, **125 MHz**, **10 MHz** or **Other**. **At Rate** will use the data rate of the system. **Other** allows the user to specify an arbitrary clock out rate. If a rate is selected which is not an integral division of the base rate, the rate will be adjusted to the nearest rate than can be achieved using the clock divider hardware. The Clock Out signal can be controlled further (to introduce delay or jitter) through the Clock Out under the Options tab.

Changing any of these parameters does not change the system configuration until the **Apply** button is clicked. The two buttons (**Apply** and **Cancel**) allow the user to set a complete configuration before applying it to the system.

**DUT Initialization**

The **Initialize** menu provides the ability to select a standard, protocol-specific initialization sequence (such as a pre-defined command to place the DUT into a loopback mode), or to use a custom sequence that has been defined by the user. If a custom sequence is used, the **Sequence** menu allows the user to select a specific sequence from the list of pre-defined test patterns. For example, if the device manufacturer supports a vendor-specific pattern to initiate a loopback test mode, the user can define that Vendor Specific Pattern (using the Pattern Editor — see later section) and select that pattern from the drop-down menu provided.

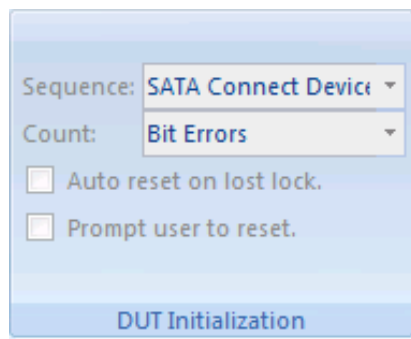


Figure 6.4: DUT Initialization Panel

For certain protocols such as PCIE Gen3, selecting the initialization sequence will open a pop up selection menu (see [Figure 6.5 on page 51](#) and [Figure 6.6 on page 51](#)) with additional options available during the initialization sequence.

Figure 6.5: PCIe G3 Loopback

Figure 6.6: PCIe G3 Loopback EQ

Clicking **Cancel** will close the pop up window, **Reset** will reset all the values to their default, and **Save** will apply the chose values to the initialization sequence.

For specific instructions on how to select the above settings, please refer to the Teledyne LeCroy PCIe Gen3 Compliance test procedure.

The **Count** menu allows the user to choose between counting errors at the bit level (such as is done for standard BER testing), or to count errors at the frame level (so that multiple bit errors occurring within the same frame are counted as a single error).

## DUT Status

The DUT Status panel show the status of the DUT, including whether the loopback mode is currently active. The user can issue manual commands to **Connect**, **Reset** or **Disconnect** from the device by clicking the appropriate button on this panel.



Figure 6.7: DUT Status Panel

## System Control Ribbon -- Channel Tabs

The System Control Ribbon has up to four tabs which correspond to single channels in a four-channel system, labeled **Channel 1**, **Channel 2**, **Channel 3** and **Channel 4**. The numbers of channel tabs that appear will correspond to the number of channels that were licensed at purchase. If more than one channel was licensed, there will also be a **Channel Master** tab. Changes to settings made in the **Channel Master** tab are applied to all available channels, whereas changes made in any individual channel tab are applied only to that specific channel. This allows the user to adjust the test conditions for each channel independently.

If the **Channel Master** tab or any specific channel tab along the top of the System Control Ribbon is clicked, the appropriate Channel controls will appear. The Channel tab contains up to 10 panels, which are used primarily to control the different types of signal degradation which can be introduced into the test signal, and to define (if desired) the ending conditions for the test. The Channel tab appears as follows (for the examples to follow, we will use the **Channel Master** tab, and the individual Channel tabs are identical in operation)

---

**Note:** The Channel Master tab will only appear in multichannel setups which requires multiple Phoenix units synchronized in one setup.

---

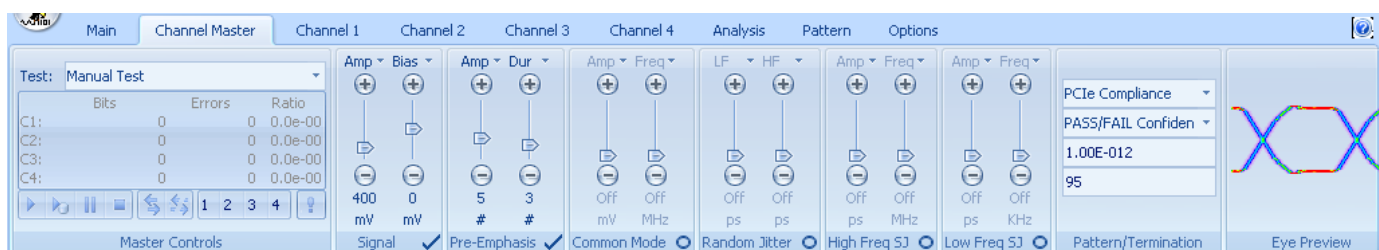


Figure 6.8: Channel Tabs

Once the device has been configured, the user is likely to use the Channel tab(s) in the Manual Test mode to control and modify the test conditions while developing an appropriate test for the device. These tabs allow immediate access to all forms of signal stress that can be introduced and allows the user to quickly experiment with different forms and levels of stress to roughly determine the performance envelope for the device.

Panels that can be accessed from the Channel tabs include the following:

## Master Controls

The Master Controls panel is a duplicate of the panel which also appears in the Main control strip (see section above), and allows the user to **Start (don't record)**, **Start (record results)**, **Pause** and **Suspend** the test, while providing information on bit errors encountered and channels that are active.

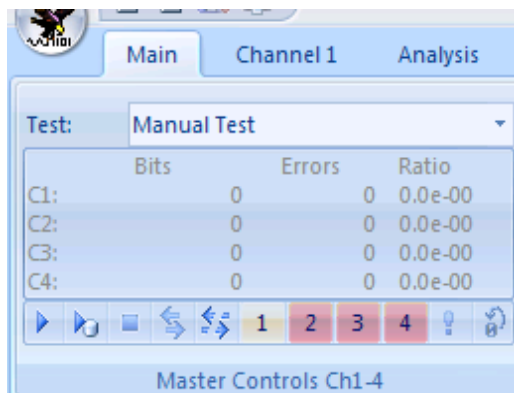


Figure 6.9: Master Controls Panel

## Signal Generation and Introduction of Distortion

The PeRT<sup>3</sup> Phoenix System initially generates a high-quality, low-jitter signal for testing. This signal can be modified by introducing increasing levels of different types of distortion to determine the performance of a transceiver system under stressed conditions. For more discussion of the effects of each type of stress on the signal produced, see Chapter 3, Basic Principles of Operation.

## Overview of Signal Impairment Controls

The signal impairment controls provide extensive capabilities for the user to modify the outgoing serial data signal so as to fully explore the performance envelope of the device under test (DUT). Each control offers sophisticated ability to control a specific variable, and can be used alone or in combination with other variables to produce complex but controlled test scenarios.

The signal controls appear deceptively simple but allow quick access to complex test sequences. Each control has a slider bar that can be used to change the nominal value, with the selected value appearing below the bar. The "+" and "-" buttons can be used for fine tuning the value, or the user can click on the displayed value (such as the "400" displayed to the left in the Amplitude control) and type in a specific value. Typically each

control has a range of allowed values, and if the value typed in is not supported, the closest available value will be substituted.

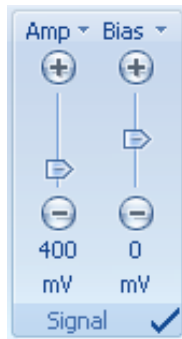


Figure 6.10: Entering Values

An automatic range of values can be very easily defined by moving the slider to the starting value of the range, and then holding down the "Shift" key while dragging the slider to the end value for the range (either from low to high or from high to low). This creates a sequence of values from the starting value to the ending value, with a total of 10 (roughly) equal steps in the range. The range is displayed as shown below (in this example, using 200 as the starting value and 1100 as the ending value).

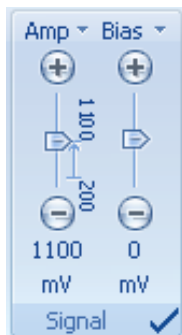


Figure 6.11: Using the Slider

For more exact control of test ranges, to the immediate right of each control heading is a small arrow that provides access to automatic ranges for each control. By clicking this arrow, the screen as shown in [Figure 6.12 on page 55](#) displays. This screen allows the user to enable automated testing of a well-defined range of values, to define the minimum and maximum values of the range, to define whether the range is to be executed from minimum value to maximum value or vice versa, to define the number of steps within the range, or to define custom (unequal or non-sequential) steps for the range. To define a range, click the **Enable Range** box, set the minimum and maximum values, set the number of steps, and click or un-click the **Low to High** box (if un-clicked, the range will run high to low).



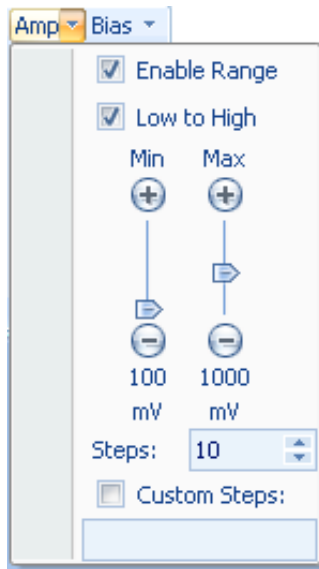


Figure 6.12: Using the Arrow

Once a range has been defined, click outside the range box and the slider bar will now display the defined range as shown below. The minimum and maximum values are indicated and the direction of change is shown by the arrow.

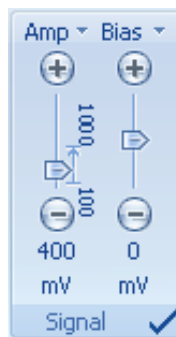


Figure 6.13: Defined range

If custom steps are desired, click the Custom Steps box and type in the values desired, in any sequence desired, separated by commas. For example, you can type "100, 200, 500, 1000, 2000" which produces the display as shown in [Figure 6.14 on page 56](#). You can also type in non-sequential values, such as "100, 1000, 200, 2000, 500" and the steps will be executed as entered.

To delete a range, click on the small arrow to the right of the heading, and un-click the **Enable Range** box, or simply change the setting by moving the slider or clicking the + or - button and the range will be removed.

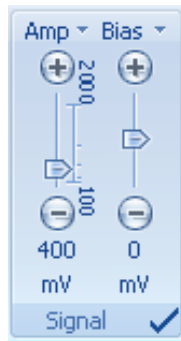


Figure 6.14: Custom Values

An aid to entering and changing values for signal impairment controls can be found by turning on the On-screen Keypad. The On-screen Keypad can be turned on from the **View** panel of the **Options** tab. When turned on, if the numeric value below the slider bar in any control is clicked, the value will be highlighted and the On-screen Keypad will appear as shown below.

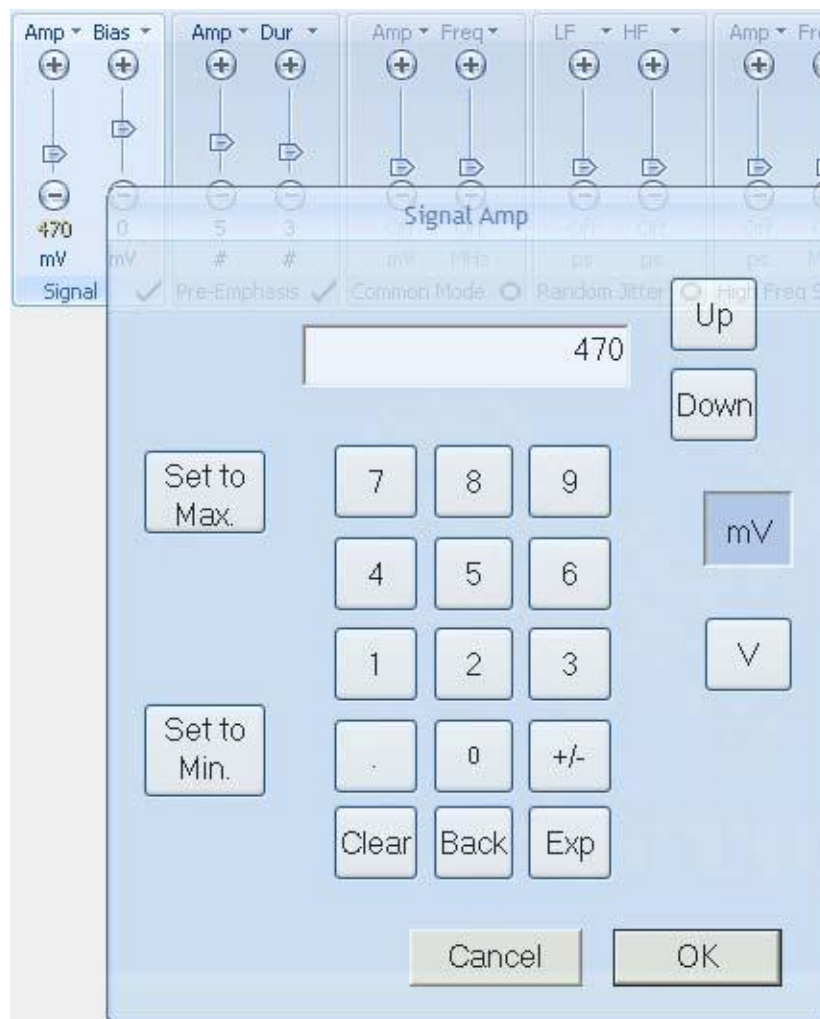


Figure 6.15: On-screen Keypad

## Signal

The **Signal** panel allows the user to control the amplitude and bias of the differential signal. By default, the Signal panel is inactive (turned off) when the system is first turned on, as shown by the circle in the lower right corner of the panel. Before any testing can take place, the user must turn this on (click to change to a check mark) and specify the desired signal characteristics.

Signal amplitude (Amp) can be controlled over the range from 100 mV to 2200 mV in increments of 5 mV. Signal amplitude is the nominal voltage of the differential signal, and is a measure of the overall signal power. Low signal amplitude can be used to test for the limits of receiver sensitivity (additional losses due to connectors and cables should be taken into account). High signal amplitudes can be used to test for receiver saturation or even damage limits to electronics.

Signal bias can be controlled over the range -1800 mV to +1800 mV in increments of 5 mV. Signal bias is the offset (from ground) that is applied to the differential signal, or in other words, the DC component of the signal.

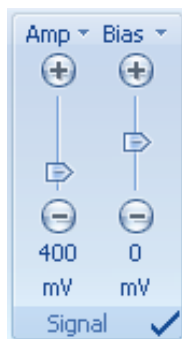


Figure 6.16: Signal Panel

---

**Note:** All signal impairment controls are turned off by default. All controls must first be turned on by clicking the circle in the bottom right corner of each panel. When the control is active, the circle will change to a check mark

---

## De-Emphasis

The Emphasis panel allow the user to control the 3 tap emphasis setting on the transmit signal. The transmit emphasis consisting of De-emphasis and PreShoot. By Default, emphasis is turned off (see [Figure 6.17 on page 58](#)).

De-emphasis (DeE) values can be controlled over the range from -12dB to 0dB with 0.1dB resolution (nominal values) and PreShoot (PreSht) can be controlled over the range 0dB to 9dB with 0.1dB resolution (nominal values). De-emphasis and PreShoot can be added independently for effects of a full bit 2-tap equalizer or be added simultaneously as a full bit 3-tap equalizer. Both values are calibrated based on the PCIE Gen3 Transmitter equalization calibration methodology and should be calibrated before each test based on the channel applied to the test system.

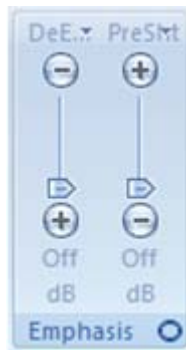


Figure 6.17: Emphasis Panel

### Random Jitter

The **Random Jitter** panel allows the user to introduce and control random jitter into the signal. Random jitter can be low frequency (LF), high frequency (HF), very high frequency (VHF), or a combination of the three. The value selected is the root-mean-square (RMS) of the jitter introduced. For the specific range of the 3 Random jitter types, please refer to the PeRT<sup>3</sup> Phoenix datasheet.



Figure 6.18: Random Jitter Panel

When used in this context, jitter is the variation in pulse position in the time domain. In an ideal jitter-free system, each electrical transition would occur at precise intervals defined by the data rate of the bit stream (e.g., 6 Gb/sec). In practice, there is always some level of jitter as subsequent pulse edges vary slightly from the ideal, and as this variation becomes appreciable relative to the length of each pulse, the receiver has more challenge to correctly determine the value of the bit.

Since random jitter is specified in picoseconds (ps), the degree to which the bit stream is degraded through the introduction of random jitter will also depend on the data rate. For a data rate of 1.5 Gb/sec, the width of each bit is 667 ps, so an RMS jitter of 6 ps would introduce an average variation of approximately 1% of the pulse width (or unit interval). For a data rate of 6 Gb/sec, the pulse width is 167 ps, and the same 6 ps RMS jitter is an average variation of approximately 4% of the pulse width (or unit interval).

The random jitter is generated by a physical noise source with a roughly Gaussian distribution, so while the RMS of the random jitter to 4% of the unit interval, a small number of transitions will have considerably larger jitter. On average one in a trillion

( $10^{12}$ ) transitions will have 14 times as much jitter (or 56% of the unit interval in the case of 4% RMS).

The Low Frequency Random Jitter is generated by passing the random source through a low pass filter as called for in the PCIe compliance specification. The resulting jitter is bandwidth limited and will not necessarily be measured as "random" jitter on many scopes or other jitter measurement tools and packages that define random jitter as jitter with a flat frequency spectrum and use frequency analysis to separate random jitter from deterministic jitter. The High Frequency Random Jitter source, on the other hand, is not frequency limited and will appear as random jitter when measured by such instruments. The Very High Frequency Random Jitter is generated by passing the random source through a bandpass filter as called for in the PCIe Gen3 compliance specification.

### High Frequency Sinusoidal Jitter

The High Frequency Sinusoidal Jitter panel ("**High Freq SJ**") allows the introduction of periodic jitter at controlled frequencies and amplitudes.

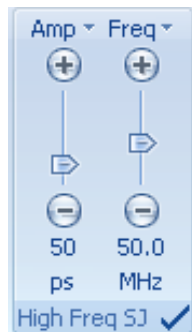


Figure 6.19: High Frequency Sinusoidal Jitter Panel

### Low Frequency Sinusoidal Jitter

Low Frequency SJ extends the lower frequencies range available on the Phoenix. Low Frequency SJ is generated through modulating the clocks, compared to the modulation achieved through the delay line used to generate High Frequency Jitter.

For Jitter range of SJ, please refer to the PeRT<sup>3</sup> Phoenix Data Sheet.

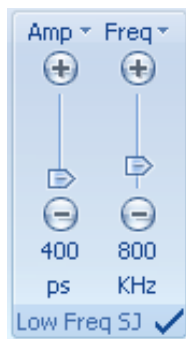


Figure 6.20: Low Frequency Sinusoidal Jitter Panel


High frequency SJ and low frequency SJ can be used in any combination (and also with random jitter) to produce complex yet reproducible jitter scenarios for testing of serial data devices.

The frequency range of Low Frequency Sinusoidal Jitter is typically below the frequency that is tracked out by standard PLLs. This means that typical devices can tolerate Low Frequency Sinusoidal Jitter in excess of several unit intervals. It also means that measurement and calibration of sinusoidal jitter at low frequencies require techniques that take into account the effects of any PLL used to recover the data.

### Pattern/Termination

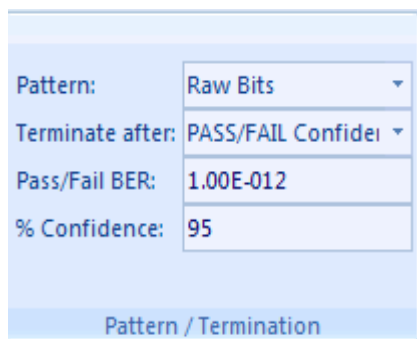The **Pattern/Termination** panel allows the user to define the test pattern to be used during the test, and to define the termination conditions for ending the test.

The **Pattern** is selected from the drop-down menu, and can be any pattern that is supplied with the system or has been created by the user using the Pattern Editor (see later section).



The screenshot shows a software panel titled "Pattern / Termination". It contains four input fields: "Pattern:" with a dropdown menu showing "Raw Bits"; "Terminate after:" with a dropdown menu showing "PASS/FAIL Confidence"; "Pass/Fail BER:" with a text input field showing "1.00E-012"; and "% Confidence:" with a text input field showing "95".

Figure 6.21: Patter Termination Panel

The **Terminate after** field allows the user to select the conditions that will terminate the test. There are fields below the **Terminate after** field which change depending on the selection made in the **Terminate after** field. You can choose from the following options:

#### Run Forever

If **Run Forever** is selected, the test will continue until the user stops the test using the **Suspend** or **Stop** buttons in the **Master Controls**.

#### Max Bit Count

If **Max Bit Count** is selected, the test will continue until the number of Gbits of data specified in the **Max GBits** field has been exceeded. Under nominal conditions, this is equivalent to a fixed time period (that will depend on the data rate selected or negotiated by the system). In the marginal test case where the device under test sporadically loses and regains signal lock, it may take longer to achieve the expected bit count than the equivalent time period. In the event the device totally loses signal lock and stops transmitting, the test case will eventually time out even if the maximum bit count is never achieved.

## Elapsed Time

If **Elapsed Time** is selected, the test will continue for the time specified, then terminate.

## PASS/FAIL Confidence

If **PASS/FAIL Confidence** is selected, the test will continue until the numbers of errors encountered combined with the number of bits processed exceeds a specified confidence level that the receiver is passing or is failing the test. The criterion required (maximum error ratio) is specified in the **Pass/Fail BER** (bit error ratio) field, and the desired confidence level is specified in the **%Confidence** field. Note that when this selection is made, the actual length in time of the test may vary significantly from test to test, since the actual number of errors encountered will affect the number of bits which need to be processed to obtain the desired confidence level that the specification has been met (or has been failed).

## Max Errors

If **Time or Max Errors** is selected, the test will continue until either the time specified is reached or the maximum numbers of errors is exceeded, whichever occurs first.

A screenshot of a software dialog box titled "Pattern/Termination". It contains four input fields: "Pattern:" with the value "CJPAT 1", "Terminate after:" with the value "PASS/FAIL Confiden", "Pass/Fail BER:" with the value "1.00E-012", and "% Confidence:" with the value "95". At the bottom of the dialog is a button labeled "Pattern/Termination".

## Time or PASS/FAIL

If **Time or PASS/FAIL** is selected, the test will continue until either the time specified is reached or the Pass/Fail BER is achieved with the specified confidence level, whichever occurs first.

## Find BER Curve

If **Find BER Curve** is selected, the system will performed an automated jitter tolerance test using a single variable (e.g., HF SJ Amplitude). You can specify the PASS/FAIL BER to be used, and the parameter to be scanned. The system will then automatically scan through the settings of the specified jitter parameter to identify the maximum setting that the DUT can tolerate without exceeding the BER threshold specified.

A screenshot of a software dialog box titled "Pattern/Termination". It contains three input fields: "Terminate after:" with a dropdown menu showing "Find BER curve", "Pass/Fail BER:" with the value "1.00E-012", and "Scan:" with a dropdown menu showing "High Freq SJ Amp". At the bottom of the dialog is a button labeled "Pattern/Termination".

### Other Channel

If **Other Channel** is selected, the test will run on the specified channel until the tests on the other channels that are currently running terminate. Typically you would select this option when doing "victim/aggressor" testing and you want to send a specific pattern on the "aggressor" channels while testing the effects of cross-talk on the "victim" channel. At least one active channel should have a specific termination criteria. Setting all channels to terminate on **Other Channel** would be the equivalent of specifying **Run Forever**.

### Manual Stop Only

If **Manual Stop Only** is selected, the test will run on the specified channel until it is stopped manually.

---

**Note:** The test termination conditions can be channel-specific. If different termination conditions are selected on different channels, the test will continue to run until all termination conditions on all channels have been met.

---

### Eye Preview

The Eye Preview panel provides a calculated simulation of the expected jitter eye diagram as it would be displayed on an oscilloscope. The eye preview is useful for quickly determining the approximate level of signal impairment based on the current system settings (see [Figure 6.22 on page 62](#)).

Note the simulated Eye Preview does not include the affects of low frequency SJ because this affect is typically cancelled out by a PLL and does not generally show up on most scope eye diagrams. Also, including this affect in the calculated eye diagram is generally not useful as it often results in a completely closed eye.

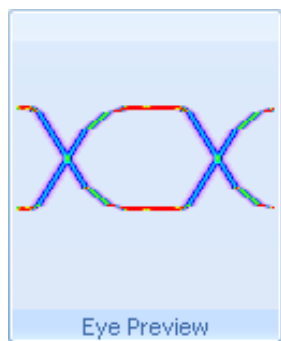


Figure 6.22: Eye Preview Panel

## System Control Ribbon -- Analysis Tab

For discussion of the controls available under the Analysis tab, see [“Analysis and Reports” on page 93](#).



## System Control Ribbon -- Pattern Tab

For discussion of the controls available under the Pattern tab, see [“Creating Test Patterns” on page 83](#).

## System Control Ribbon -- Options Tab

Clicking on the Options tab brings up the following panels:

### Default Settings

The **Default Settings** panel (see [Figure 6.23 on page 63](#)) allows the user to establish the default values that appear whenever a protocol, number of channels, or Host/Device setting is required. Establishing these default values saves the user time in not needing to change values constantly when working on a particular development project.

The **Auto display graph** option, if selected, will result in a new graph being displayed and updated in real time whenever you run a test that records results.

The **Show connect log** option, if selected, will result in a connection log being displayed.

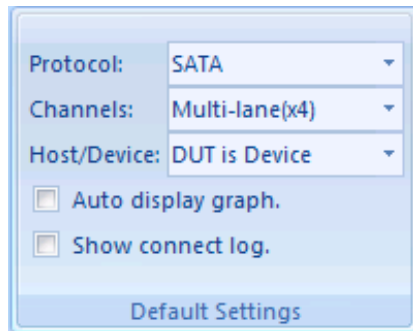


Figure 6.23: Default settings Panel

### Pattern Checking

The PeRT<sup>3</sup> system normally validates patterns to ensure they conform with the specification requirements for the type of testing taking place.

As an example, if testing Frame Error Rate of a SATA device, the pattern must be a valid SATA Frame without any encoding errors and with a correct CRC. If the selected pattern is not a valid SATA frame, pattern checking will detect this and issue a warning and substitute a default pattern that is valid for the specified test mode.

The Pattern Checking panel (see [Figure 6.24 on page 64](#)) allows the user to control what types of pattern checking take place, and in rare instances, to turn off the automatic pattern checking for specific tests. Consider a case in which the user wanted to deliberately send an invalid frame to test the DUT's higher level protocol handling logic. Deliberately sending an invalid frame should result in a 100% frame error rate as the DUT should reject every instance of the frame that is sent. Similarly during SATA bit error ratio testing, the pattern must contain ALIGNs at the proper intervals for the device to work. By

default the PeRT<sup>3</sup> inserts these at the correct interval. But the user may want to disable this feature if the device under test was not working with the standard ALIGN frequency. In such a case the user might still want to test the device by creating their own custom pattern that had more (or less) frequent ALIGNs in them. In that case the SATA align verification could be turned off, and the PeRT<sup>3</sup> would send the pattern exactly as the user specifies it without inserting additional ALIGNs in the pattern specified (the PeRT<sup>3</sup> would still ignore ALIGNs inserted or removed by the DUT for purposes of BER calculation.)

If doing simple BER testing in Custom mode, no pattern validation will take place, because there are no requirements placed on a pattern in Custom mode. There is no need to turn off pattern validation in this case.

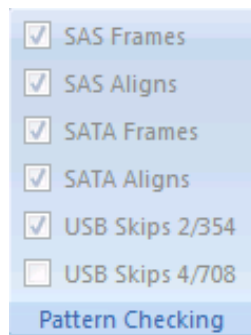


Figure 6.24: Pattern Checking Panel

## External Options

The **External Options** panel allows the user to specify the use of an external switching board and/or an external reference clock.

The **External OOB Board** is a connection board that provides rapid OOB signal switching under the control of the PeRT<sup>3</sup> hardware. The OOB Board connects via the 25-pin auxiliary connector on the lower right of the PeRT<sup>3</sup> Phoenix front panel.

For most applications and devices, the internal PeRT<sup>3</sup> hardware is able to perform OOB signaling. However, some SATA hosts are not compliant with the SATA specification, and for those specific host machines the external OOB board is required in order to use the PeRT<sup>3</sup> to initialize those devices. It is not required for SATA devices, or if testers have external means of putting the SATA host into loopback mode, or if the SATA host adheres to the SATA specifications for loopback.

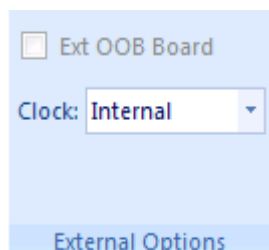


Figure 6.25: External Options Panel

The **External OOB Board** is automatically detected if it is present at start-up. If it is automatically detected, the box will be checked but the control will be disabled (i.e. you won't be able to uncheck the box). You must power down the hardware when connecting or disconnecting the External OOB Board. After powering the hardware back up you will need to reconnect the application to the hardware and the External board setting should be automatically set.

If no board is detected (either because none is present or because in some older systems the hardware doesn't support automatic detection) then the **Ext OOB Board** box will not be checked, but the user will be allowed to check or uncheck it to indicate the presence or absence of the board. If the board is connected it is vital that this box be checked, otherwise signal amplitude and OOB signaling will not function properly.

The **Clock** allows the user to provide an internal or external clock for the system and specify the nominal frequency of this clock signal, which is supplied via the **Reference Clock In** connector on the back panel of the system.

## Rx DFE

The Rx DFE panel is used to apply a 3 tap DFE filter to the signal received at the Error Detector. Typically, it is required that a DUT is able to transmit a compliant Transmit signal to ensure that an open eye is received at the BERT error detector. In the case where the signal passes through a long channel which causes the eye to close, the DFE filter may help to open the eye.

---

**Note:** The built-in DFE features have limitations which are described in the PeRT<sup>3</sup> Phoenix datasheet.

---

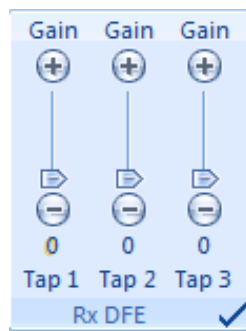


Figure 6.26: Rx DFE Panel

## External Jitter

The **External Jitter** panel is used in combination with the Jitter In connector on the front panel of the PeRT<sup>3</sup> Phoenix system. This allows the user to introduce other sources of jitter, and to control how those additional jitter sources are applied to each channel. The **Main** control acts as a master amplitude control in applying the external jitter across all channels. The individual channel controls allow the user to selectively apply the external jitter to specific channels.

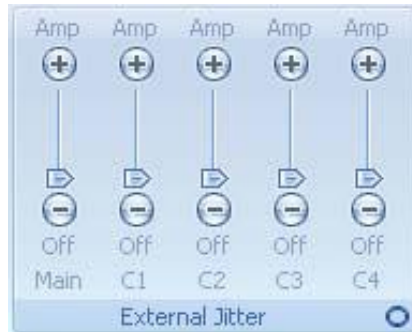


Figure 6.27: External Jitter Panel

## Clock Out

The Clock Out panel controls the Clock Out signal which can be used to control external equipment. These controls allow the user to introduce a delay of 0 to 100 ps, and to introduce a jitter of 0 to 6 ps into the clock signal.

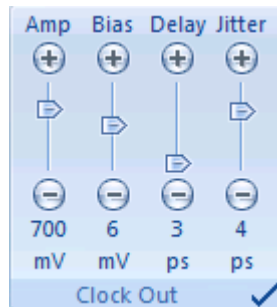


Figure 6.28: Clock Out Panel

## Diagnostics

The Diagnostics panel allows the user to test the operation of system components, including the digital electronics ("Phoenix R-6"), the analog front end ("Phoenix FE-6"), and correct connectivity between the two sections see [Figure 6.29 on page 67](#)). The results of the diagnostics tests are displayed in the Output window.

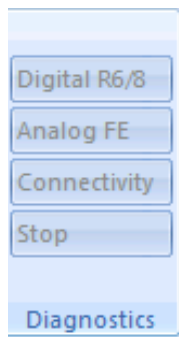



Figure 6.29: Diagnostics Panel

## View

The View panel (see [Figure 6.30 on page 67](#)) allows the user to control whether the Main Library and Output windows are displayed on the screen. Clicking the checkbox next to the window name will display the window on screen. Un-clicking the checkbox (or clicking on the close box  in the top right corner of the window) will hide that window.

Checking the box for the On-screen Keypad displays a numeric keypad.

Checking the box for the View side-by-side displays the open windows side-by-side in the test development pane.

Also in the View panel is the ability to select a color theme for the PeRT<sup>3</sup> application by clicking on the "Style" drop-down menu.

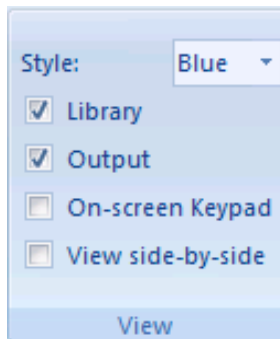


Figure 6.30: View Panel

Clicking on this menu reveals the color theme choices shown in [Figure 6.31 on page 68](#).

The color themes shown are purely for personal preference and result in no change in function for any software selections or commands. The only difference is the appearance of the screens as displayed to the user.


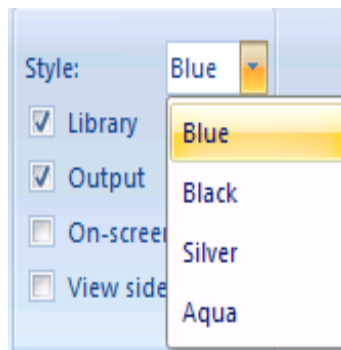


Figure 6.31: Color Options

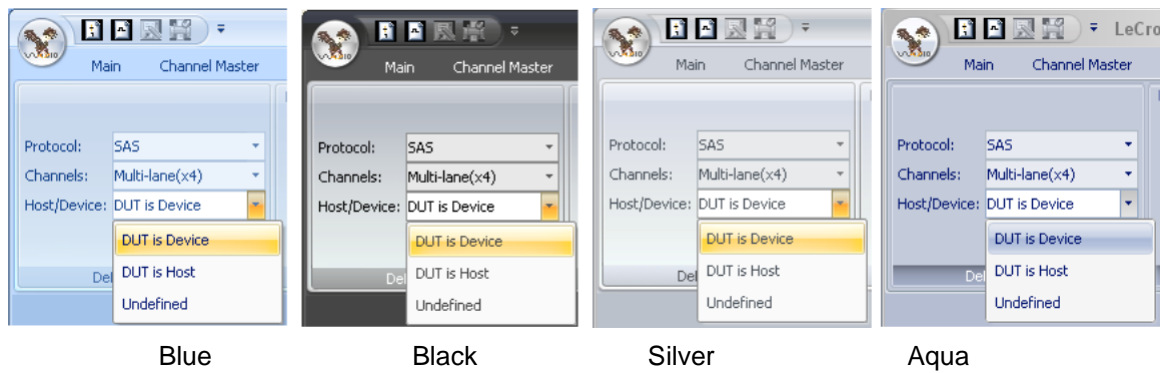Shown below is the same screen displayed in the four different color themes.



# Chapter 7

## Main Library Window

The **Main Library** window provides the user access and control of **State Machines**, **Test Scripts**, **Test Patterns** and **Test Results**.

Each of these libraries can be shown by clicking on the horizontal tab in the window. Clicking on each tab displays a list of available test scripts, patterns or results, and the list can be scrolled using the arrow keys on the right.

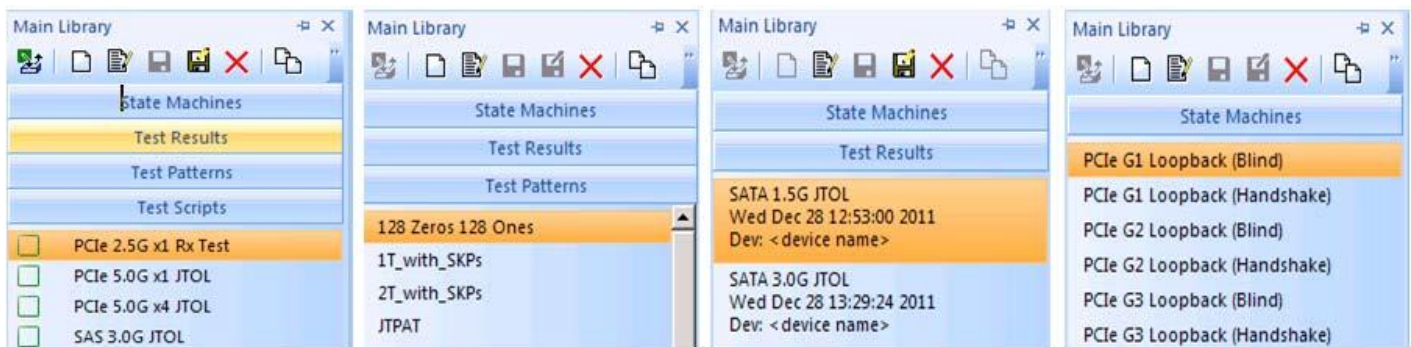




 





Figure 7.1: Main Library

The task bar across the top of the window displays a list of icons, as follows:

## Main Library Toolbar Buttons

	Run Selected Test Script		Delete the Selected Item(s)
	Create a New Item (Script or Pattern)		Make a Copy of the Selected Item(s)
	View/Edit the Selected Item(s)		Filter Which Items are Displayed
	Save the Selected Item(s)		Export the Selected Item(s)
	Rename the Selected Item		

Note that if the **Main Library** window is too narrow to display all available buttons, a small double arrow will appear on the right side of the list of buttons. Clicking this double arrow will provide a drop-down list of the remaining buttons, as shown on the right.

By selecting the appropriate tab (**State Machines**, **Test Scripts** or **Test Patterns**) and then clicking the **Create a New Item** icon, new state machines, test scripts and test patterns can be generated as described in the following chapters.

By double-clicking on the name of a state machine, test script or test pattern, the user can view the script or pattern details and can modify the state machine, script or pattern. By double-clicking on a test result, the user can display test results in the analysis window as a graph or table ([see Chapter 9: Analysis and Reports](#)). Test results can not be modified.

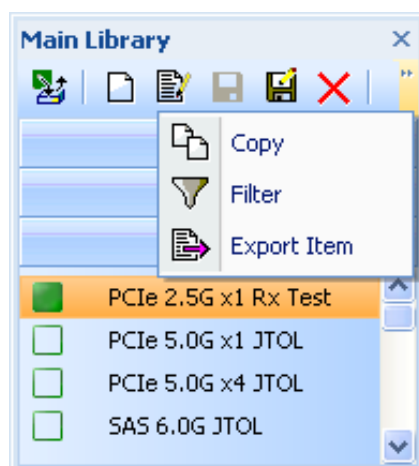


Figure 7.2: Commands



## The Filter Function

The Filter button can be used to control what is displayed in the various tabs (**State Machines**, **Test Scripts**, **Test Patterns**, **Test Results**) of the **Main Library** window. Right-click a state machine, test script, test pattern or test result click the **ellipsis** icon (see Figure 7.3) and select **Filter** to see the available options which are described below.

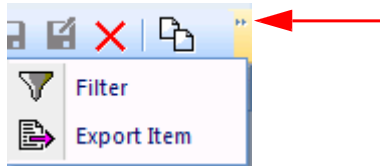


Figure 7.3: Ellipsis Icon

For **State Machines** and **Test Scripts**, the user can select either **No Filter** or **Protocol Specific** filter. Selecting **Protocol Specific** limits the items displayed in the **Test Scripts** section to scripts written for the current protocol. (The current protocol is the protocol selected in the **Configuration** panel of the **Main** tab.)

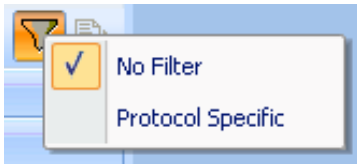


Figure 7.4: Test Script Filter

For **Test Patterns**, the user can select **No Filter**, **Protocol Specific**, or **Allowable Patterns**. If **Protocol Specific** is selected, patterns that have been written for the selected protocol are displayed. If **Allowable Patterns** is selected, patterns that are permitted under the current protocol are displayed. This may include some generic patterns but will exclude patterns that were written for the current protocol but are not valid under that protocol.

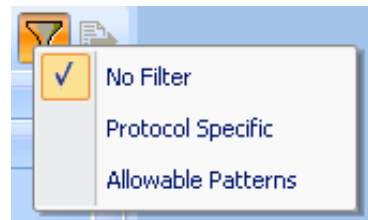


Figure 7.5: Test Patterns Filter

For **Test Results** (see [Figure 7.6 on page 72](#)), the user can select **No Filter**, **Today**, **Last Week**, or **Arbitrary Date**. If **Today** is selected, only test results obtained in the last 24 hours are displayed. If **Last Week** is selected, only test results obtained in the last seven days are displayed. If **Arbitrary Date** is selected, a window will appear to allow the user to select a range of dates.

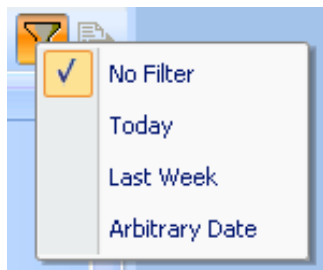



Figure 7.6: Test Results Filter

# Chapter 8

## Creating a New Test Script

A new test script can be created by first clicking on the **Test Scripts** tab in the **Main Library** window, then clicking the **Create a New Item**  icon Create a New Item.

Clicking this icon enters a new item in the list of test scripts (named by default "New Test Suite"), and opens a window in the Test Development portion of the PeRT<sup>3</sup> main application window. This window fills the available area of the PeRT<sup>3</sup> main application window below the System Control Ribbon. See Figure 8.1 below.

**Note:** By default, the **Main Library** window and the **Output** window are "docked" to the side and bottom of the main application window, and the new Test Script window fills the remaining space. If either the **Main Library** or the **Output** windows are undocked and left floating, the new Test Script window will expand to fill that space, and portions of the Test Script window may be obscured by the floating window(s).

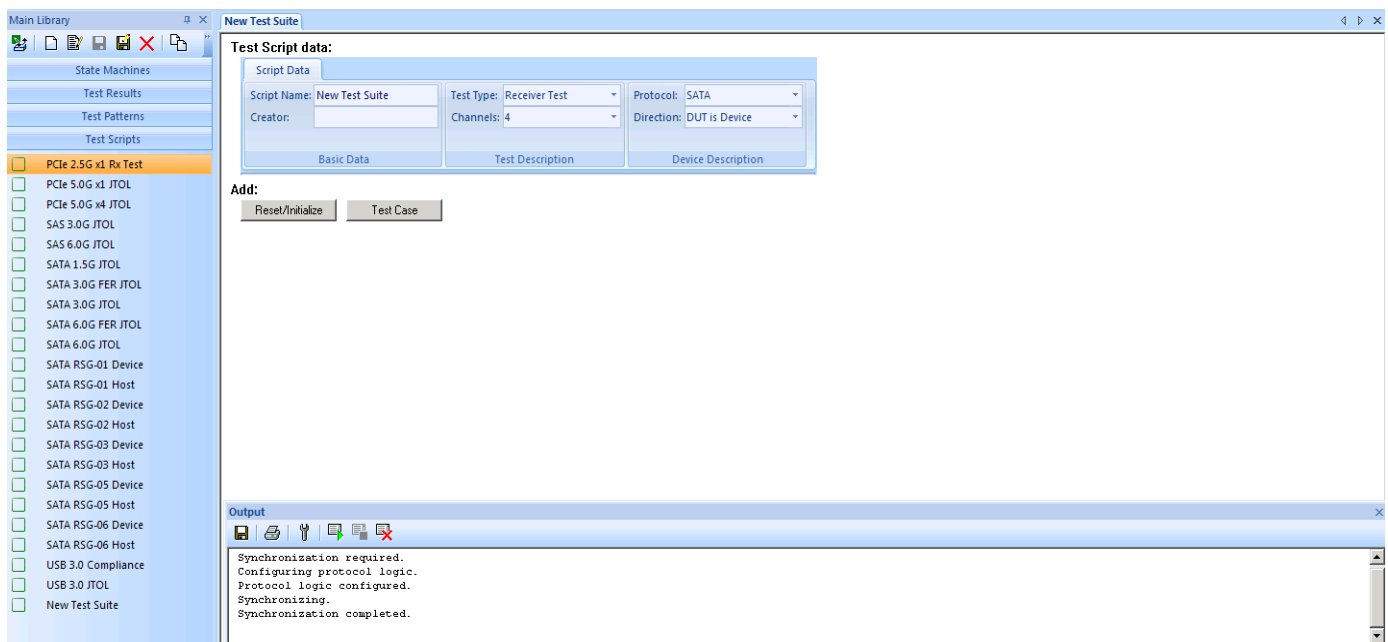


Figure 8.1: Main Application Window

If you are working on a smaller screen, you can create more working space for test script and pattern development by minimizing the **Main Library** and **Output** windows. These windows can both be minimized by clicking the "pin" icons in the upper right of both windows (see the icons at the right below). This will minimize the two windows (the **Main Library** window will flatten to the left side of the main application window, and the **Output** window will flatten to the bottom of the main application window).



Figure 8.2: Main Library and Output Window Pin Icons

### Editing an Existing Script:

Right-click the script and select **Copy**. A new copy of the script with the same name plus a copy is created at the end of the library. Open the new copy and edit it. Right-click on the new script to save or rename the new script.

The resulting main application window displays, shown below, allowing more space for test script and pattern editing.

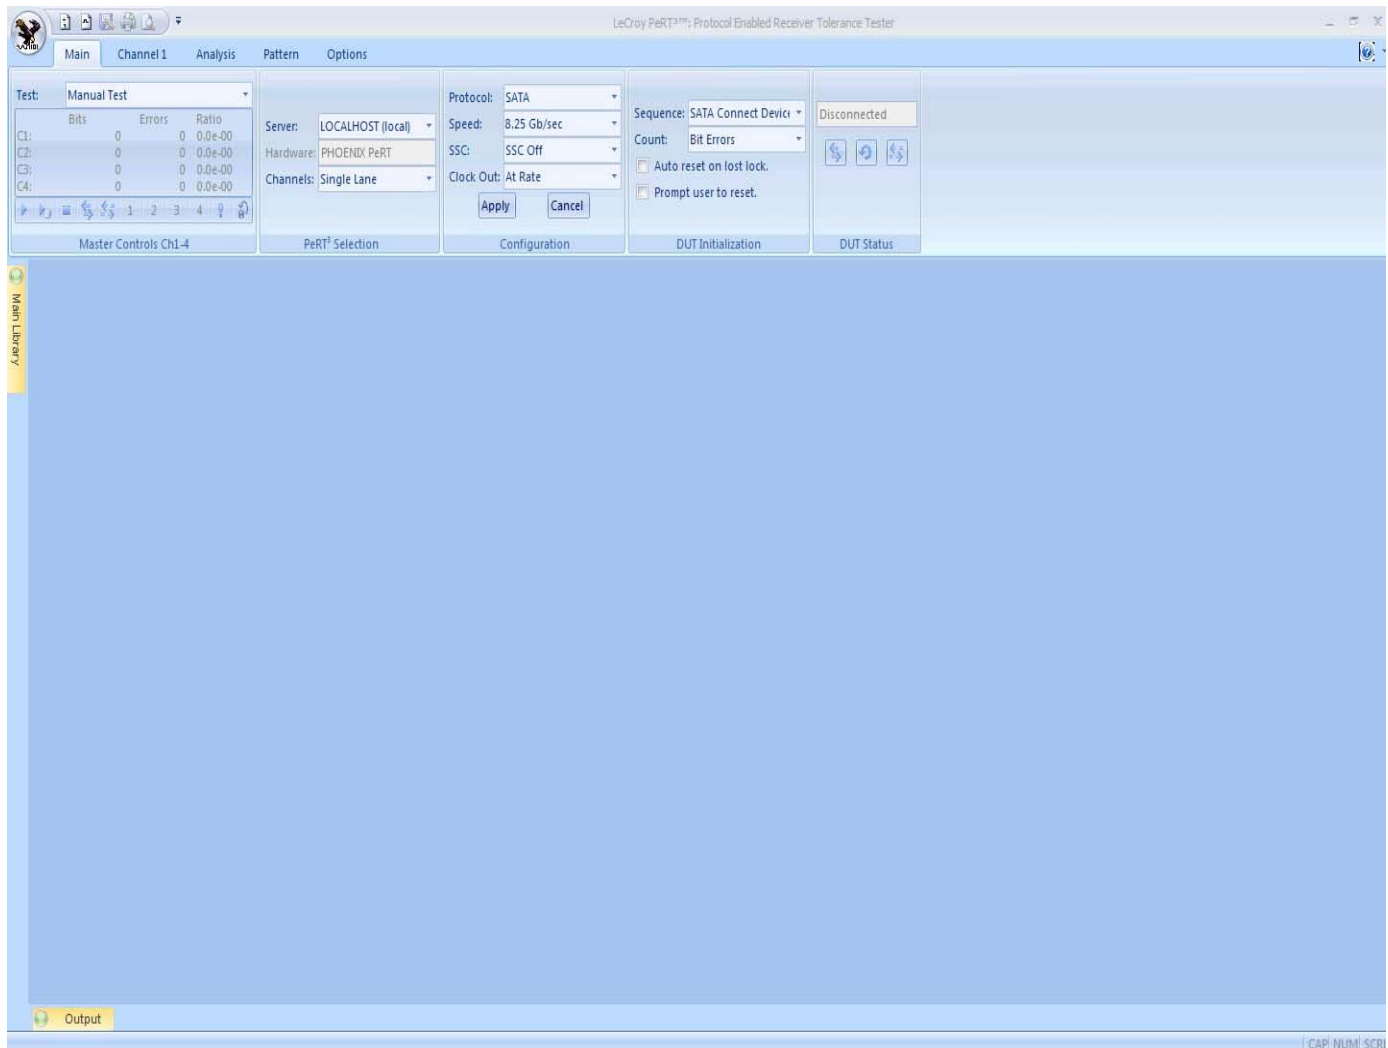


Figure 8.3: Main Application Window

The minimized windows can be temporarily viewed by hovering the cursor over the green button next to the window name, and the window will disappear again when the cursor is moved off the window. To restore the window to normal size, hover the mouse over the green button to make the window appear, and then click the pin icon again.

## Starting a New Test Script

Start a new test script by hovering the mouse over the green button of the **Main Library** window until it displays, make sure the **Test Scripts** tab is selected, and clicking the **New** icon at the top of the window.

These actions display a main application window which looks as follows, providing more visible space for test script development.

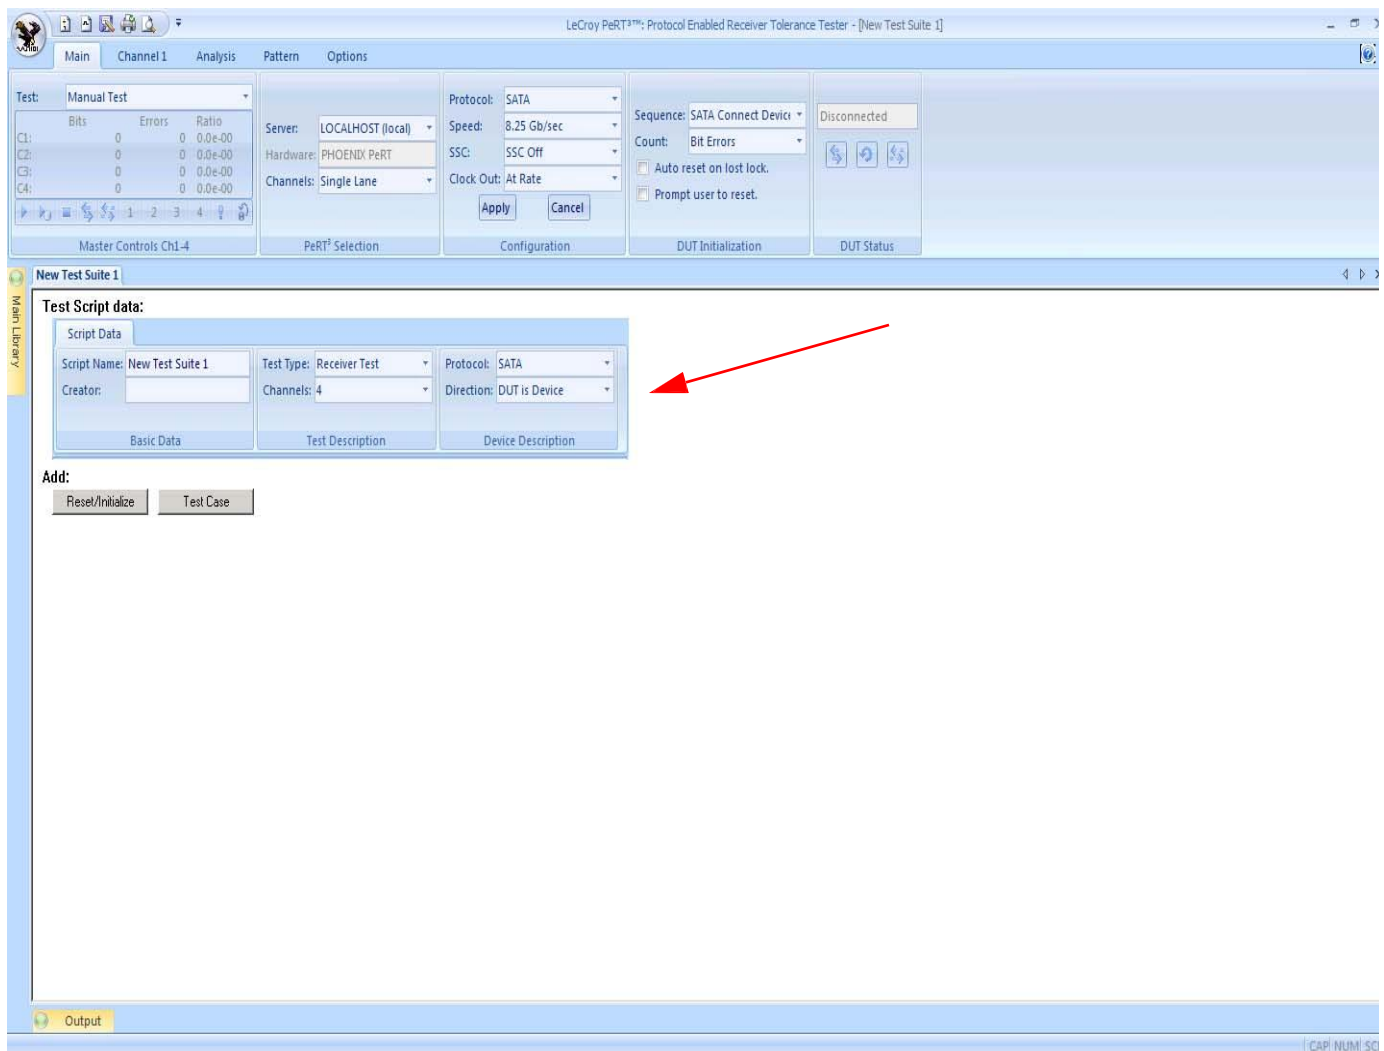


Figure 8.4: Main Application Window Test Script Development Space

## Test Script Data Block

The first block that appears in the new test script window is the header block, named **Test Script Data**. This block contains the **Script Data** tab, which contains three panels, **Basic Data**, **Test Description** and **Device Description**.

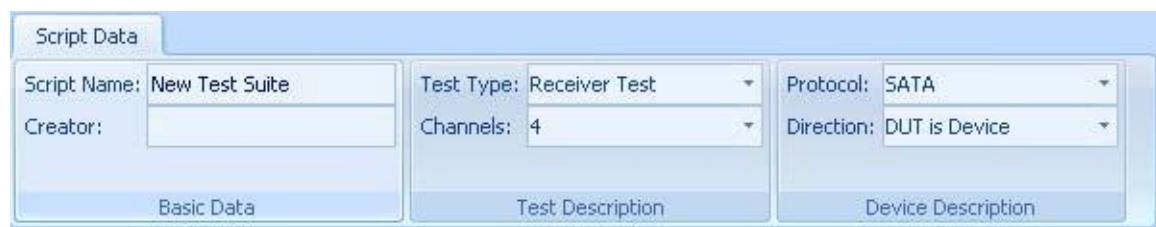


Figure 8.5: Test Script Data

## Basic Data

The **Basic Data** panel allows the user to name the test script and identify the creator of the script by entering this information into the **Script Name** and **Creator** fields. The **Script Name** will be the name listed in the **Main Library** window, under the **Test Scripts** tab, whenever that window is displayed.




The screenshot shows a software interface for the 'Basic Data' panel. It contains two text input fields. The first field is labeled 'Script Name:' and contains the text 'Test Suite #3'. The second field is labeled 'Creator:' and contains the text 'Peter Fletcher'. Below these fields is a blue button with the text 'Basic Data'.

Figure 8.6: Basic Data Panel

## Test Description

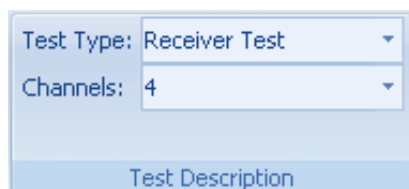The **Test Description** panel allows the user to designate the **Test Type** (either **Receiver Test** or **Production Test**) and number of channels to be tested (from 1 to the maximum number supported by the system hardware). The channels tested will always start with Channel 1 (e.g., if two channels are selected on a system that supports four channels, the channels tested will be Channel 1 and Channel 2).



The screenshot shows a software interface for the 'Test Description' panel. It contains two dropdown menus. The first dropdown is labeled 'Test Type:' and has 'Receiver Test' selected. The second dropdown is labeled 'Channels:' and has '4' selected. Below these fields is a blue button with the text 'Test Description'.

Figure 8.7: Test Description Panel

## Device Description

The **Device Description** panel allows the user to specify the protocol to be used (options are **SATA**, **SAS**, **PCIe**, **USB 3.0**, **Custom**, **Generator Only** or **Receiver Only**) and the direction (**DUT is Device**, **DUT is Host** or **Undefined**).



The screenshot shows a software interface for the 'Device Description' panel. It contains two dropdown menus. The first dropdown is labeled 'Protocol:' and has 'SATA' selected. The second dropdown is labeled 'Direction:' and has 'DUT is Device' selected. Below these fields is a blue button with the text 'Device Description'.

Figure 8.8: Device Description Panel

## Building a Test Script Block-by-Block

Test scripts are built block-by-block through the addition of new blocks. At the bottom of the test script the options to add a **Reset/Initialize** block or to add a **Test Case** block are available.

Add:



Figure 8.9: Options to Build a Test Script

The **Reset/Initialize** block is normally the first block added immediately after the **Test Script Data Panel**, since typically a device first needs to be initialized and placed into the loopback mode prior to any Test Case. However, the **Reset/Initialize** block can also be used at later times during a test script, if the user desires to reset the device prior to the next Test Case or to terminate the testing with a final reset to place the device into a known condition.

The **Reset/Initialize** block may be omitted entirely if the device is going to be manually placed into a loopback mode prior to running the test script.

## Reset/ Initialize Block

The Reset/Initialize Block contains the Device Reset tab, which contains three panels, **Setup**, **Initialization** and **Automation**.

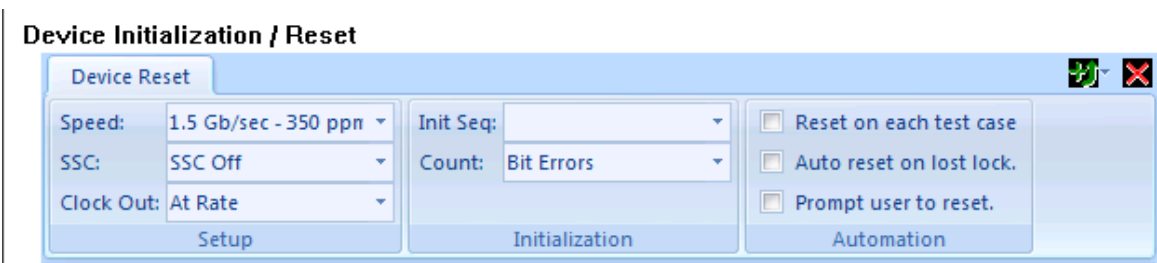


Figure 8.10: Device Initialization / Reset block

## Setup

The **Setup** panel allows the user to specify (or change) the data rate, the use of SSC and the Clock Out settings. Depending on the protocol selected, the options will include all supported data rates.

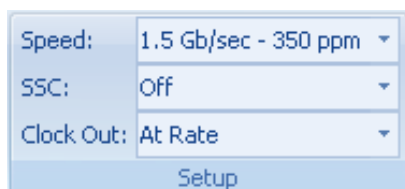


Figure 8.11: Setup Panel



## Initialization

The **DUT Initialization** panel allows the user to select an initialization command sequence. The options displayed here are dependent on the protocol selected, but typically include **Loopback**, **Frame Level**, **Custom**, **None**, **New State Machine**, **Connect Host**, **Connect Device**, **Connect**, **Connect with Options** and **No Init**. **Loopback** will place the DUT into a loopback mode for testing. If no standard "enter loopback test mode" command exists in that protocol, but the device vendor supports a custom command, that command can be entered using the **Pattern Editor** (see [“Creating Test Patterns” on page 83](#)) and then selected from the drop-down menu of existing patterns in the **Sequence** field of this panel. This also allows the testing to change between bit level errors and frame level errors by selecting the desired method from the **Count** drop-down menu.

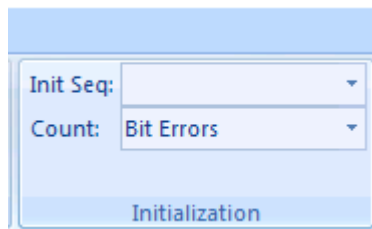


Figure 8.12: Initialization Panel

## Automation

The **Automation** panel allows the user to specify reset conditions that might be required during automated testing. **Reset on each test case** will force a reset each time a new test case begins, **Auto reset on lost lock** will reset the system and attempt to recover the lock when lost and **Prompt user to reset** prompts the user to reset.

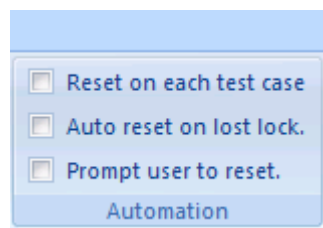


Figure 8.13: Automation Panel

## Receiver Test Case Block

The **Receiver Test** block contains tabs across the top corresponding to channels supported by the system. The **Channel Master** tab controls all channels (if using a single channel system, there will be no **Channel Master** tab, only the **Channel 1** tab will be shown). Click on a specific channel tab to select any of the channels to be tested (limited by the number of channels defined in the **Test Script Data Panel**). Selecting any of these tabs allows the user to specify the test conditions for that specific channel.

Receiver Test:

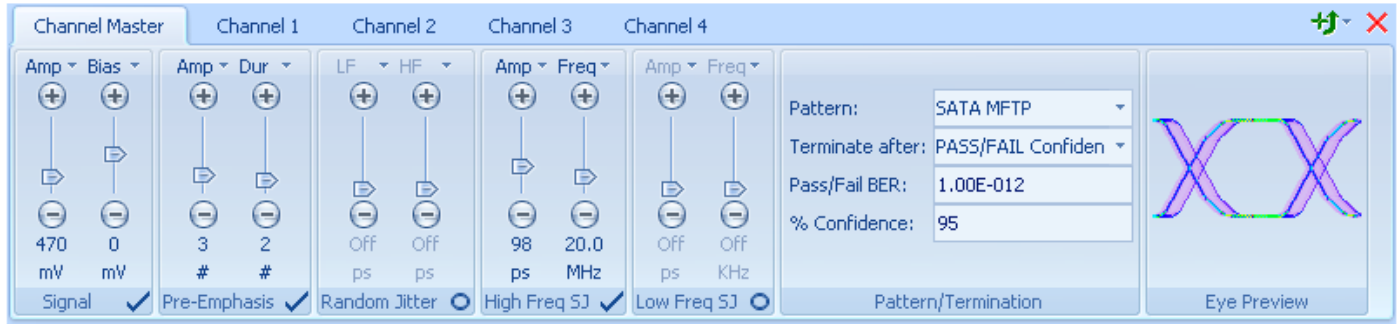


Figure 8.14: Receiver Test Block

Test conditions for channels are defined in exactly the same way as previously outlined under **Manual Testing**, see [“System Control Ribbon -- Channel Tabs” on page 52](#).

A single **Receiver Test** block can be used to test all channels simultaneously by specifying the same (or different) test conditions for each channel, or each channel may be tested in sequence by adding additional **Receiver Test** blocks and defining a test for only one channel in each **Receiver Test** block.

When defining test conditions, the **Eye Diagram** panel serves as a guide to the level of signal impairment being introduced by the conditions specified in this specific test case.

## Adding, Inserting and Deleting Test Cases


Test Scripts are built block-by-block in this fashion by adding new test cases to the end of the script using the **Reset/Initialize** or **Test Case** buttons at the bottom of the script.


Add:




Figure 8.15: Reset/Initialize and Test Case Buttons

New test cases can be inserted at any point in the test script by using the **Insert Above**

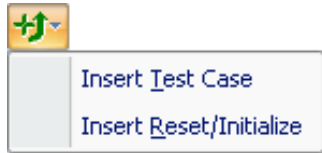button  which is located in the top left of each block. When this button is clicked, the menu shown below displays to allow you to insert either a Reset/Initialize block or a Receiver test case block. By default, the new test case is a copy of the existing test case.



Blocks can be deleted from the script by using the "Delete" button , also in the top right corner of each block.



# Chapter 9


## Creating Test Patterns

---

The PeRT<sup>3</sup> Phoenix System includes a library of predefined test patterns, that for many users may fully satisfy their requirements.

Some users may wish to create additional test patterns or to modify the patterns supplied with the system. A simple example of the need to create a test pattern is when the user's device has a vendor-specific command which is required to place the device into a test loopback mode. In this case, the vendor-specific command can be created using the Pattern Editor and then selected in the **DUT Initialization** panel of the **Main** tab in the System Control Ribbon (see [“DUT Initialization” on page 50](#)).

### Creating a New Test Pattern

A new test pattern can be created by clicking on the **Test Patterns** tab in the **Main Library** window, then clicking the **Create New Item** icon  in the task bar.

When a new test pattern is created, it has certain default characteristics which are determined by the **Default Settings** which are currently set for the system. To change the **Default Settings**, click the **Options** tab on the System Control Ribbon and select the desired values in the **Default Settings** panel. If the default settings are not desired, they can easily be changed by, for example, selecting a different protocol in the **Decode As** field of the **Display Mode** panel of the **Pattern** tab.

It is important to have the **Decode As** field set to the correct protocol for the pattern you are defining. Not only does this dictate how the pattern is displayed in the pattern editor, it also controls how it is sorted and displayed in the pattern picker. When the **Create New Item** icon is clicked, a **Pattern Editor** window displays within the PeRT<sup>3</sup> main application window below the System Control Ribbon. The **Pattern Editor** window has two sections: the upper section displays the actual data pattern being created, and the lower section displays the current data decoded as a protocol primitive or frame using the protocol selected in the **Decode As** field.

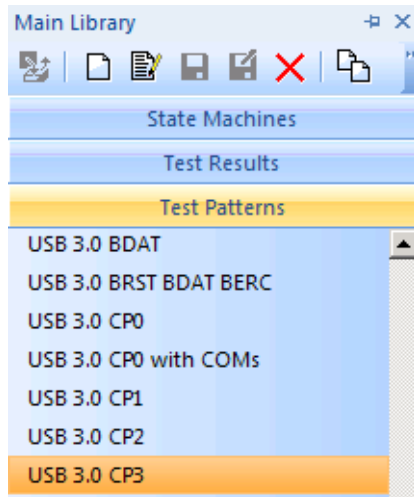


Figure 9.1: Test Patterns Window

To create a new pattern click on the **Pattern** tab in the System Control Ribbon. The display, showing the **Pattern Editor** window and the **Pattern** tab controls, is shown below:

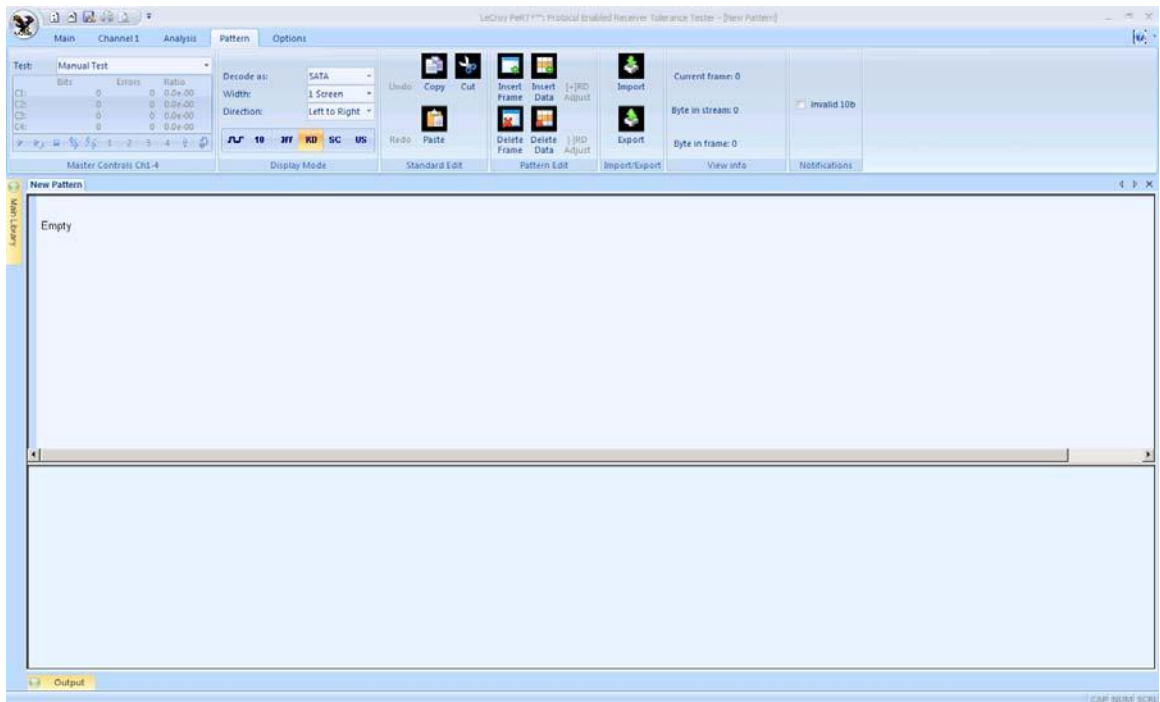



Figure 9.2: Pattern Editor Window

The default name for the new pattern is "New Pattern". This name can be changed by selecting the new pattern in the Main Library (it will be at the bottom of the list) and

clicking on the **Rename the Selected Item** icon  in the **Main Library** window toolbar.

## Pattern Editor Tab Controls

The **Pattern** tab contains seven panels, which allow the user to create new patterns and edit existing patterns. These panels are **Master**, **Display Mode**, **Standard Edit**, **Pattern Edit**, **Import/Export**, **View Info** and **Notifications**. Each of these panels is described below.

### Master Controls

The **Master Controls** panel provides controls to start and stop a test, and to connect and disconnect to the DUT. The four numbered indicators light to show which channel(s) are being tested.

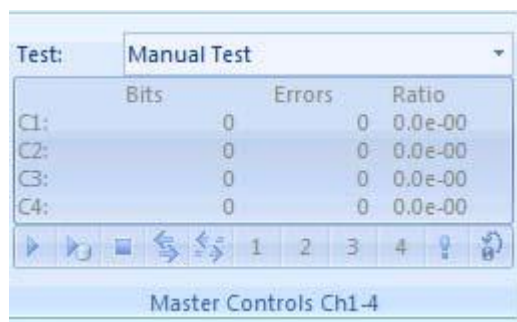


Figure 9.3: Master Controls Panel

### Display Mode

The **Display Mode** panel allows the user to specify the protocol to be used when decoding frames, the width of the data display, the direction for data display, and the format for the pattern data.


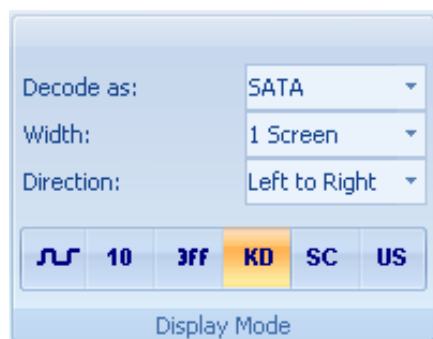


Figure 9.4: Display Mode Panel

There are six different formats that can be used for displaying the pattern data. From left to right in the selection bar, these formats are:

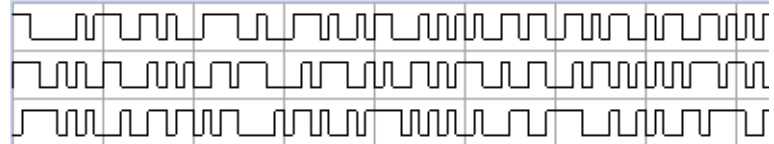Display as a wave form



Display the binary pattern as 1's and 0's



1100000101	1100110100	0111100100	0111010010	1100010101	0100110110	0110101100	1011001101	010
1110010100	1100010101	0011011100	0010111001	0100110101	1100100110	0010110101	0101011101	101
0111101010	0010011011	0101100001	0110100101	1110101010	0100011001	1110001001	0100110111	100

Display the pattern in 10bit data format



+	305	-	334	-	1E4	-	1D2	-	315	-	136	-	1AC	-	2CD	+
-	394	-	315	-	0DC	-	0B9	-	135	-	326	-	0B5	-	15D	+
-	1EA	+	09B	+	161	-	1A5	-	3AA	+	119	-	389	-	137	+

Display the pattern in K/D symbols (default selection)



K28.5	D24.0	D30.0	D01.4	D03.2	D18.6	D22.3	D13.4	D
D08.0	D03.2	D12.3	D20.1	D18.2	D19.6	D20.2	D10.4	D
D30.5	D27.0	D26.7	D22.2	D23.5	D29.1	D07.1	D18.7	D

Display the pattern in scrambled data format



BC(K)	18	1E	81	43	D2	76	8D	.
08	43	6C	34	52	D3	54	8A	:
BE	1B	FA	56	B7	3D	27	F2	.

Display the pattern in unscrambled data format



BC(K)	18	1E	81	81	00	00	00	.
00	00	00	00	00	00	00	00	:
00	00	00	00	00	00	74	04	.



## Standard Edit

The **Standard Edit** panel provides a set of editing tools similar to those found in many applications for simple editing tasks. The tools provided include:

- ☐ Undo
- ☐ Redo
- ☐ Copy
- ☐ Paste
- ☐ Cut

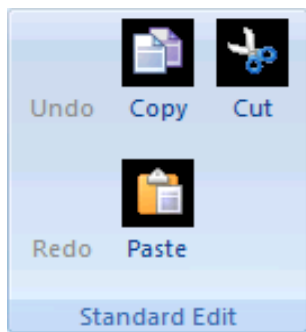


Figure 9.5: Standard Edit Panel

## Pattern Edit

The **Pattern Edit** panel provides the key controls for creating and editing data patterns. These controls include the following:

- ☐ **Insert Frame** (the frame will be structured according to the selected protocol)
- ☐ Delete Frame
- ☐ Insert Data
- ☐ Delete Data
- ☐ **Adjust RD+** (adjusts channel symbols to start with positive dispersity)
- ☐ **Adjust RD-** (adjusts channel symbols to start with negative dispersity)

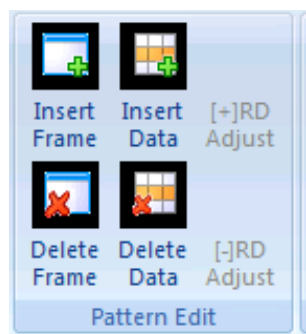


Figure 9.6: Pattern Edit Panel

## Import/Export

The **Import/Export** panel allows the user to import data that becomes part of the pattern being edited, or to export data that is part of the pattern.

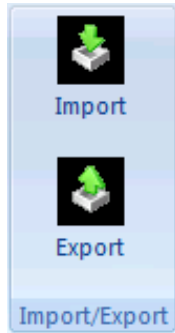


Figure 9.7: Import/Export Panel

## View Info

The **View Info** panel is a status display to help the user navigate through a data pattern. The displays the current location within the pattern in terms of the frame number, the number of bytes into the stream, and the number of bytes into the frame.

## Notifications


The **Notifications** panel allows the user to request notification when an invalid 10b data pattern is part of the current pattern. This is a form of automatic error checking when the user is entering encoded data at the 10b level.



Figure 9.8: Notifications Panel

Once there is some initial data in the pattern, some of these commands can also be accessed by right-clicking the mouse while hovering over a data cell in the data pattern.

## Adding Frames to Patterns

Frames can be added to the pattern by clicking the **Insert Frame**  icon. When this icon is clicked, a library of available frames that are pre-defined for the selected protocol displays.

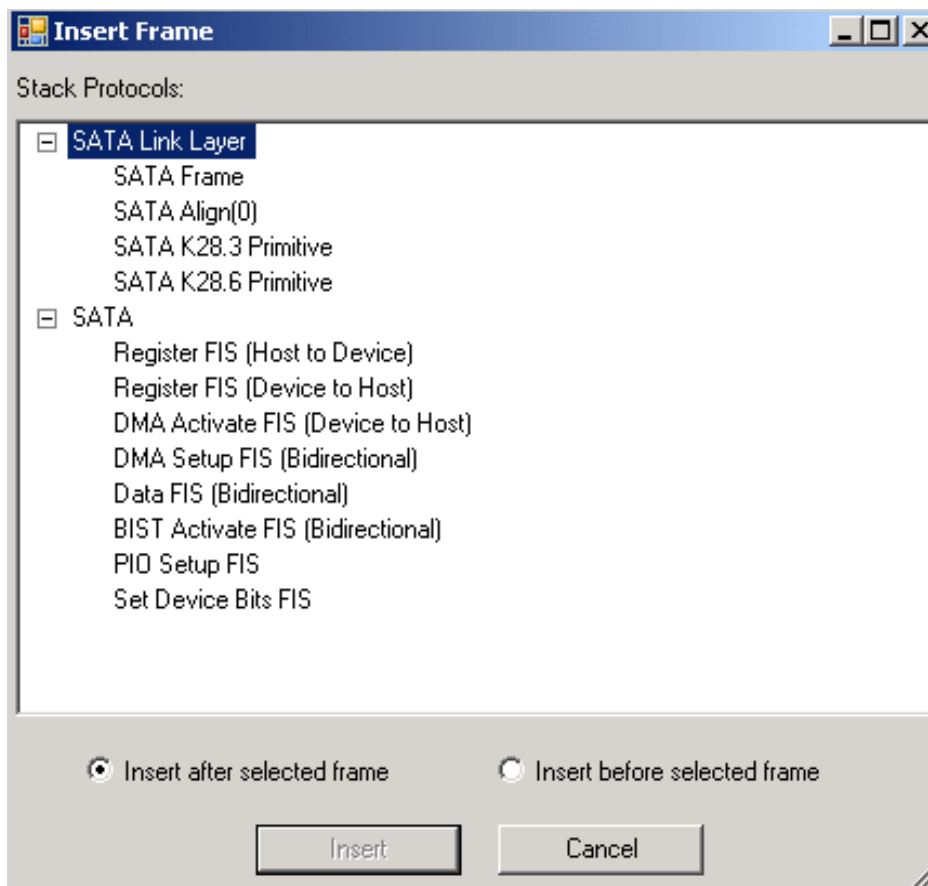


Figure 9.9: Insert Frame Dialog

By clicking on any frame and then clicking **Insert Frame**, the frame is entered into the pattern (see [Figure 9.10 on page 90](#)).

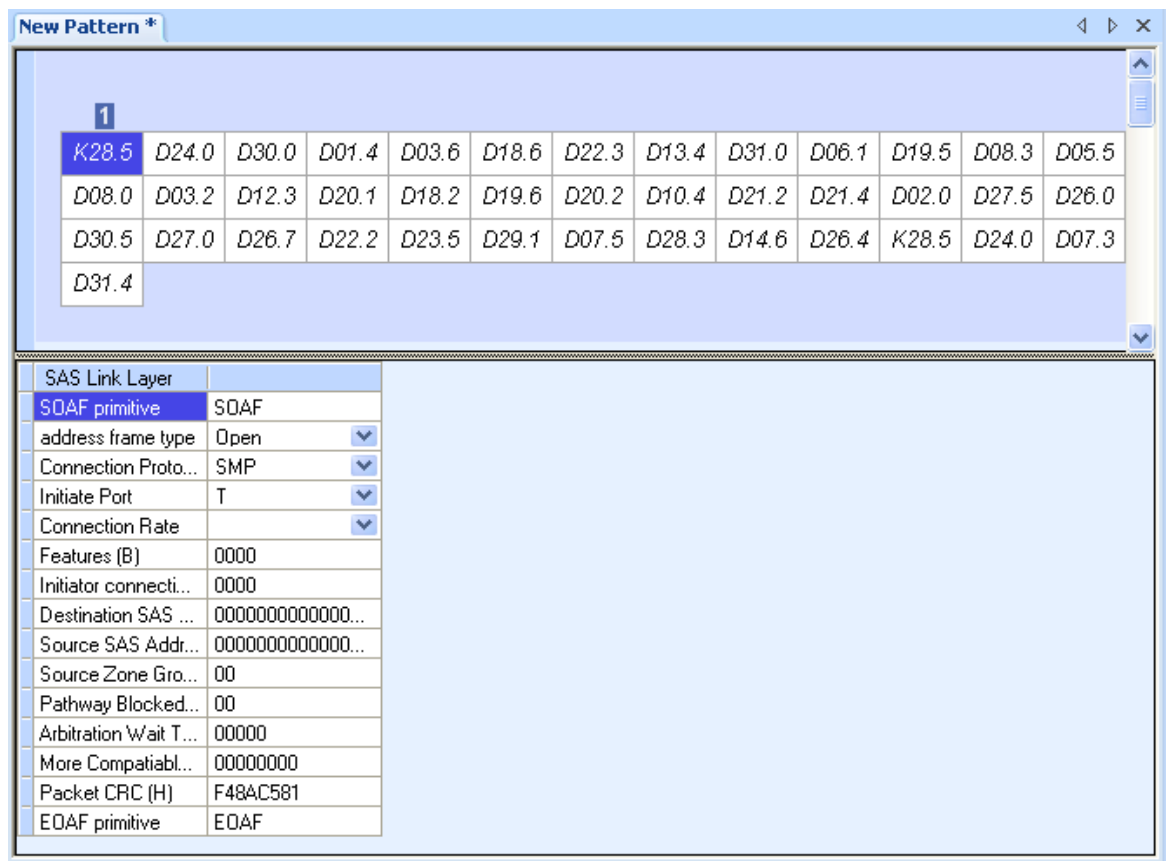


Figure 9.10: New Pattern


The top section of the window shows the actual data (each symbol displayed using the selected display format). The bottom section of the window shows the definition of the frame format. This allows the user to modify the frame by directly entering information into fields of the frame in the bottom section, using either pull-down menus (provided where appropriate) or directly typing in the desired value where appropriate.

When the information in a frame is changed, the CRC which has been calculated is no longer correct. This condition is indicated by the background color changing to red. If desired, the CRC can be recalculated to the correct value by right-clicking on the CRC value and selecting the **Update with the valid value** command which appears. The actual data which is changed is highlighted for a short time in the upper portion of the window.

Packet CRC (H)	63F001DF
----------------	----------

Additional primitives and frames can be added to create a more complex series of commands, all of which are reduced to the appropriate bit pattern which is displayed in the upper portion of the window.

## Adding Data to Patterns

Data can be added to a pattern by clicking the **Insert Data** icon  in the **Pattern Edit**

or by using the **Import Data**  command in the **Import/Export** panel.

Clicking the **Insert Data** icon brings up the following dialog.

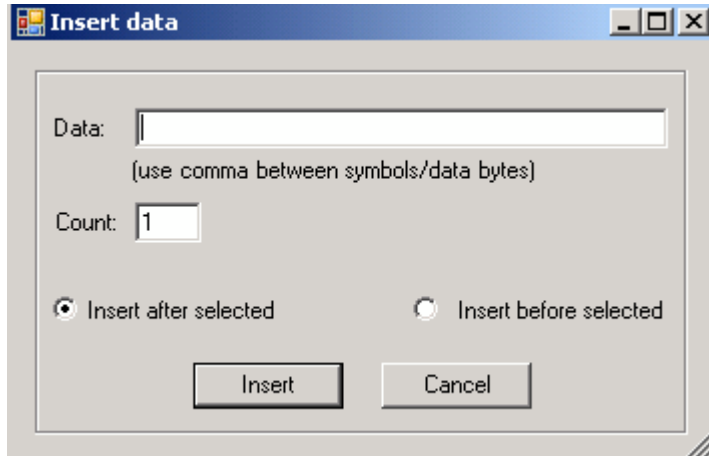


Figure 9.11: Insert Data Dialog

This dialog allows the user to enter a repeated value into the data, with the choice of entering the data either before or after any symbol shown in the data stream.

Clicking the **Import Data** icon brings up the following dialog.

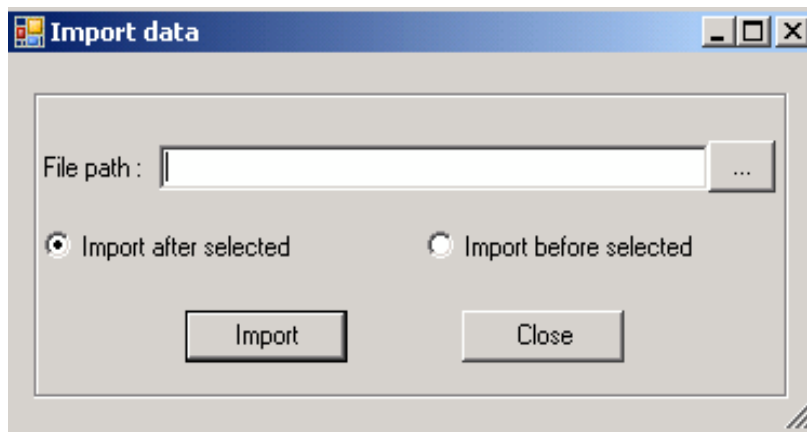


Figure 9.12: Import Data Dialog

By clicking on the "..." button, the user can navigate the file system to locate the data file to be imported, and then click the **Import** button to import the data.

Note that if data is entered outside of a frame, the frame remains intact and the data is simply inserted into the stream between frames. If data is entered inside a frame, the frame structure may be corrupted. This is often indicated to the user by highlighting the CDB (H) field in red with the message "Frame data is incomplete."

## Modifying Data Within a Pattern

The data pattern can be modified directly by double-clicking on the data cell in the top containing that value, then typing in the new value. If in **Waveform**, **Binary (10)**, **KD** or **10bit (3FF)** mode, the new value can be entered directly into the cell. If in **SC** or **US** mode, the user can type the new K-code or D-code values directly into the cell, or use the drop-down menu to get a list of valid values.

Again, if the data is located within a frame, modifications may render the CRC invalid or may corrupt the frame. This will be indicated by the frame summary in the bottom half of the window.

# Chapter 10

## Analysis and Reports

---

A wide variety of different graphs and reports are available to help the user analyze data collected by the PeRT<sup>3</sup> Phoenix Test System. These graphs and reports are selectable under the **Analysis** tab in the System Control Ribbon.

**Note:** During the actual running of a test, the test can be monitored in a variety of ways. A useful way to monitor the results while a test is running is to check the **Auto display graph** box in the **Default Settings** panel under the **Options** tab. This will display the test results as they are being collected, and allows the user to view the results in different formats. Once the test is started, the user can select a different display graph format by clicking on the **Analysis** tab and selecting a different display in the **Graph Type** panel.

---

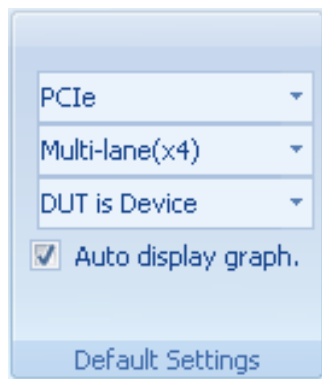


Figure 10.1: Default Settings Panel

### System Control Ribbon -- Analysis Tab

The **Analysis** tab of the System Control Ribbon contains five panels to display test status and to allow the user to examine test data in a variety of ways.

## Master Controls

The **Master Controls** panel under the **Analysis** tab contains the same indicators and controls that are located in the **Master Controls** panel under the **Main** tab.

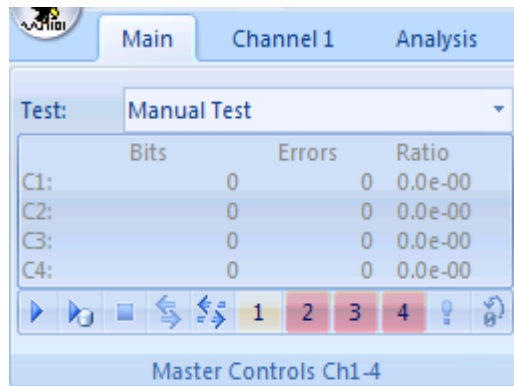


Figure 10.2: Master Controls Panel

## Graph Type

The **Graph Type** panel allows the user to select from a range of charts and reports. These are described in more detail in the following section.

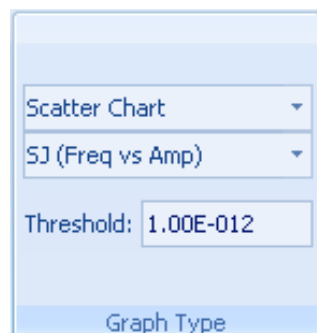


Figure 10.3: Graph Type Panel

## Graph Axes

The **Graph** panel allows the user to select linear or logarithmic scales for both "x" and "y" axes. The default is linear scales for both. To select logarithmic scales, click the appropriate button [either "ln(x)" or "ln(y)"]. The appropriate button will highlight to show that the logarithmic scale is selected for that axis.



Figure 10.4: Graph Panel



Data Ch1-4

The **Data Set** panel allows the user to select between distinct sets of data.

For example, if a JTOL test was run twice while varying the frequency and amplitude of sinusoidal jitter, once with SSC on and a second time with SSC off, this would form two distinct sets of data within the same Test Report. The user would then be able to specify which of the two data sets to graph using the drop-down menu in the **Test Case** field for the channel they want to graph.

The user can also specify which channel data to graph by clicking on the channel select button in the **Data Set** panel (see figure below.)

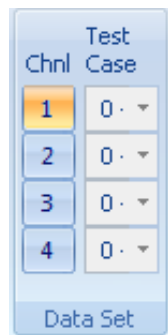


Figure 10.5: Data Set Panel

Signal Parameters

Sig Amp	Sig Bias	DeEmp Amp	PreSht Amp	VHF RJ RMS	LF RJ RMS	HF RJ RMS	HF SJ Amp	HF SJ Freq	LF SJ Amp	LF SJ Freq	SI Amp	SI Freq	SJ#2 Amp	SJ#2 Freq	DM Amp	DM Freq
▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼
▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼
▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼
▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼	▼

Signal Parameters Ch1-4

Figure 10.6: Signal Parameters Panel

When the user selects a specific test case to graph, the **Signal Parameters** panel will display the values of the signal parameters for the selected test case.

Depending on the data contained in the selected test case and how the data is being graphed, the user may be able to further refine what is being graphed. For example, in the case mentioned above of the two JTOL tests, if they are graphed as scatter graphs or two-parameter graphs, selecting the test case will completely specify the graph. However, graphing the same test case as a single parameter graph, such as sinusoidal jitter amplitude vs. BER, specifies a whole range of graphs (one for each sinusoidal jitter frequency) which the user can select between by selecting a specific sinusoidal jitter frequency in the **Signal Parameters** panel.

## Tools

The Tools panel provides a set of tools for examining graphs in detail. The tools include **Region Select**, which allows the user to select a specific region on the chart; **Scroll Graph**, which allows the user to scroll around a magnified graph; **Zoom In** to magnify sections of graphs; and **Zoom Out** to reduce magnification.



Figure 10.7: Tools Panel

When a region of the graph is selected using the **Region Select** tool, the user is given the options of creating a new test script to test just the region selected, to adjust a manual test case to cover just the region selected, or to zoom in to that specific area of the chart.

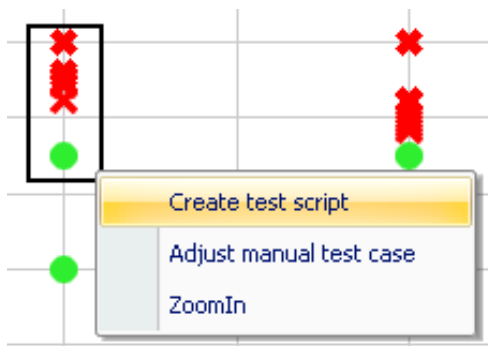


Figure 10.8: Region Select Tool

## Analysis Graph Types

Within the **Graph Type** panel of the **Analysis** tab, there are multiple choices of ways to view your data. Each of these will be demonstrated using an example test, which in this case is a typical jitter tolerance test for a receiver system, for PCI Express over four channels. This test script is called "PCIe 5.0G x4 JTOL". This script determines the performance envelope of a receiver system by testing BER with added signal impairments of high frequency sinusoidal jitter of 1 to 100 MHz at signal amplitudes from 0 to 180 ps. This creates a matrix of individual test cases that collectively describe the performance envelope of the receiver system.

The choices for displaying the data are as follows:

## Log View

This creates a text listing of each specific test case, including the system settings for that test case and the results obtained. In this selection, the remaining fields in the **Graph Type** panel are not used.

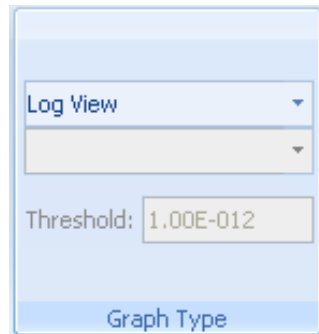


Figure 10.9: Graph Type Panel

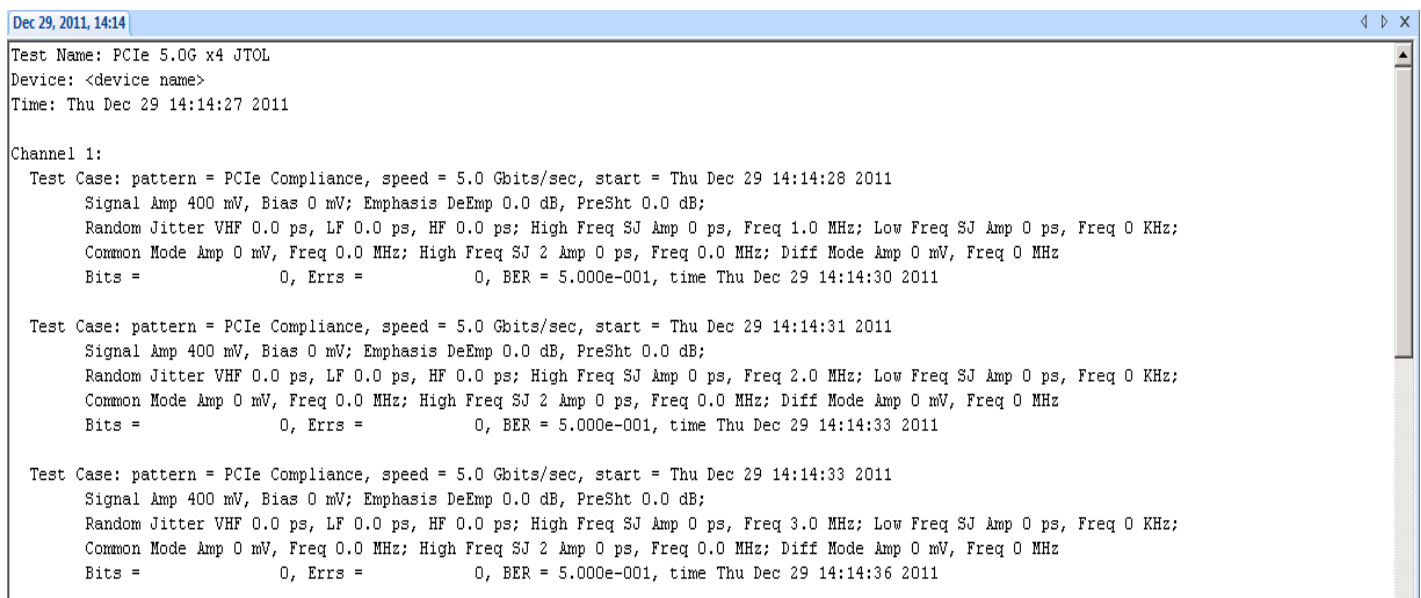


Figure 10.10: Log View

## Spreadsheet View

This creates a text listing, in comma-delimited format, of test settings and results for each test case. In this selection, the remaining fields in the **Graph Type** panel are not used.

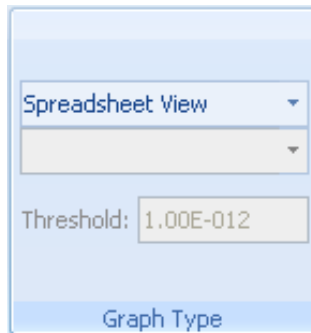


Figure 10.11: Graph Type Panel

The spreadsheet view can be exported as a CSV file suitable for import into Microsoft Excel or any program which import comma delimited files. To export the spreadsheet view, select **Export current document** from the **Export** option under the main file menu (accessible from the round Phoenix button in the upper left corner of the application).

Sep 09, 2009, 11:45

Figure 10.12: Spreadsheet View

## Errors vs. Time

With this selection, a chronological graph shows the errors and BER. Error and BER data is recorded and graphed at the end of each test case, or once per minute during test cases that last more than one minute. There is a horizontal line indicating the BER threshold; the vertical position of this line can be changed by entering a new value into the **Threshold** field. Channels can be added to or removed from the graph by clicking on the channel number(s) in the **Data Set** panel.

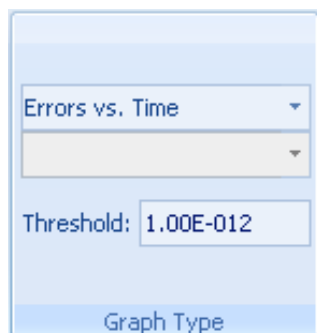


Figure 10.13: Graph Type Panel

When first displayed, the **Errors vs Time** graph defaults to showing all available channels. When switching between graphs, the new view will show just the channel(s) that were being displayed in the previous graph.

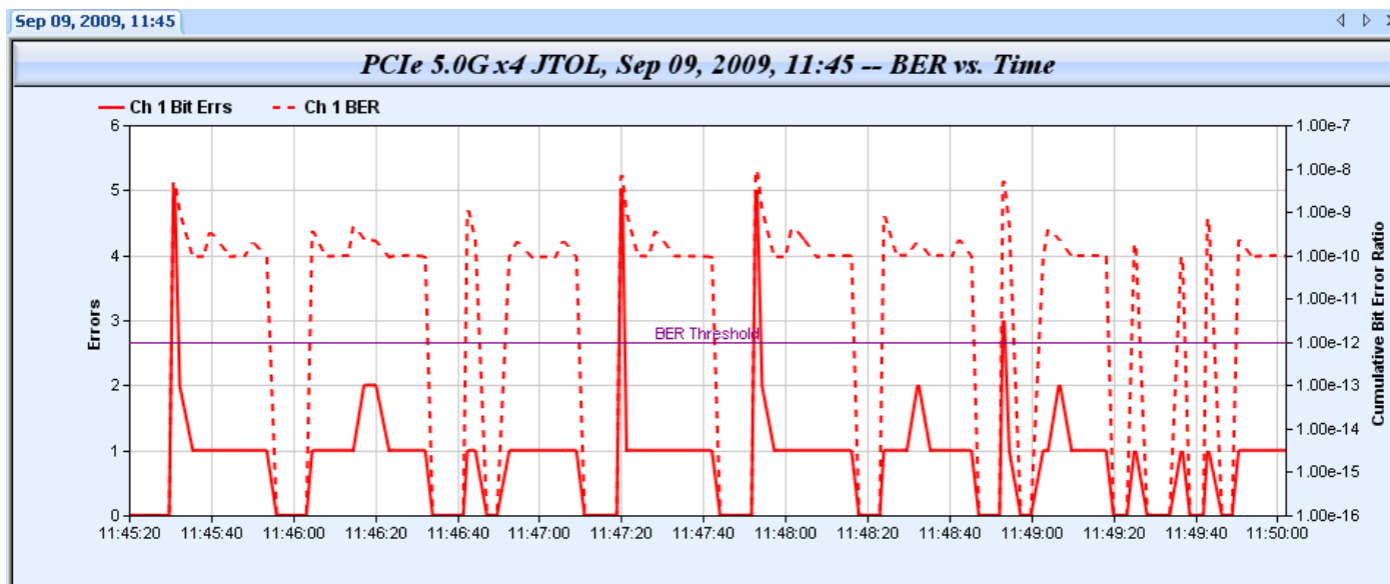


Figure 10.14: Errors Vs. Time Graph

## Single Parameter

This allows a graph of a single jitter or signal parameter variable (selected from a test matrix) vs. BER. Selecting this option allows the user to specify the parameter to be used (the second field in the panel), and populates the **Data Set** boxes to show other parameters tested, allowing the user to specify fixed values of other parameters to select the specific data set of interest. The BER threshold displayed can be changed by typing a new value into the **Threshold** field. Additional channels can be displayed by clicking the channel number(s) in the **Data Set** panel



Figure 10.15: Graph Type Panel


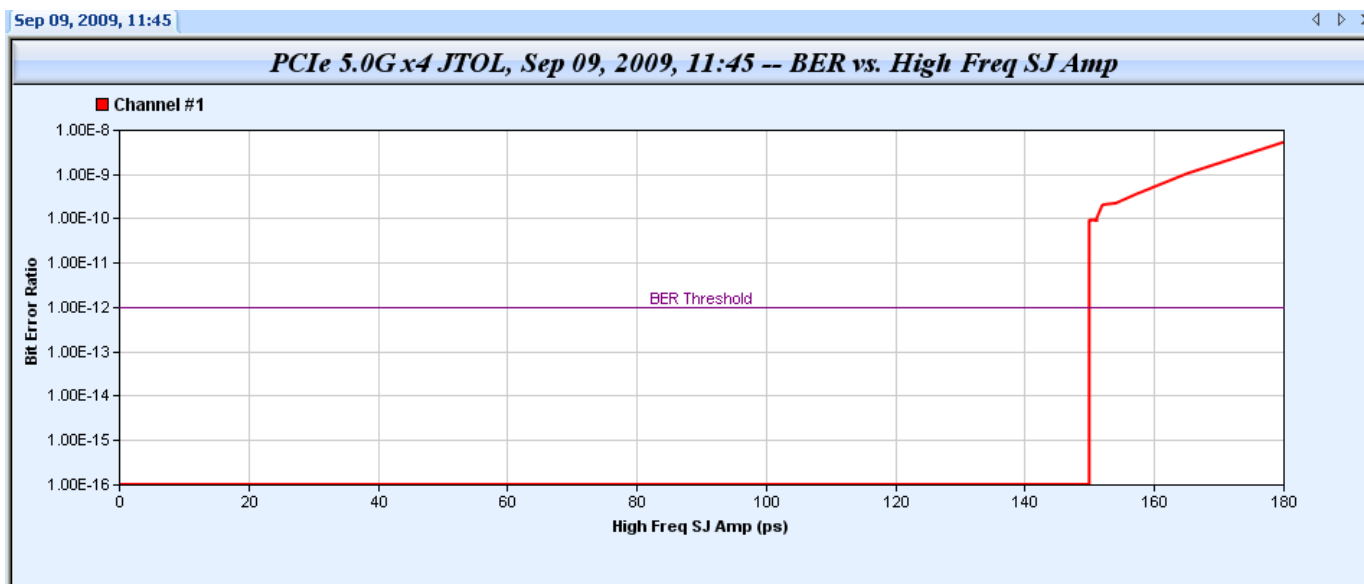


Figure 10.16: Signal Parameters

## Multi Single Parameter

This graph allows the display of multiple values of any single parameter. For example, in the graph shown above (Single Parameter) only one value (1.0 MHz) of the available values for high frequency SJ amplitude. The Multi Single Parameter graph below shows all available values.

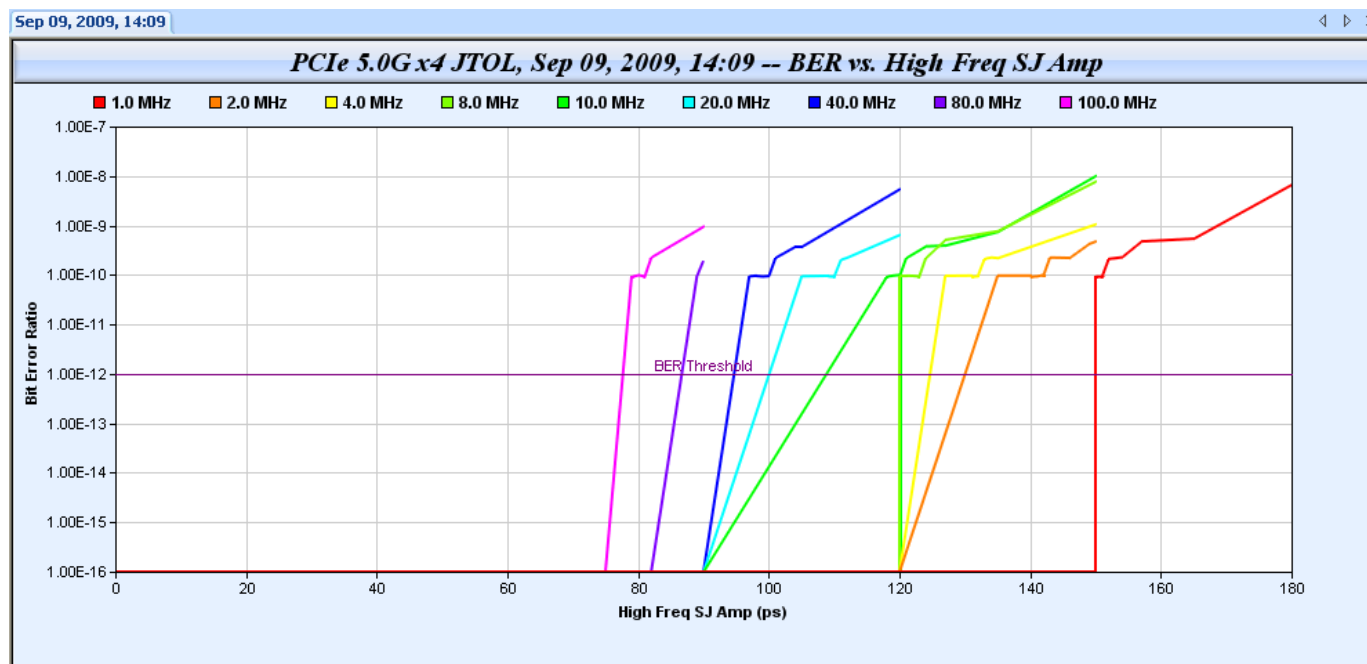

## Scatter Chart

The **Scatter Chart** provides a means of displaying the results of two different variables using the **Threshold** value as a "Go/No-Go" gauge of performance. The second field in the **Graph Type** panel can be used to select which two variables form the axes of the chart, and the **Threshold** value changed to display different settings. If more than two parameters are varied, the nominal settings for other values can be selected from the **Data Set** panel. Only one channel at a time can be graphed, by clicking the channel number in the **Data Set** panel (see [Figure 10.18 on page 102.](#))

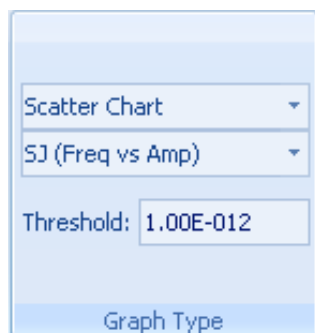


Figure 10.17: Graph Type Panel

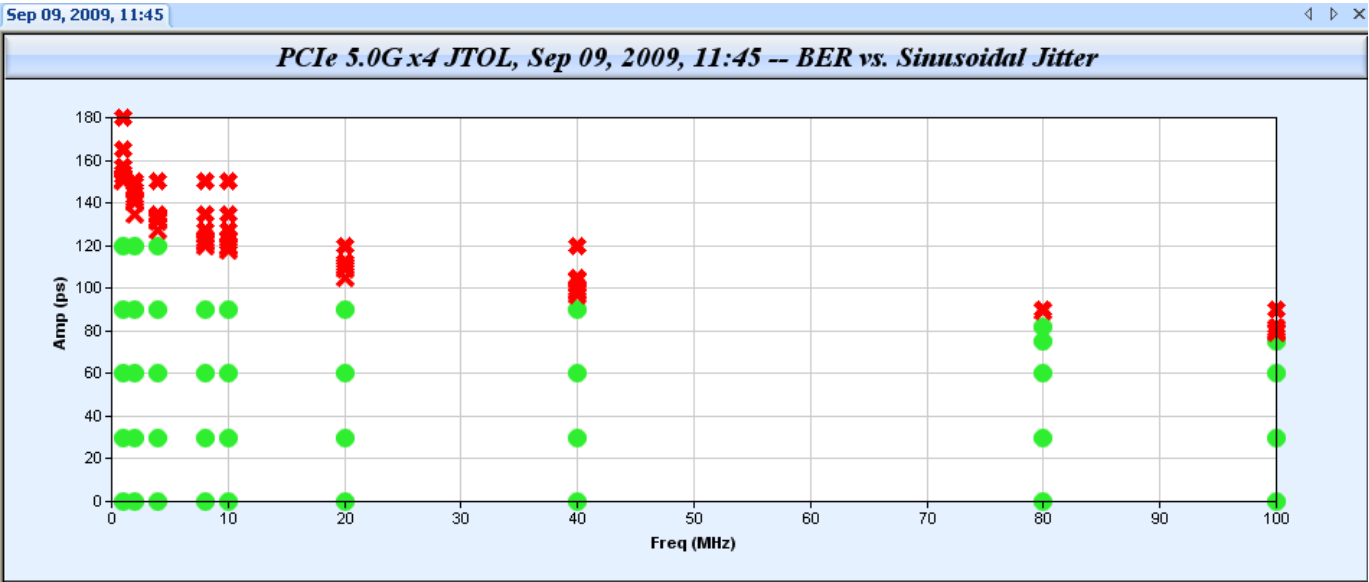


Figure 10.18: Scatter Chart

Adding a Spec Line in a Chart

When the scatter chart/two parameter chart is open, right-click on the chart and select **add spec line**. The chart displays the specification required pass/fail line in reference to different serial data standards and offers a clear view of the test spec margins during jitter tolerance testing. See the following figure.

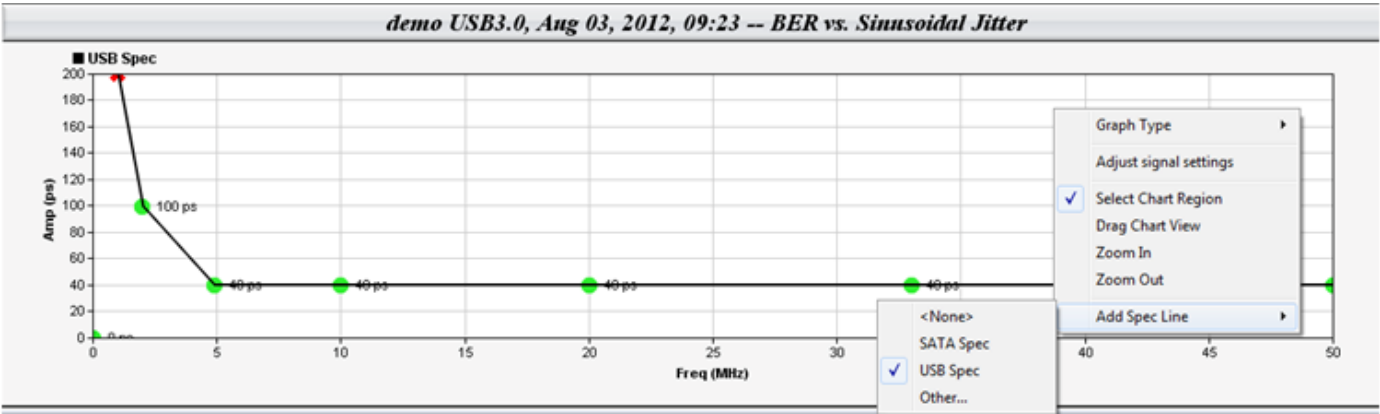


Figure 10.19: Scatter Chart with Spec Line



# Chapter 11

## Control of Screen Appearance

---

The PeRT<sup>3</sup> application allows the user to customize the appearance of the main application window to suit that user's preferences and application. As settings are changed, the application will remember the new settings, and the next time the application is launched the windows will reappear in the same locations as previously defined.

### Customizing the Quick Access Toolbar

The Quick Access Toolbar is a series of icons that appear (by default) just above the System Control Ribbon, at the top of the application. By default, the Quick Access Toolbar includes the commands **File** (the round Eagle button), **New Test Script**, **New Test Pattern**, **Export Current Document**, and **Quick Print** and displays as follows.

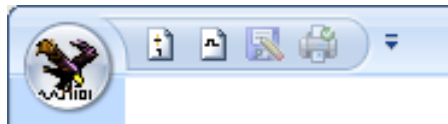


Figure 11.1: Quick Access Toolbar

"Tool Tips" are supported throughout the PeRT<sup>3</sup> application and can provide a short cut reminder of the meaning of different icons. By hovering the mouse pointer over the icon for 1-2 seconds, the tool tip will display.

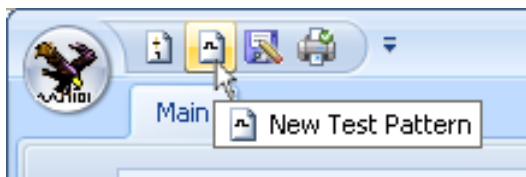









Figure 11.2: Tool tip

The Quick Access Toolbar can be customized to support any of the following functions.

### Quick Access Toolbar Buttons

	<b>New Test Script:</b> Creates a new Test Script		<b>Print Preview:</b> Provides a preview on screen of the information to be printed
	<b>New Test Pattern:</b> Creates a new Test Pattern		<b>Quick Print:</b> Prints the current document directly to the default printer
	<b>Export Current Document:</b> Saves the current document as an XML file		
	<b>Import from XML:</b> Imports a test view previously saved as XML file		
	<b>Options:</b> Brings up the Options tab (same as pressing the Options tab in the System Control Ribbon)		

The Quick Access Toolbar can be customized by clicking on the small arrow that appears immediately to the right of the icons displayed in the Toolbar. Clicking on this arrow brings up the following display.

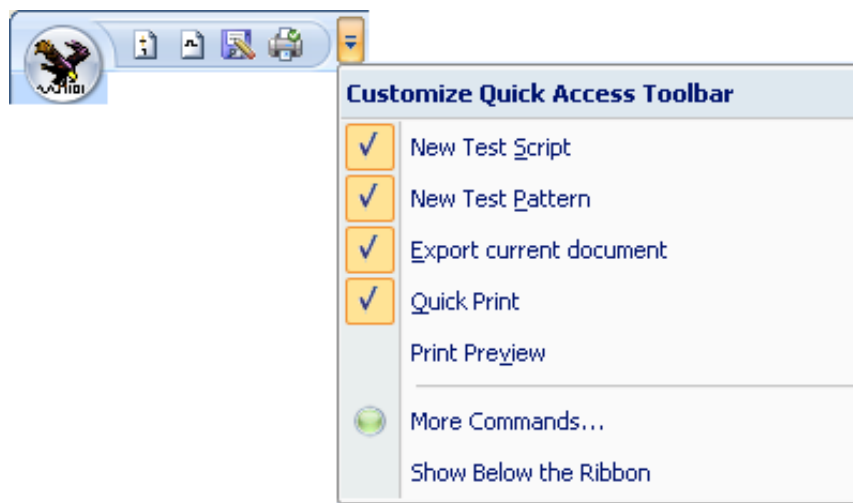


Figure 11.3: Customize Quick Access Toolbar Dialog

The commands **New Test Script**, **New Test Pattern**, **Export Current Document**, **Quick Print** and **Print Preview** can be added or deleted from the Quick Access Toolbar by clicking on the check-mark to the left of the command.

Also, this display allows you to add additional commands (see below) and also to position the Quick Access Toolbar either above (default location) or below the System Control Ribbon.

Clicking on the green button next to **More Commands** brings up the Customize dialog.

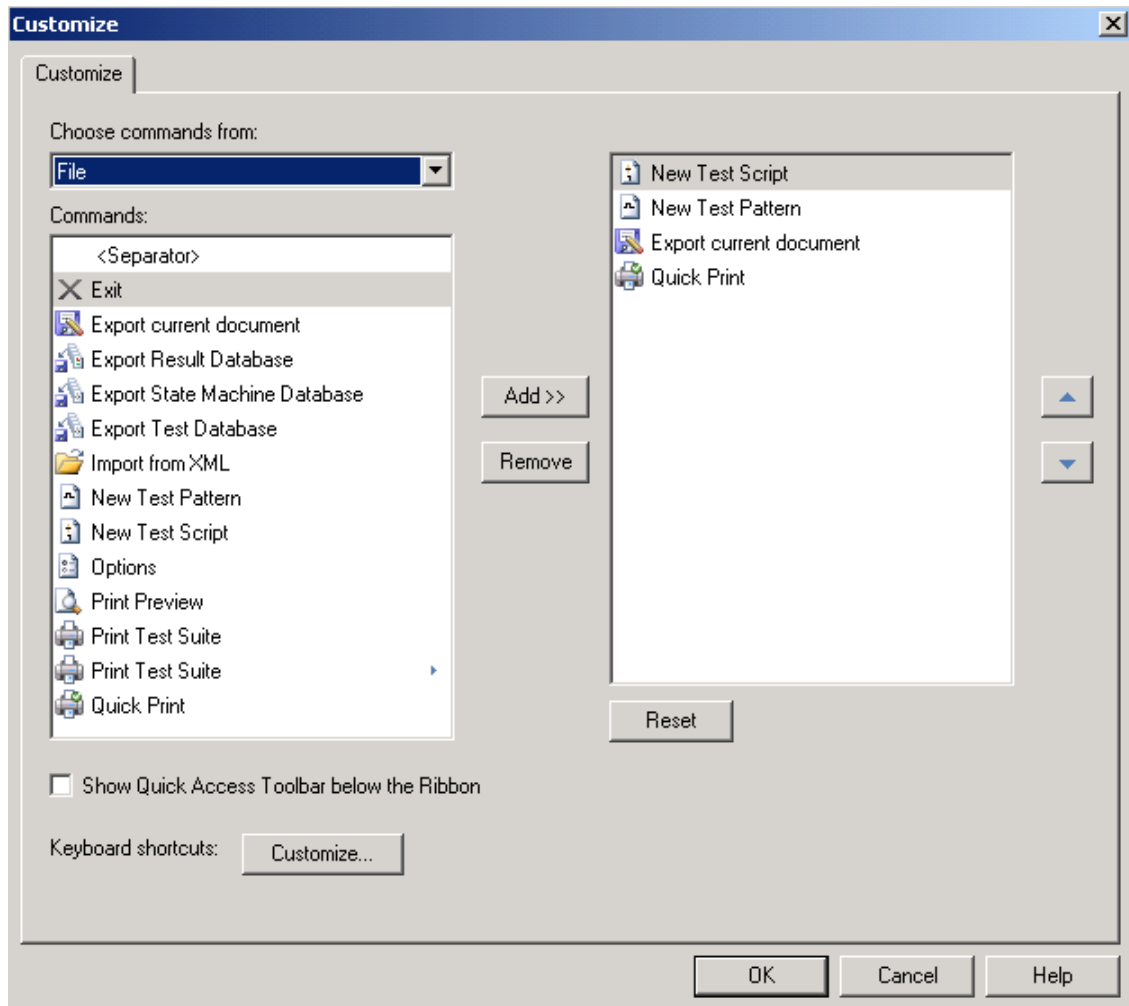


Figure 11.4: Customize Dialog

This window allows you to add additional commands to the Quick Access Toolbar, including **Exit**, **Export Result Database**, **Export Test Database**, **Import from XML**, **Options**, **Print Preview**, and **Print Test Suite**. To add commands, click on the command on the left side and then click on the **Add>>** button. To remove commands, click on the command on the right side and click the **Remove** button.

This window allows you to change the order in which icons are displayed in the Quick Access Toolbar. To change order of icons, click on the command on the right side of the window and use the up and down buttons on the far right side to move the command up (to the left on the toolbar) or down (to the right on the toolbar).

This window also allows you to reset the toolbar to the initial default settings by clicking the **Reset** button, and to customize keyboard shortcuts for commonly used commands.

To customize the keyboard shortcuts, click the **Customize** button to bring up the following window.

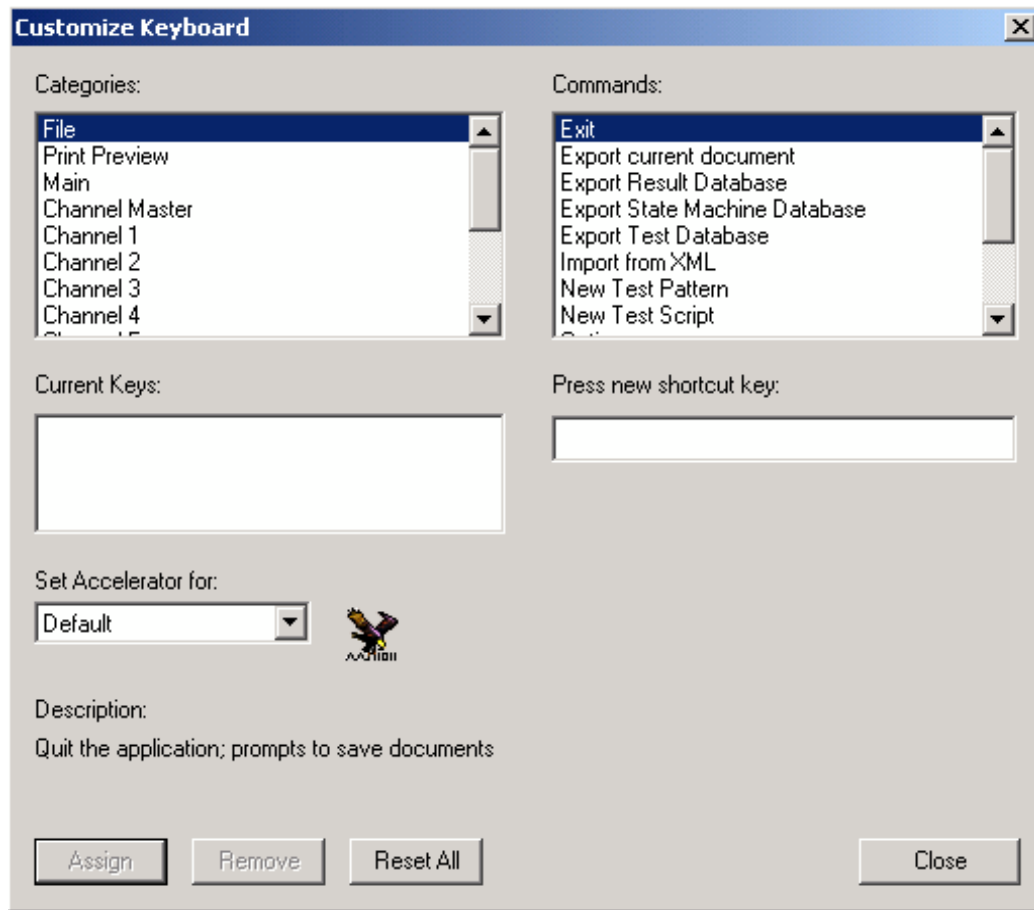


Figure 11.5: Customize Keyboard Dialog

This window lists each command category in the top left, and the commands which apply to that category in the top right. To create a custom keyboard shortcut for any command, first select the category, then the specific command, then click in the field called **Press new shortcut key:** and the next key (or key combination, such as Shift+Alt+E) that you press will be entered into this field. To assign this key (or key combination) to this command, click the **Assign** button. The new custom keyboard shortcut will appear in the list under **Current Keys** whenever this command category is selected.

Once you have assigned your keyboard command shortcut(s), click on the **Close** button, then on the **OK** button in the Customize window to save your changes.

## The System Control Ribbon

The System Control Ribbon is fixed in location across the top of the PeRT<sup>3</sup> main application window, but the ribbon will change in appearance based on the currently selected width of the main application window. The system attempts to provide as much information on tabs (and panels and field names within panels) as space permits.

The normal appearance (when the **Main** tab is selected) of the System Control Ribbon is shown below.

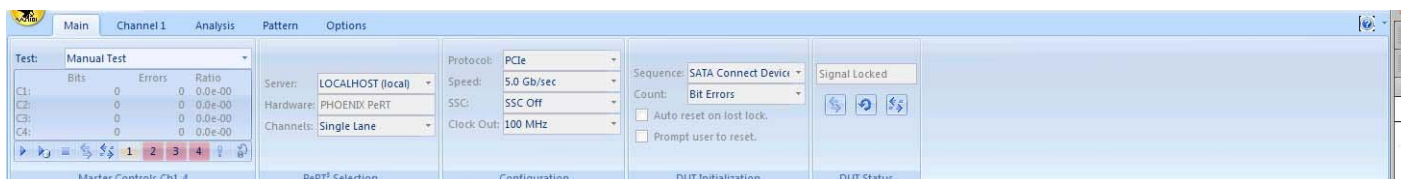


Figure 11.6: System Control Ribbon

There are multiple panels within the System Control Ribbon. When the Main tab is selected, these panels include **Master Controls**, **PeRT<sup>3</sup> Selection**, **Configuration**, **DUT Initialization** and **DUT Status**. The functions of these panels (and of the other tabs) are described in “[System Control Ribbon - Main Tab](#)” on page 47.

If the PeRT<sup>3</sup> main application window is not wide enough to display all five panels, the panels will adopt a condensed appearance, starting with the panel on the far right, in order to fit the available space. The System Control Ribbon will then display as shown below.

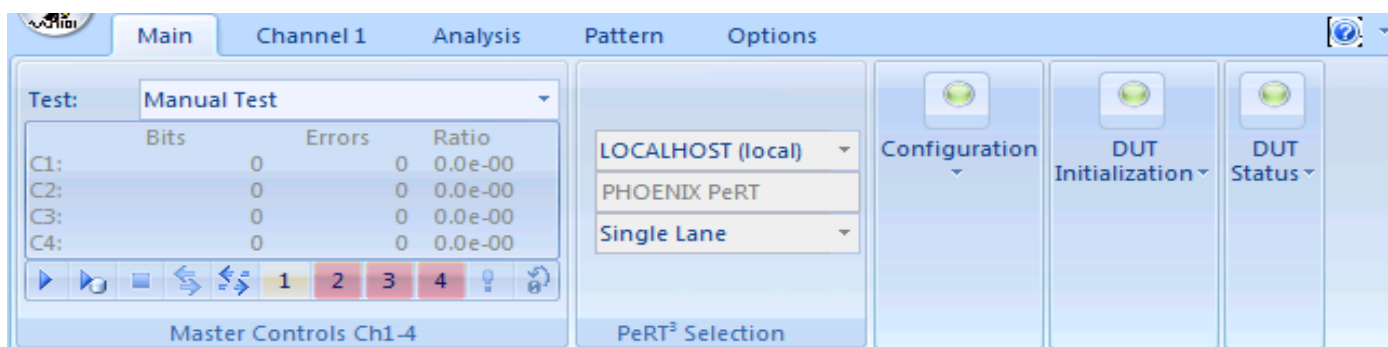


Figure 11.7: System Control Ribbon Condensed

To access any of the condensed panels, click on the green button that displays in the condensed and the full panel will display.

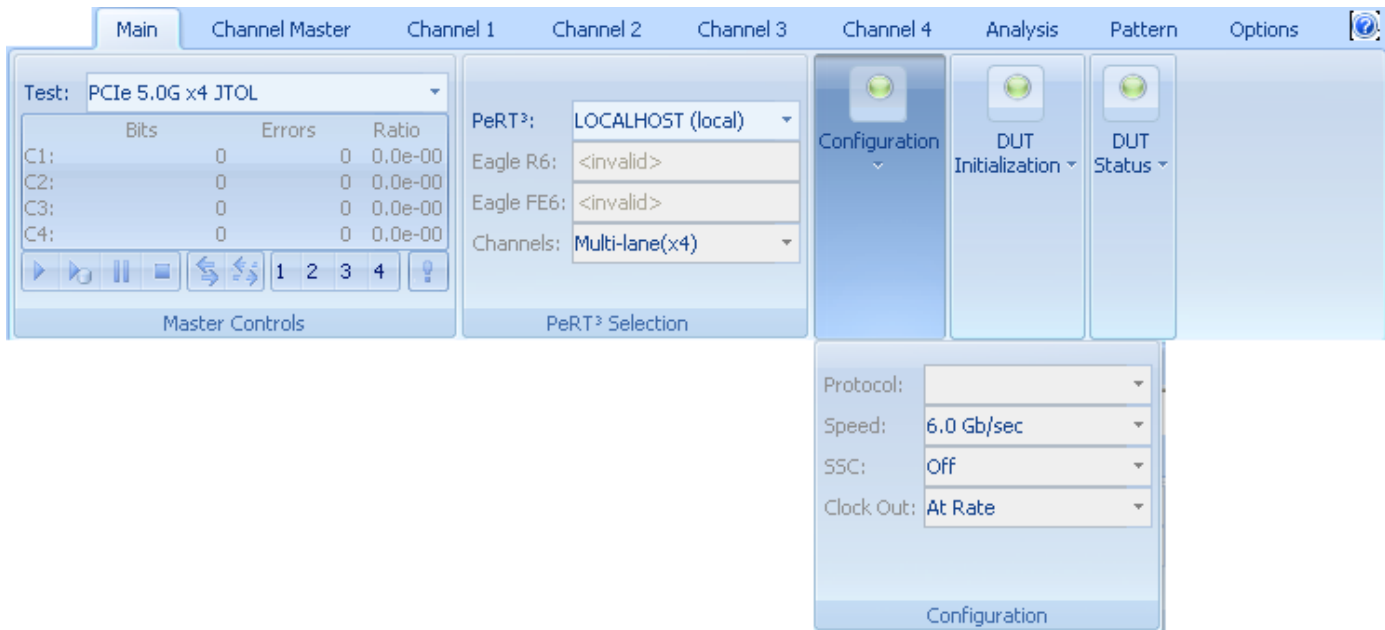


Figure 11.8: Accessing Condensed Panels

Commands and fields available within that panel can then be accessed, and the panel will re-condense if the green button is pressed again or if you click anywhere outside the area of the expanded panel.

## Customizing the Main Library and Output Windows

As noted in the overall description of the user interface, there are additional windows which appear in the PeRT<sup>3</sup> application. These include the **Main Library** and **Output** windows. The functions of these windows are described in detail in [“Main Library Window” on page 69](#) and [“Analysis and Reports” on page 93](#).

The **Main Library** window (see [Figure 11.9 on page 109](#)) displays by default "docked" to the lower left edge of the main application window, stretching from the bottom of the main application window to the bottom of the System Control Ribbon. This window can be dragged off to create a "floating window" and can then be repositioned anywhere on the user's screen.

The **Output** window provides a log file of events during a test, and appears as shown below. By default, the **Output** window is docked to the bottom of the main application window, but as with the **Main Library** window, the **Output** window can be dragged to a new location to create a floating window.

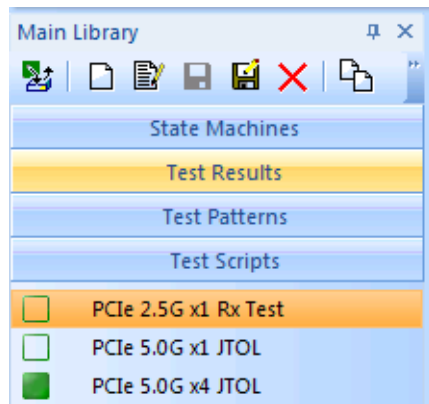


Figure 11.9: Main Library Window

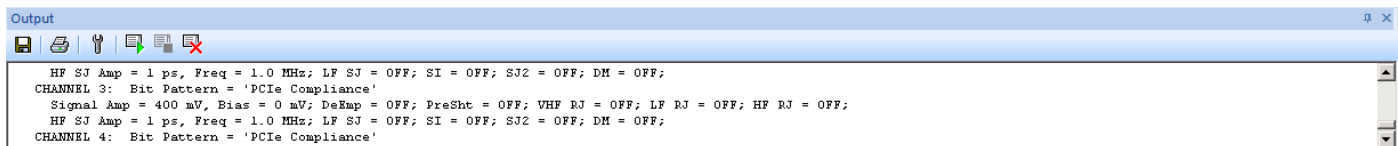


Figure 11.10: Output Window

One issue to be aware of is that if the user drags either the **Main Library** window or the **Output** window from its "docked" position, the **Test Scripts**, **Test Patterns** or **Test Results** window will expand to fill the new space, and may be partially obscured if any part of a "floating" window covers this space.

The **Main Library** and **Output** windows can be made to disappear by clicking the close button in the top right of the window, and to appear or disappear through the use of the **Options** tab in the System Control Ribbon. Clicking on the **Options** tab produces the following display.

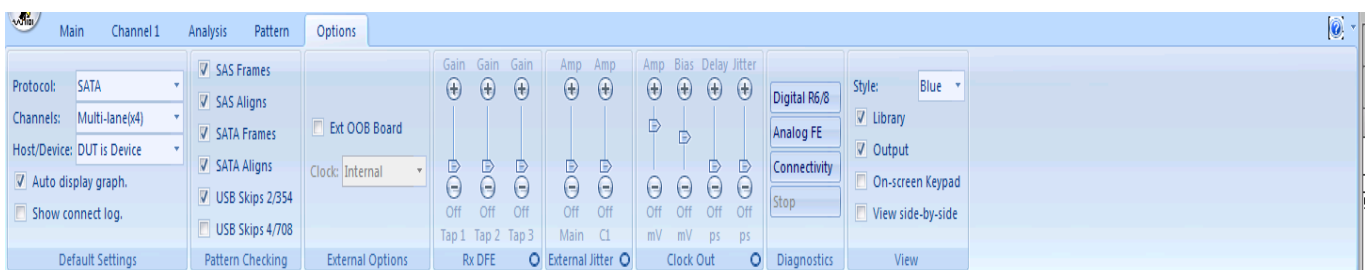


Figure 11.11: Options Tab Selection Display

The **View** panel within the **Options** tab provides the ability to show or to hide the **Main Library** or **Output** windows by checking the checkbox next to the name of the window.

## Selecting the Style Color Theme

Also in the **View** panel within the **Options** tab is the ability to select a color theme for the PeRT<sup>3</sup> application by clicking on the "Style" drop-down menu.

Clicking on this menu reveals the color theme choices shown below.


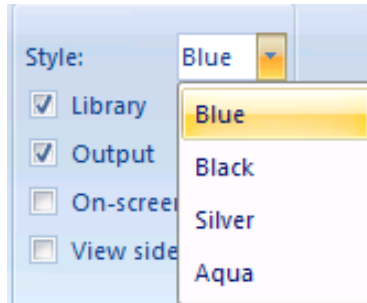


Figure 11.12: Color Theme Choices Dialog

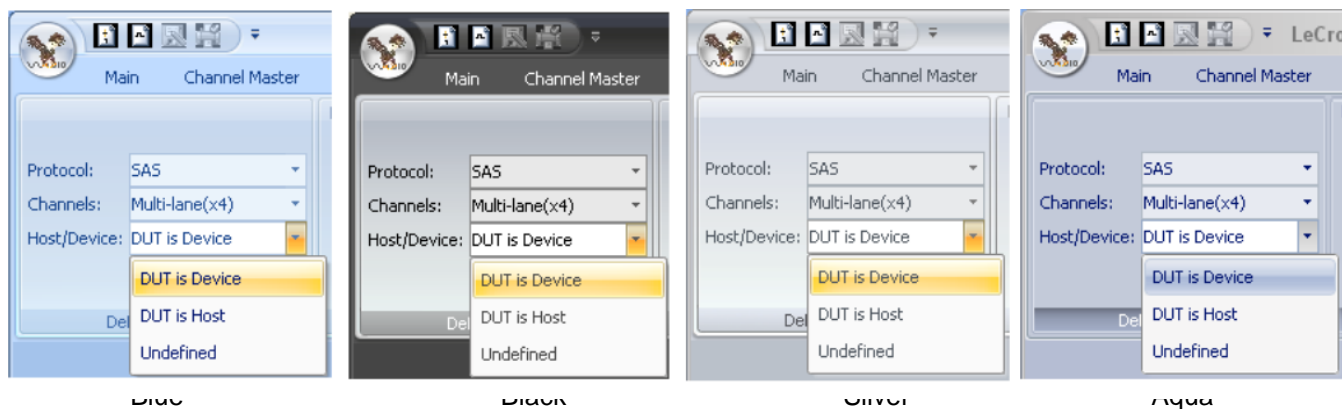The color themes shown are purely for personal preference and result in no change in function for any software selections or commands. The only difference is the appearance of the screens as displayed to the user. Shown below is the same displayed in the four different color themes.





## Certifications

---

This section certifies the instrument's Electromagnetic Compatibility (EMC), Safety and Environmental compliances.

### EMC Compliance

#### EC DECLARATION OF CONFORMITY - EMC

The instrument meets intent of EC Directive 2004/108/EC for Electromagnetic Compatibility. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

EN 61326-1:2006, EN 61326-2-1:2006 EMC requirements for electrical equipment for measurement, control, and laboratory use. 1

#### Electromagnetic Emissions:

CISPR 11:2003, Radiated and Conducted Emissions Group 1, Class A 2 3

EN 61000-3-2:2006 Harmonic Current Emissions, Class A

EN 61000-3-3/A2:2005 Voltage Fluctuations and Flickers, Pst = 1

#### Electromagnetic Immunity:

EN 61000-4-2:2001 Electrostatic Discharge, 4 kV contact, 8 kV air, 4 kV vertical/horizontal coupling planes 4

EN 61000-4-3:2006 RF Radiated Electromagnetic Field, 3 V/m, 80-1000 MHz; 3 V/m, 1400 MHz - 2 GHz; 1 V/m, 2 GHz - 2.7 GHz 4

EN 61000-4-4:2004 Electrical Fast Transient/Burst, 1 kV on power supply lines, 0.5 kV on I/O signal data and control lines 4

EN 61000-4-5:2006 Power line Surge, 1 kV AC Mains, L-N, L-PE, N-PE 4

EN 61000-4-6:2007 RF Conducted Electromagnetic Field, 3 Vrms, 0.15 MHz - 80 MHz 4

EN 61000-4-11:2004 Mains Dips and Interruptions, 0%/1 cycle, 70%/25 cycles, 0%/250 cycles 4 5

1. To ensure compliance with all applicable EMC standards, high quality shielded interface cables should be used.

2. Emissions which exceed the levels required by this standard may occur when the instrument is connected to a test object.
3. This product is intended for use in nonresidential areas only. Use in residential areas may cause electromagnetic interference.
4. Meets Performance Criteria "B" limits of the respective standard: during the disturbance, product undergoes a temporary degradation or loss of function or performance which is self-recoverable.
5. Performance Criteria "C" applied for 70%/25 cycle voltage dips and for 0%/250 cycle voltage interruption test levels per EN61000-4-11.

**European Contact:**

Teledyne LeCroy Europe GmbH  
Waldhofer Str 104  
D-69123 Heidelberg  
Germany  
Tel: (49) 6221 82700

**AUSTRALIA & NEW ZEALAND DECLARATION OF CONFORMITY - EMC**

Instrument complies with the EMC provision of the Radio Communications Act per the following standards, in accordance with requirements imposed by Australian Communication and Media Authority (ACMA):

CISPR 11:2003 Radiated and Conducted Emissions, Group 1, Class A, in accordance with EN61326-1:2006 and EN61326-2-1:2006.

**Australia / New Zealand Contacts:**

Vicom Australia Ltd.  
1064 Centre Road  
Oakleigh, South Victoria 3167  
Australia

Vicom New Zealand Ltd.  
60 Grafton Road  
Auckland  
New Zealand

**Safety Compliance****EC DECLARATION OF CONFORMITY - LOW VOLTAGE**

The instrument meets intent of EC Directive 2006/95/EC for Product Safety. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

EN 61010-1:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements

EN 61010-2:030:2010 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 2-030: Particular requirements for testing and measuring circuits

The design of the instrument has been verified to conform to the following limits put forth by these standards:

- ❑ Overvoltage Category II: this refers to equipment intended to be supplied from the building wiring with a nominal supply voltage up to 300V.
- ❑ Measurement Category O: this refers to instrument measurement terminals that are not intended to be directly connected to the MAINS supply.
- ❑ Pollution Degree 2: this refers to an operating environment where normally only dry, non-conductive pollution occurs. Occasionally a temporary conductivity that is caused by condensation must be expected. This location is a typical office/home environment.
- ❑ Protection Class I: this refers to grounded equipment, in which protection against electric shock is achieved by Basic Insulation and a connection to the protective ground conductor in the building wiring.

## U.S. NATIONALLY RECOGNIZED AGENCY CERTIFICATION

The instrument has been certified by Underwriters Laboratories (UL) to conform to the following safety standard and bears UL Listing Mark:

UL 61010-1 Third Edition - Safety standard for electrical measuring and test equipment.

## CANADIAN CERTIFICATION

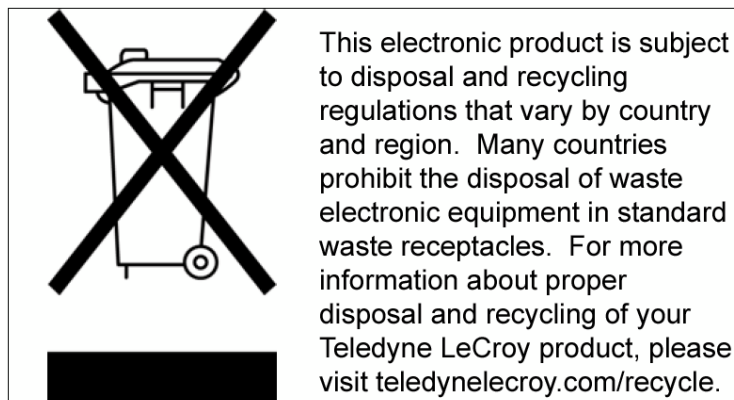
The instrument has been certified by Underwriters Laboratories (UL) to conform to the following safety standard and bears cUL Listing Mark:

CAN/CSA-C22.2 No. 61010-1-12. Safety requirements for electrical equipment for measurement, control and laboratory use.

## Environmental Compliance

### END-OF-LIFE HANDLING

The instrument is marked with this symbol to indicate that it complies with the applicable European Union requirements to Directives 2002/96/EC and 2006/66/EC on Waste Electrical and Electronic Equipment (WEEE) and Batteries.



## RESTRICTION OF HAZARDOUS SUBSTANCES (ROHS)

This instrument has been classified as Industrial Monitoring and Control Equipment, and is outside the scope of the 2011/65/EU RoHS Directive (Exempt until July 2017, per Article 4).

The following tables are supplied in compliance with China's Restriction of Hazardous Substances (China RoHS) requirements:

部件名称	有毒有害物质和元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr <sup>6+</sup> )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCBAs	X	O	X	X	X	X
机械硬件	O	O	X	O	O	O
金属片	O	O	X	O	O	O
塑料部件	O	O	O	O	X	X
电源	X	X	X	O	X	X
电源线	X	O	X	O	X	X
保护外壳(如有)	O	O	O	O	X	X
电缆组件(如有)	X	O	X	O	X	X
风扇(如有)	X	O	X	O	X	X
交流滤波器和熔丝组件(如有)	X	O	X	O	O	O
外部电源(如有)	X	X	X	O	X	X
探头(如有)	X	O	X	O	X	X
O: 表明该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求之下。						
X: 表明该有毒有害物质至少在该部件的某一均质材料中的含量超过 SJ/T11363-2006 标准规定的限量要求。						

EFUP (对环境友好的使用时间) 使用条件:

温度: 5摄氏度到40摄氏度

湿度: 5% - 95%最大相对湿度 (无冷凝)

高度: 最高2000米

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr <sup>6+</sup> )	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCBAs	X	O	X	X	X	X
Mechanical Hardware	O	O	X	O	O	O
Sheet Metal	O	O	X	O	O	O
Plastic Parts	O	O	O	O	X	X
Power Supply	X	X	X	O	X	X
Power Cord	X	O	X	O	X	X
Protective Case (if present)	O	O	O	O	X	X
Cable Assemblies (if present)	X	O	X	O	X	X
Fans (if present)	X	O	X	O	X	X
AC Filter/Fuse Assy (if present)	X	O	X	O	O	O
Ext Power Supply (if present)	X	X	X	O	X	X
Probes (if present)	X	O	X	O	X	X
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement specified in SJ/T11363-2006.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement specified in SJ/T11363-2006.						

EFUP (Environmental Friendly Use Period) Use Conditions:

Temperature 5C to 40C

Humidity 5% to 95% max RH (non-condensing)

Altitude Up to 2000 meters

## ISO Certification

Manufactured under an ISO 9000 Registered Quality Management System. Visit [teledynelecroy.com](http://teledynelecroy.com) to view the certificate.

# Appendix B

## Contact Teledyne LeCroy

---

### How to Contact Teledyne LeCroy

Teledyne LeCroy Service Centers	
<b>United States and Canada - World Wide Corporate Office</b> Teledyne LeCroy Corporation 700 Chestnut Ridge Road Chestnut Ridge, NY, 10977-6499, USA Ph: 800-553-2769 / 845-425-2000 FAX: 845-578-5985 teledynelecroy.com <b>Support:</b> contact.corp@teledynelecroy.com <b>Sales:</b> customersupport@teledynelecroy.com	<b>United States - Protocol Solutions Group</b> Teledyne LeCroy Corporation 3385 Scott Boulevard Santa Clara, CA, 95054, USA FAX: 408-727-0800 teledynelecroy.com <b>Sales and Service:</b> Ph: 800-909-7211 / 408-727-6600 contact.corp@teledynelecroy.com <b>Support:</b> Ph: 800-909-7112 / 408-653-1260 psgsupport@teledynelecroy.com
<b>European Headquarters</b> Teledyne LeCroy SA 4, Rue Moïse Marcinhes Case postale 341 1217 Meyrin 1 Geneva, Switzerland Ph: + 41 22 719 2228 / 2323 /2277 FAX:+41 22 719 2233 contact.sa@teledynelecroy.com applications.indirect@teledynelecroy.com teledynelecroy.com/europe <b>Protocol Analyzers:</b> Ph: +44 12 765 03971	<b>Singapore, Oscilloscopes</b> Teledyne LeCroy Singapore Pte Ltd. Blk 750C Chai Chee Road #02-08 Technopark @ Chai Chee Singapore 469003 Ph: ++ 65 64424880 FAX: ++ 65 64427811 <b>Singapore, Protocol Analyzers</b> Genetron Singapore Pte Ltd. 37 Kallang Pudding Road, #08-08 Tong Lee Building Block B Singapore 349315 Ph: ++ 65 9760-4682

Teledyne LeCroy Service Centers	
<b>China</b> Teledyne LeCroy Corporation Beijing Rm. 2001 - Office; Rm. 2002 - Service Center Unit A, Horizon Plaza No. 6, Zhichun Road, Haidian District Beijing 100088, China Ph: ++86 10 8280 0318 / 0319 / 0320 FAX: ++86 10 8280 0316 <b>Service:</b> Rm. 2002 Ph: ++86 10 8280 0245	<b>Korea</b> Teledyne LeCroy Korea 10th fl. Ildong Bldg. 968-5 Daechi-dong, Gangnam-gu Seoul 135-280, Korea Ph: ++ 82 2 3452 0400 FAX: ++ 82 2 3452 0490
<b>Taiwan</b> LeColn Technology Co Ltd. Far East Century Park, C3, 9F No. 2, Chien-8th Road, Chung-Ho Dist., New Taipei City, Taiwan Ph: ++ 886 2 8226 1366 FAX: ++ 886 2 8226 1368	<b>Japan</b> Teledyne LeCroy Japan Hobunsha Funchu Bldg, 3F 3-11-5, Midori-cho, Fuchu-Shi Tokyo 183-0006, Japan Ph: ++ 81 4 2402 9400 FAX: ++ 81 4 2402 9586 <a href="http://teledynelecroy.com/japan">teledynelecroy.com/japan</a>

# Index

## **Symbols**

.NET 3.5 installation 17  
%Confidence 61

## **A**

AC Power 17  
Adding data to patterns 91  
Adjust RD- 87  
Adjust RD+ 87  
Allowable Patterns 71  
Analysis tab 62, 93, 96  
Annual calibration 13  
Apply 50  
Arbitrary Date 71  
Auto display graph 63, 93  
Auto reset on lost lock 79  
Automatic range 54  
Automation panel 79

## **B**

Back Panel Connections 16  
Basic Data panel 77  
BER threshold 100  
Building a Test Script 78

## **C**

Cancel 50  
CDB (H) field 91  
Channel Master tab 52, 80  
Channel Tab 52  
Channel tab 52  
Channels 63  
Channels drop-down menu 22  
Clock Out 49, 50, 66, 78  
Clock Out panel 66  
color 110  
Color theme 67, 110  
Configuration panel 47, 49, 71, 107  
Connect 47, 52

Connecting remotely 19  
Copy 87  
Count 51  
CRC errors 12  
CRC value 12, 90, 92  
Create New Item 83  
Creating a new test pattern 83  
Creator 77  
CSV file 98  
Custom protocol 49  
Custom Steps 55  
Customize keyboard 106  
Cut 87

## **D**

Data 101  
Data outside of a frame 91  
Data Set 100  
Data Set panel 95, 99, 100, 101  
Decode As 83  
Decode Buttons 70, 104  
Default Settings 83  
Default Settings panel 63, 93  
Delete 41  
Delete Data 87  
Delete Frame 87  
Device Description panel 77  
Diagnostics panel 66  
Disconnect 47, 52  
Display Mode panel 83, 85  
DUT initialization 49  
DUT Initialization panel 47, 83, 107  
DUT is Device 77  
DUT is Host 77  
DUT Status panel 47, 52, 107

**E**

Elapsed Time 61  
Enable Range 54, 55  
Errors vs. Time 99  
Exact control of test ranges 54  
Exit 45, 105  
Export 41, 98  
Export current database 44  
Export Current Document 98, 103, 104  
Export current document 44, 98  
Export Result Database 105  
Export result database 44  
Export Test Database 105  
Exporting files (scripts, patterns, test reports) 44  
External Jitter panel 66  
External OOB Board 64, 65  
External Options panel 64  
Eye diagram 34  
Eye Diagram panel 80  
Eye Preview panel 62

**F**

File Menu 42  
Filter 41  
Filter button 71  
Find BER Curve 61  
Floating window 73, 108  
Frame Level 79

**G**

Generator Only 49  
Graph Type panel 94, 96, 97, 98, 101  
Graphs and reports 93

**H**

Hardware configurations 12  
Hardware upgrades 13  
Hide Buttons 70, 104  
High Frequency Random Jitter 59  
High Frequency Sinusoidal Jitter panel 59  
host machine 16, 39  
host machine minimum requirements 16  
Host/Device 63

**I**

Import Data 91  
Import from XML 104, 105  
Import/Export panel 88, 91  
Importing new files 43  
Initialization command sequence 79  
Initialization panel 79

Initialize 50  
Insert Above 81  
Insert Data 87, 91  
Insert Frame 87, 89  
Introduction of Distortion 34, 53  
Introduction of Stress 34

**J**

Jitter eye diagram 62  
Jitter In connector 66

**L**

Log View 97  
LoopBack 79  
Loopback 52, 79  
Low Frequency Random Jitter 59  
Low Frequency Sinusoidal Jitter panel 59  
Low to High 54

**M**

Magnification 96  
Main 66  
Main application window 20, 26, 39, 45, 47, 73, 74, 75, 76, 83, 103, 107  
Main Library Toolbar 70  
Main Library window 19, 25, 40, 41, 67, 69, 70, 73, 74, 77, 83, 85, 108  
Main tab 21, 47, 71, 83, 107  
Maintenance agreements 13  
Manual Test 47, 53  
Master Controls pane 94  
Master Controls panel 24, 47, 53, 60, 94, 107  
Master Controls tab 60  
Master panel 85  
Max Bit Count 60  
Max GBits 60  
Modifying a Test 26  
Multi Single Parameter 101

**N**

New Test Pattern 43, 103, 104  
New Test Script 43, 103, 104  
Notifications panel 88

**O**

On-screen Keypad 56  
On-screen LEDs 47  
Options 104, 105  
Options tab 56, 63, 83, 93, 109, 110  
Other Channel 62  
Output window 25, 40, 66, 67, 73, 74, 108



**P**

Pass/Fail BER 61  
PASS/FAIL Confidence 61  
Paste 87  
Pattern 60, 63  
Pattern Checking panel 63  
Pattern Edit panel 87  
Pattern Editor 50, 60, 83  
Pattern Editor window 83  
Pattern tab 63, 83, 84, 85  
Pattern/Termination pane 60  
Pattern/Termination panel 60  
Pause 47, 53  
PeRT3 client 19  
PeRT3 Eagle front panel 23  
PeRT3 panel 47  
PeRT3 Selection panel 22, 48, 107  
PeRT3 server 19  
PeRT3 System Software 17  
Predefined test patterns 83  
Print command 45  
Print Preview 45, 104, 105  
Print Test Suite 105  
Protocol 63  
Protocol Specific filter 71  
Protocol-enabled 12  
Protocol-specific errors 12

**Q**

Quick Access Toolbar 103, 104  
Quick Print 45, 103, 104

**R**

Receiver Test 77  
Receiver Test block 80  
Redo 87  
Ref Clk in 65  
Reference Clock 16, 17  
Reference Clock In 65  
Region Select 96  
Rename 41  
Rename the Selected Item 85  
Reports 93  
Reset 52  
Reset on each test case 79  
Reset/Initialize 78, 80  
Run Forever 60, 62  
Running a Test 24

**S**

Save 41  
Scatter Chart 101  
Script Data block 76  
Script Data tab 76  
Script Name 77  
Scroll Graph 96  
Sequence 50, 79  
Setup panel 78  
Signal amplitude 57  
Signal bias 57  
Signal Generation 53  
Signal generator 49  
Signal impairment 80  
Signal impairment controls 53  
Signal panel 57  
Signal Parameters panel 95  
Single Parameter 100  
SMA connectors 23  
Small screens 74  
Software test suites 12  
Spread spectrum clocking 49, 50, 78  
Spreadsheet View 98  
Standard Edit panel 87  
Start (don't record) 24, 47, 48, 53  
Start (record results) 24, 47, 48, 53  
Starting a new test script 75  
Stop 60  
Style 110  
Suspend 53, 60  
System components 15  
System Control Ribbon 40, 47, 52, 73, 83, 93, 107, 108  
System control ribbon 73

**T**

Terminate after 60  
Test Case 78, 80, 95  
Test Case field 95  
Test Description panel 77  
Test Development 73  
Test Development section 40  
Test Patterns 40, 69, 70  
Test Patterns tab 83  
Test Results 40, 69  
Test Results library 25  
Test Script Data Panel 80  
Test Script window 73  
Test Scripts 40, 69, 70, 73, 80  
Test Scripts tab 25, 26, 75, 77  
Test Type 77  
Threshold 99, 100, 101

Time or Max Errors 61

Time or PASS/FAIL 61

Tool Tips 103

Tools panel 96

## **U**

Undo 87

Update with the valid value 90

USB drivers 18

User-defined patterns 49

## **V**

Vendor Specific Pattern 50

Vendor-specific command 83

Victim/aggressor testing 62

View Info panel 88

View panel 56, 67, 109, 110

View/Edit 41

## **W**

Working on a smaller screen 74

## **Z**

Zoom In 96

Zoom Out 96